

STANDARD HORIZON

Nothing takes to water like Standard Horizon

GPS Chart Plotters / Fish Finder

CP390i



**BUILT-IN
CHARTS**

COASTAL NAVIGATION

USA (including Alaska, Hawaii and Great Lakes) Canada, Mexico, Bahamas, Caribbean, Cuba, Puerto Rico, and Central America

CPF390i



C-MAP
by JEPPESEN
Compatible with MAX Charts

Owner's Manual

STANDARD HORIZON

Nothing takes to water like Standard Horizon

CP390i - GPS Chart Plotters

CPF390i - GPS Chart Plotters/Fish Finder

Owner's Manual



CPF390i



CP390i

WARNING!!!

Electronic charts displayed by the GPS Chart Plotter are believed to be accurate and reliable, but are not intended to be a substitute for the official charts, which should remain your main reference for all matters related to the execution of safe navigation.

For this reason you should always keep the official published and approved nautical charts on board.



FCC Compliance Statement

This device complies with Part 15 of the FCC limits for Class A digital devices. This equipment generates, uses and can radiate radio frequency energy and, if not installed or used in accordance with the instructions may cause harmful interference with radio communications.

There is no guarantee that interference will not occur in a particular instance. If this equipment does cause harmful interference to other equipment, try to correct the problem by relocating the equipment.

Consult an authorized STANDARD HORIZON dealer or other qualified service technician if the problem cannot be corrected. Operation is subject to the following conditions: (1) This device cannot cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION

- The GPS Chart Plotter is designed for maritime use. To avoid water intrusion, ensure the C-MAP BY JEPPESEN C-CARD door is completely closed.
 - Extensive exposure to heat may result in damage to the GPS Chart Plotter.
 - The GPS Chart Plotter contains dangerous high-voltage circuits which only experienced technicians can handle.
 - STANDARD HORIZON will not be liable for errors contained herein, or for incidental or consequential damages in connection with the performance or use of this material.
 - Because we frequently update our software and applications, the pictures shown through this Owner's Manual may be slightly different from what you see.
-

CLEANING PROCEDURE FOR THE GPS CHART PLOTTER SCREEN

Cleaning of the chart plotter screen is a very important operation and must be done carefully. Since the surface is covered by a antireflective coating, the procedure for cleaning all the surfaces can be performed using the following procedure: Use a clean, soft, lint-free cloth to clean the glass. We recommend using a micro-fiber cloth. Spray a small amount of ammonia-free cleaner (isopropyl alcohol) onto the cloth. Spraying on the cloth will prevent overspray. Fold the cloth or lens cloth into a triangular shape, moisten the tip and use the index finger behind a corner to move the cloth across the surface in overlapping side to side strokes. If the cloth is too wet, a noticeable wet film will be left in its path and you will need to repeat the process. If too dry, the cloth won't glide easily, and may damage the surface.

TABLE OF CONTENTS

1. INTRODUCTION	11
1.0 GENERAL INFORMATION	11
1.1 PACKING LIST	12
1.1.0 Packing List	12
1.2 OPTIONAL DOME OR OPEN ARRAY RADAR ANTENNAS	12
1.3 OPTIONAL ACCESSORIES	13
2. INSTALLATION	14
2.0 MOUNTING THE GPS CHART PLOTTER	14
2.1 BRACKET MOUNTING	14
2.2 FLUSH MOUNTING	15
2.3 MOUNTING THE OPTIONAL EXTERNAL GPS ANTENNA	16
2.3.0 Flush mounting the antenna	16
2.4 CONNECTIONS	17
2.4.0 CP390i Connection Table	18
2.4.1 CP390i Connections	18
2.4.2 CPF390i Connection Table	20
2.4.3 CPF390i Connections	20
2.5 BATTERY CONNECTIONS	21
2.6 NMEA CONNECTIONS	21
2.7 GPS POSITION ON A VHF RADIO	22
2.8 CP390i: OPTIONAL BLACK BOX FISH FINDER	22
2.9 RADAR ANTENNA (USA ONLY)	22
2.10 PERSONAL COMPUTER CONNECTIONS	23
2.11 NMEA DATA PAGE	23
2.12 VIDEO INPUT	24
2.12.0 Video Camera Input	24
2.12.1 VCR or DVD Input	24
2.13 DEMO MODE (For DEALER USE)	26
3. CONTROLS AND INDICATORS	27
3.0 CONTROLS AND CONNECTIONS	27
3.0.0 The Soft Keys	28
3.1 GETTING STARTED	28
3.1.0 Power On, Off and ShuttlePoint Knob operation	28
3.1.1 Cursor Vs. Home Mode	30
3.1.2 Cursor and Menu selection speed	30
3.1.3 Changing the Ship Icons	31
3.1.4 Changing the Backlight and Contrast	31
3.1.5 Selecting North Up or Course Up	32
3.2 AUTOMATIC TIME	32
3.3 SELECTING LORAN TD OR OTHER COORDINATE SYSTEM	34
3.4 CHANGING THE CHART COLOR	34
3.5 SELECTING LANGUAGE	35
3.6 SELECTING PAGES USING SOFT KEYS	36
3.7 CUSTOMIZING THE SOFT KEYS	36
3.8 SETTINGS IN GENERAL SETUP MENU	37
3.9 ABOUT PAGE	39

4. FIND SERVICES	40
4.0 USING FIND SERVICES & MORE FUNCTIONS	40
4.0.0 Port Services	40
4.0.1 Port	41
4.0.2 Tide Stations	41
4.0.3 Wrecks	42
4.0.4 Obstructions	43
4.0.5 Lakes Information	43
4.0.6 Lakes By Name	45
4.0.7 Points Of Interest	46
4.0.8 User Points	46
4.0.9 Coordinates	47
4.0.10 Information	47
5. MAX CARTOGRAPHY OVERVIEW	49
5.0 BUILT-IN CHARTS	49
5.0.0 Coverage areas and details	49
5.0.1 Updating Built-In Charts	49
5.1 INSERTING THE OPTIONAL MAX C-CARD	50
6. MAP FUNCTIONS	52
6.0 MAX FUNCTIONS MENU	52
6.0.0 Zoom Type	52
6.0.1 Icon Size	53
6.0.2 Place Name Size	53
6.0.3 Perspective View	54
6.0.4 Dynamic Nav-Aids	55
6.0.5 Safety Status Bar (DSI - Data Safety Indicator)	55
6.0.6 Satellite Imagery	56
6.0.7 Currents Prediction	57
6.0.8 Chart Language	58
6.0.9 Pictures and Diagrams	58
How to show the Pictures or Diagrams of a Object	59
6.0.10 Enhanced Port Info	60
7. CREATING MARKS	61
7.0 CREATING A NEW MARK USING THE CHART PAGE	61
7.1 EDITING A MARK	61
7.1.0 Deleting a Mark or Waypoint	62
7.1.1 Moving a Mark or Waypoint	62
7.2 MARKS/WAYPOINTS LIST	63
7.3 CREATING A NEW MARK WITH THE USER POINTS LIST	64
7.4 GOTO CURSOR, ROUTE AND MARK	64
8. MAN OVER BOARD (MOB) FUNCTION	67
8.0 PLACING A MOB POINT	67
8.1 DELETING A MOB POINT	67
9. ROUTES	68
9.0 CREATING A ROUTE USING WAYPOINTS	68
9.1 CHANGING THE NAME OF A ROUTE	69
9.2 CREATING AN OLYMPIC ROUTE	69
9.3 MAKING ADDITIONAL ROUTES	70
9.4 CREATING A ROUTE USING MARKS ON THE CHART PAGE	70
9.5 INSERTING A WAYPOINT INTO A ROUTE	71

9.6	GOTO A ROUTE	71
9.6.0	Using [GOTO] to select Route	71
9.6.1	Using the ShuttlePoint knob	72
9.7	DELETING A ROUTE	72
9.8	OTHER SETTINGS IN ROUTE MENU	73
9.8.0	Route Check	73
10.	TRACKS	75
10.0	TRACKING	75
10.0.0	Saving and starting a new Track	76
10.0.1	Deleting a Track	76
10.0.2	Other settings	76
10.1	TRIP LOG	77
10.1.0	Using the Trip Log	77
10.1.1	Setup / Reset	77
11.	USER C-CARD	78
11.0	USER C-CARD MENU	78
11.0.0	Formatting the optional User C-CARD	78
11.0.1	Transferring files to the optional User C-CARD	78
11.0.2	Loading a file from the optional User C-CARD	79
11.0.3	Deleting a file from the optional User C-CARD	79
11.0.4	Refreshing the optional User C-CARD	79
12.	PAGES	80
12.0	CHART PAGE	81
12.0.0	Focus Soft Key on Dual Chart page	82
12.0.1	Single Chart page	83
12.0.2	Window Selections	83
12.0.3	Customizing the Data Windows	84
12.0.4	Additional Functions on Chart page	85
12.0.5	Turning Off Information on Icon Points	85
12.0.6	Display Mode	86
12.0.7	Marine Settings	87
12.0.8	Depth Settings	87
12.0.9	Land Settings	87
12.0.10	Chart Settings	88
12.0.11	Underwater Objects Settings	89
12.1	CUSTOMIZING CHART SETTINGS	89
12.2	NAVIGATION PAGE	90
12.3	HIGHWAY PAGE	91
12.4	CELESTIAL PAGE	91
12.5	GPS STATUS PAGE	92
12.5.0	WAAS/EGNOS Setting	92
12.5.1	Setup Menu	93
12.6	NMEA DISPLAY PAGE	93
12.7	NMEA DATA PAGE	94
12.8	NMEA TREND PAGES	95
12.9	VHF DIGITAL SELECTIVE CALLING	96
12.9.0	Interfacing	96
12.9.1	Distress Call	96
12.9.2	Position Request	97
13.	ADVANCED SETTINGS	98
13.0	INPUT/OUTPUT (NMEA, AIS, RADAR)	98

13.0.0	Input	98
13.0.1	Ouput	98
13.1	NAVIGATE	99
13.1.0	Loran TD	100
13.2	COMPASS	100
13.3	ALARMS	101
13.4	SIMULATION	101
13.4.0	Navigating a Route in Simulation Mode	102
13.5	DSC POLLING	102
14.	AIS	103
14.0	SYSTEM DEFINITIONS	103
14.1	MENU	104
14.2	AIS SETUP	104
14.3	QUICK INFO ON AIS TARGET	104
14.4	LIST	105
14.5	AIS TARGET COLORS	105
15.	C-WEATHER SERVICE	107
15.0	C-WEATHER SERVICE MENU	107
15.0.0	Download	107
15.0.1	Copy From User C-CARD	108
15.0.2	Weather Forecast	108
15.0.3	Real Time View	108
15.0.4	Type of Data	108
16.	MOBILARM	109
16.0	MOBILARM-GPS CHART PLOTTER CONNECTION	109
16.1	SOFTWARE SETUP	110
16.2	MOBILARM STATUS	110
16.3	MOBILARM PTX	111
16.3.0	MOBILARM MOB alert is received	111
16.4	PLACING CURSOR ON THE PTX ICON	112
16.4.0	Delete PTX	112
16.4.1	Goto PTX	112
16.4.2	The MOBILARM Alarm Status List	113
17.	FISH FINDER for CPF390i	115
17.0	ENABLE/DISABLE	115
17.1	UNDERSTANDING THE FISH FINDER PAGE	116
17.1.1	Understanding the Fish Finder display	117
17.2	DISPLAYING THE FISH FINDER PAGE	118
17.2.0	Auto Full page	119
17.2.1	200kHz Full, 50kHz Full and 50&200kHz Display pages	119
17.2.2	200kHz and 50kHz Zoom pages	119
17.2.3	200kHz and 50kHz Fish/Chart pages	120
17.2.4	Radar pages	121
17.2.4.0	Fish/Radar/Chart page	121
17.2.4.1	Radar Combo page	121
17.2.4.2	Focus Soft Key	121
17.3	SOFT KEY OPERATION	122
17.4	SETUP MENU	122
17.5	FISH FINDER COLOR	123
17.6	PRESETS	123
17.7	FREQUENCY	124

17.8	GAIN MODE	124
17.8.0	Auto Mode	125
17.8.1	Manual Mode	125
17.9	RANGE MENU	125
17.9.0	Range Mode	125
17.9.1	Depth	125
17.9.2	Shift	125
17.10	INTERFERENCE REJECTION	126
17.11	SENSITIVITY MENU	126
17.11.0	Gain	126
17.11.1	STC (Sensitivity Time Control)	127
17.11.2	Surface Noise Filter	128
17.12	DISPLAY SETUP	128
17.12.0	Color Settings	129
17.12.1	Scrolling Speed	129
17.12.2	White Line	129
17.12.3	Fish Symbols	129
17.12.4	A-Scope	129
17.12.5	Water Temperature	129
17.13	TRANSDUCER SETUP	130
17.13.0	Keel Offset	130
17.13.1	Calibrate Water Speed	130
17.13.2	Calibrate Water Temp	130
17.13.3	Set Defaults	130
17.14	ALARMS	130
17.14.0	Shallow Water	131
17.14.1	Deep Water	131
17.14.2	Fish	131
17.14.3	Temperature Upper	131
17.14.4	Temperature Lower	131
17.14.5	Temperature Rate	131
17.15	SAVE SETTINGS TO USER C-CARD	131
17.16	LOAD SETTINGS FROM USER C-CARD	132
17.17	RESTORE CURRENT PRESET DEFAULTS	132
18.	TROUBLESHOOTING	133
19.	TECHNICAL TESTS	134
19.0	SYSTEM TEST	134
19.0.0	RAM Menu (reset)	134
19.0.1	DIM Menu	134
19.0.2	Cartridges	135
19.0.3	Serial Ports	135
20.	SPECIFICATIONS	136
20.0	CP390i/CPF390i SPECIFICATIONS	136
20.1	CPF390i FISH FINDER SPECIFICATIONS	136
20.2	CP390i/CPF390i DIMENSIONS	137
20.3	OPTIONAL FF525 FISH FINDER SPECIFICATIONS (use with CP390i)	137
20.4	OPTIONAL WAAS GPS RECEIVER SPECIFICATIONS	138
21.	APPENDIX: TERMS	139
	ANALYTICAL INDEX	141

1. INTRODUCTION

Congratulations on your purchase of the STANDARD HORIZON GPS Chart Plotter. Whether this is your first STANDARD HORIZON product or not, we are committed to ensuring your enjoyment and satisfaction with this unit. Our Technical support personnel stand behind every product we sell. Customers should contact STANDARD HORIZON on 714-827-7600 or email to marinetech@yaesu.com.

1.0 GENERAL INFORMATION

The CP390i (with internal GPS antenna) and CPF390i (with internal GPS antenna and Fish Finder) are precision-crafted high-performance receivers for the Global Positioning System (WAAS GPS) constellation of satellites that provide precise location data with a host of navigation features and are ideal for nautical use and sealed against water ingress. The CP390i and CPF390i are housed in rugged, impact-resistant cases with outstanding ergonomic design for effortless operation. The CP390i and CPF390i are IP56 water resistant.

The advanced features of the GPS Chart Plotter/Fish Finder include:

- Built-In Charts for coastal navigation of USA including Alaska, Hawaii and Great Lakes, Canada, Bahamas, Caribbean, Cuba, Puerto Rico, and Central America
- 7" 800x480 high resolution sunlight-readable display
- Internal 50 channels WAAS GPS antenna
- Optional connection for external 50 channels WAAS GPS antenna with 30Ft of cable
- Video Input with "picture-in-picture" display
- Dual chart window with independent zoom levels
- CP390i: Fish Finder capable when the optional FF525 50/200kHz (Black Box Fish Finder) are installed. Radar and AIS capable
- CPF390i: Built-in Fish Finder. Radar and AIS capable
- Selectable sailboat and power boat Ship Icons with red and green for port and starboard
- Compass Rose indication around ship icon
- Satellite images on base chart
- Route Checking
- Color Targets AIS
- Dedicated AIS List page
- Navigate to an Olympic Route
- SOG Speed Filter function to resolve erratic speed readings in rough seas
- Dedicated MARK, ROUTE and FIND keys
- Supplied swivel mounting bracket and flush mounting hardware
- CP390i: NMEA-0183 connections: 4 Inputs, 5 Outputs
- CPF390i: NMEA-0183 connections: 3 Inputs, 3 Outputs
- 3000 Marks / 50 Routes / 10000 Track Points
- 3 years Waterproof Warranty

CPF390i: Fish Finder features:

- 16/256 colors display user selectable

- Built-in 600W Dual Frequency Fish Finder
- 50 and 200kHz Frequency selection
- 2x and 4x Zoom
- Bottom Lock and White Line selections
- Sensitivity Time Control (STC) and Surface Noise Filter
- Speed through water (if available on transducer)
- Alarms - Shallow, Depth, Temp Upper and Lower
- Temperature (if available on transducer)

1.1 PACKING LIST

When the package containing the Navigation device is first opened, please check for the following contents. If any parts are missing contact the dealer this Navigation device was purchased from.

Accessories and replacements parts may be ordered in the USA by contacting STANDARD HORIZON's Parts department on 714-827-7600 Extn. 6800 or by email at marineparts@yaesu.com.

1.1.0 Packing List

PART CODE	ITEM
S8002224A	External bracket
S8002225	Mounting knob with two washers
S8002235	Dust cover
T9101553	Power & Accessory cable
S8002223	Flush mounting screws
EM022U500	Flush mount template
XUCMP0052	2 Amp fuse and holder
EM051U101	Owner's Manual
EM023U513	Quick Reference Guide

1.2 OPTIONAL DOME OR OPEN ARRAY RADAR ANTENNAS










The Radar antennas are supplied by SI-TEX (631) 996-2690 in the USA and Canada. Refer to the table below for compatible models:

MODEL NUMBER	DESCRIPTION
MDS-1	2kW 24 Mile 12.4" diameter Radome antenna
MDS-8	2kW 24 Mile 20" diameter Radome antenna
MDS-9	4kW 36 Mile 23.5" diameter Radome antenna
MDS-10-4	4kW 48 Mile 4FT Open Array
MDS-10-5	4kW 48 Mile 5FT Open Array

NOTE

For additional information, refer to the Radar Installation and Radar Operation Manuals located at www.standardhorizon.com.

1.3 OPTIONAL ACCESSORIES

ACCESSORIES	PARTS NAME	ITEM
	Q7000619A	50 Channel GPS Antenna Unit GSU-5H Series UXOGSU51SD
	ACVC10	Video Adapter cable (AAF69X001)
	FF525	50/200kHz Black Box Fish Finder (CP390i ONLY)
	DST520	600W 2" Nylon Thru-hull depth temp Transducer
	DST521	600W Transom mount depth, speed temp Transducer
	DST523	600W 2" Bronze Thru-hull depth temp Transducer
	DST525	600W In-hull Transducer
	DST526	600W 2" Bronze Thru-hull depth, speed temp Transducer
	DST527	1000W In-hull depth Transducer (FF525 ONLY)
	DST528A	1000W Bronze long stem depth temp Transd. (FF525 ONLY)

2. INSTALLATION

NOTE

Throughout this Owner's Manual same conventions are used. See the legend below:

[MENU] If you see brackets around a bold and capital letter word this refers to a key press.

[CHART] If you see brackets around a bold and small capital letter word this refers to a Soft Key press.

GENERAL SETUP When a word(s) is bold capital letters and underlined, this refers to a menu selection item.

A GPS Receiver with antenna is located inside the CP390i and CPF390i, which are designed to be bracket mounted. Both models may be flush mounted, however an optional external GPS antenna may be needed to receive GPS satellite signals.

To use the external GPS antenna, the internal GPS antenna must be turned off, using the procedure below:

1. Turn the CP390i and CPF390i On and select the **GPS STATUS** page.
2. Press **[ENT]** to show the **GPS SETUP** menu.
3. Move the ShuttlePoint knob to highlight **INTERNAL GPS** and press **[ENT]**.
4. Move the ShuttlePoint knob to highlight **OFF** and press **[ENT]**.

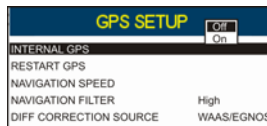


Figure 2 - GPS Setup menu

5. Press **[CLR]** to exit the **GPS SETUP** menu.
6. Confirm the GPS Status page is showing satellite signal strength bars and receive a fix.

2.0 MOUNTING THE GPS CHART PLOTTER

The CP390i and CPF390i are supplied with a swivel mounting bracket which allows them to be dash mounted. When flush mounting, the optional GPS antenna may be needed to receive GPS satellite signals. Refer to the images below for Bracket and Flush mounting.

NOTE

The CP390i and CPF390i are designed to be bracket and flush mounted. However when bracket mounting the CP390i and CPF390i in an area where satellite reception is not possible with the internal antenna or when flush mounted, the optional GPS antenna must be installed.

2.1 BRACKET MOUNTING

Before installing ensure the area the bracket is mounted to is strong enough to support the weight of the GPS Chart Plotter especially while under way. After the location is found, attach the mounting base to the area using the supplied hardware.

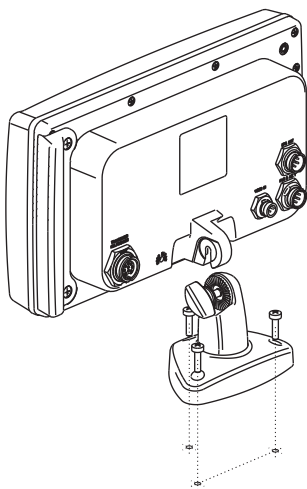


Figure 2.1 - Example of Bracket installation

2.2 FLUSH MOUNTING

The CP390i and CPF390i are supplied with a flush mount template for the cutout hole and screw holes required to install the GPS Chart Plotter.

NOTE

Before drilling holes make sure there is enough room to mount the GPS Chart Plotter and there are no obstructions.

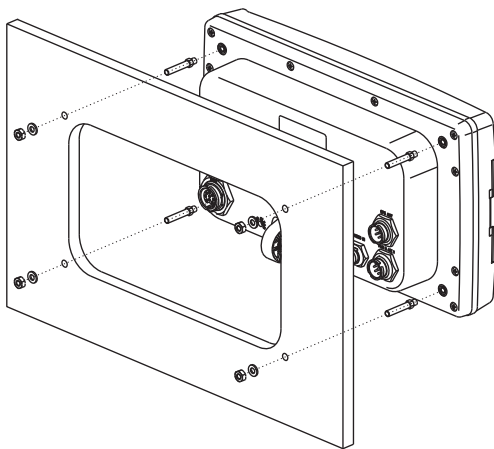


Figure 2.2 - Example of Flush installation

1. After a location is found, peel the template label from the backing and apply the label to the mounting area.
2. Drill a hole in one area of the cutout area that will allow the blade of a jig saw to be inserted. Insert and cut out the area on the panel using the jig saw.
3. Next drill the four holes required to insert the GPS Chart Plotter with the mounting studs.
4. Install the mounting studs on the GPS Chart Plotter and insert into the mounting hole.
5. Attach the GPS Chart Plotter to the mounting location by attaching the supplied hardware to the mounting studs.

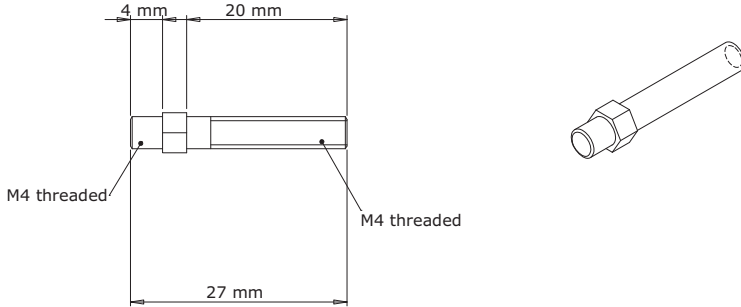


Figure 2.2.0 - Mounting Screws

2.3 MOUNTING THE OPTIONAL EXTERNAL GPS ANTENNA

An external WAAS GPS antenna is available when the CP390i and CPF390i is flush mounted or mounted in an area where satellite reception is not possible with the internal antenna. This antenna is designed to be mounted on a base, installed on an extension or flush mounted.

Choose a location for the antenna that has a clear view of the sky and is not located within 3Ft of a Radar or other transmitting antennas. Ensure there are no major obstructions or fixtures in the immediate proximity to the antenna. The antenna relies on direct "line of sight" satellite reception. If you are unsure of the chosen location, temporarily mount the antenna in the desired location to verify correct operation. If mounted close to Radar, after the GPS Chart Plotter has a fix, turn on the Radar to ensure the GPS Chart Plotter holds the fix (use the GPS Status page).

The thread used on the antenna is an industry standard (1inch 14TPI) used on a wide range of mounting brackets.

NOTE

The antenna cable can be cut and spliced to ease installation. Care must be taken when reconnecting the antenna cable to protect from water and corrosion.

2.3.0 Flush mounting the antenna

NOTE

Before drilling holes, it is recommended the antenna be positioned where the location is planned, cable connected to the GPS Chart Plotter and power turned on to ensure a GPS fix is received.

1. Remove the threaded base from the antenna dome.
2. To ease installation a flush mount template for the antenna has been included.
3. Apply the mounting template sticker to the area that was verified for GPS reception.
4. Then, drill out the 0.78" (20mm) and 0.13" (3.2mm) holes, and remove the template.
5. Insert the cable into the 0.78" (20mm) hole and route to the GPS Chart Plotter.
6. Apply a small amount of RTV to the underside of the antenna.
7. Place the antenna and then screw it into place using the screws.

NOTE

In some cases the screw may not be long enough. If this happens simply apply more RTV to the underside of the antenna to glue it into place.

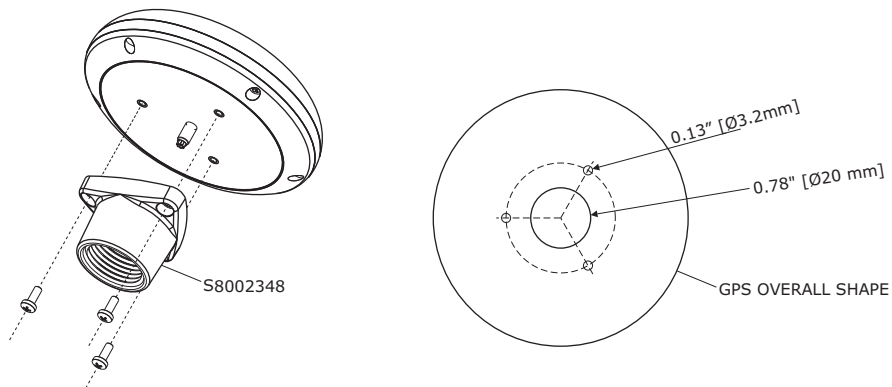


Figure 2.3.0 - Installing the External GPS antenna

Smart GPS Cable

Pin	Wire Color	Description
1	Red	Battery Positive
2	Green	Smart GPS NMEA Input
3	Brown	Smart GPS NMEA Output
4		NC
5		NC
6	Black/Yellow	Battery Ground

2.4 CONNECTIONS

The CP390i and CPF390i have connectors that allow them to be connected to a power supply, optional WAAS GPS antenna, optional FF525 50/200kHz Black Box Fish Finder (only for CP390i) and NMEA devices* such as Optional Video Camera, VHF's, AIS Receiver, Digital Instruments and Autopilots.

*NOTE**

RS232 not opto-isolated electrical interface

NOTE

The GPS Chart Plotter can send many sentences to external NMEA devices*. The NMEA Output wires are yellow and white. If you have connected devices as shown in the table on the next page and need to feed NMEA to other devices (Autopilot, Radar...) you can parallel wires from the yellow, brown or white wires to other devices.

2.4.0 CP390i Connection Table

12VDC Power Cable

Pin	Wire Color	Description	Connection Example	Additional Comments
1	Black	Battery Ground	Connect to Battery Ground	
2	Red	Battery Positive	Connect to Battery Positive	
3	Green	NMEA Common	Common (ground) for NMEA devices*	
4	Blue	Port1 Input	Connect to Output of NMEA devices*	Default is NMEA-0183
5	Brown	Port1 Output	Connect to Input of NMEA devices*	Default is NMEA-0183 with GGA, GLL, RMC, XTE, DBT, DPT, MTW, VHW sentences
6	Grey	Port2 Input	Connect to FF525	Default is Fish Finder
7	White	Port2 Output	Connect to FF525	Default is Fish Finder
8	Yellow	Port3 Output	Connect to Input of NMEA devices*	Default is NMEA-0183 with APA, APB, BOD, GGA, GLL, RMC and BOD sentences

NMEA ACC 2 Cable


Pin	Wire Color	Description	Connection Example	Additional Comments
1	Black	NC		
2	Red	NC		
3	Green	NMEA Common	Common (ground) for NMEA devices*	
4	Blue	Port4 Input	Connect to Output of NMEA devices*	Default is NMEA-0183*
5	Brown	Port4 Output	Connect to Input of NMEA devices*	Default is NMEA0183 with GLL, RMB, RMC and XTE sentences
6	Grey	Port5 Input	Connect to Output of NMEA devices*	Default is NMEA-0183
7	White	Port5 Output	Connect to Input of NMEA devices*	Default is NMEA-0183 with GLL, RMB, RMC and XTE sentences
8	Yellow	NC		

NOTE *



RS232 not opto-isolated electrical interface

2.4.1 CP390i Connections

2.4.1.0 DC Power Connection

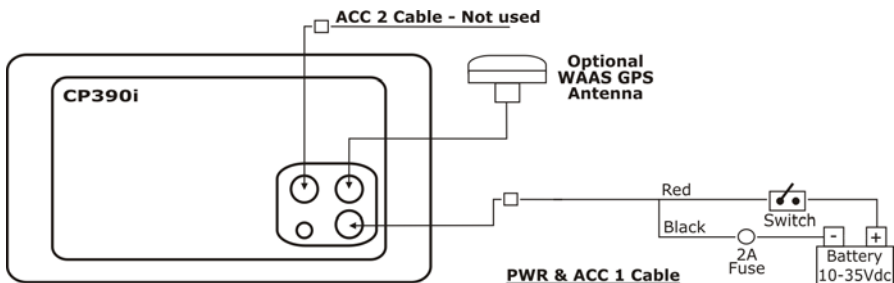

2.4.1.1 Connection a Video Camera, FF525, AIS Receiver, VHF and Autopilot

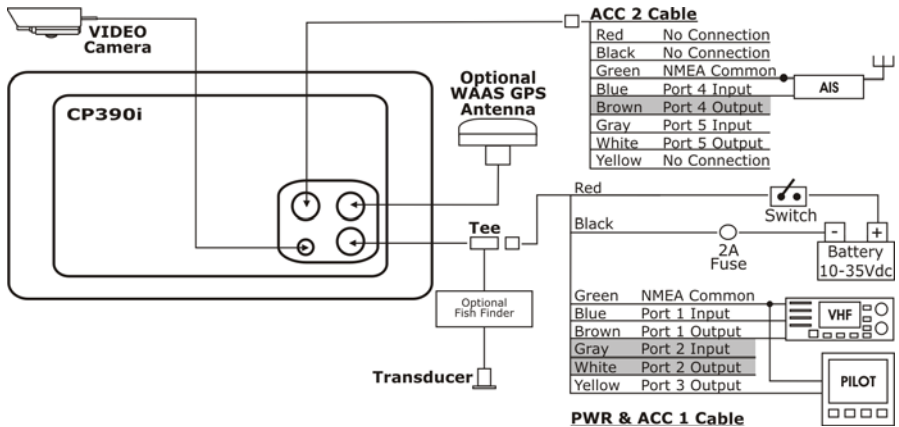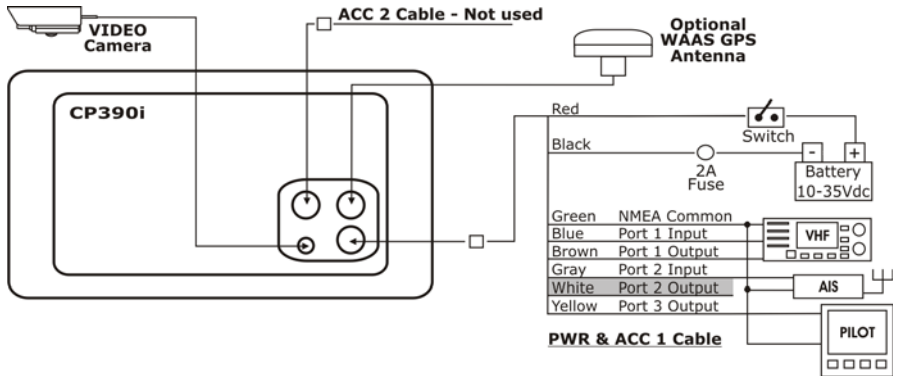

NOTE

Port2 Input and Output is used by the optional FF525. In the diagram above you will notice Port2 Input and Output wires are shown in gray and not used.

Port4, and Port5 Outputs are can be connected to NMEA devices*capable of listening to NMEA-0183 sentences.

Port4, and Port5 Inputs can be connected to NMEA devices* capable of outputting to NMEA-0183 sentences.

The Input and Output baud rate for each Port is set using the Advanced Setup>In/Out Connections menu. For example if Port1 is set for AIS 38400, the Input Port operates at 38400 baud and the Output Port is disabled.

NOTE*

RS232 not opto-isolated electrical interface.

2.4.1.2 AIS Setup

The CP390i has to be set up to be able to receive NMEA information from the AIS receiver. The GPS Chart Plotter reads the AIS NMEA message VMD, type 1, 2, 3 and 5 for AIS Class A and type 18, 19, 24 for AIS Class B. Select the used port and transmission speed by following the procedure:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **ADVANCED SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **IN/OUT CONNECTIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Move the ShuttlePoint knob to highlight **PORT4 INPUT** (or other Port the AIS is connected to) and press **[ENT]** or move the ShuttlePoint knob to the right.
5. Move the ShuttlePoint knob up/down to select **AIS 38400** and press **[ENT]** or move the ShuttlePoint knob to the right.

2.4.2 CPF390i Connection Table

12VDC Power


Pin	Wire Color	Description	Connection Example	Additional Comments
1	Black	Battery Ground & Common for NMEA devices*	Connect to Battery Ground and signal ground	
2	Red	Battery Positive	Connect to Battery Positive	
3	Green	Port3 Input	Connect to Output of NMEA devices*	Default is NMEA-0183
4	Blue	Port1 Input	Connect to Output of NMEA devices*	Default is NMEA-0183
5	Brown	Port1 Output	Connect to Input of NMEA devices*	Default is NMEA-0183 with GGA, GLL, RMC, XTE, DBT, DPT, MTW, VHW sentences
6	Gray	Port2 Input	Connect to Output of NMEA devices*	Default is NMEA-0183
7	White	Port2 Output	Connect to Input of NMEA devices*	Default is NMEA-0183 with GGA, GLL, RMC and XTE sentences
8	Yellow	Port3 Output	Connect to Input of NMEA devices*	Default is NMEA-0183 with APA, APB, BOD, GGA, GLL, RMC and BOD sentences

*NOTE**


RS232 not opto-isolated electrical interface

2.4.3 CPF390i Connections

2.4.3.0 DC Power Connection

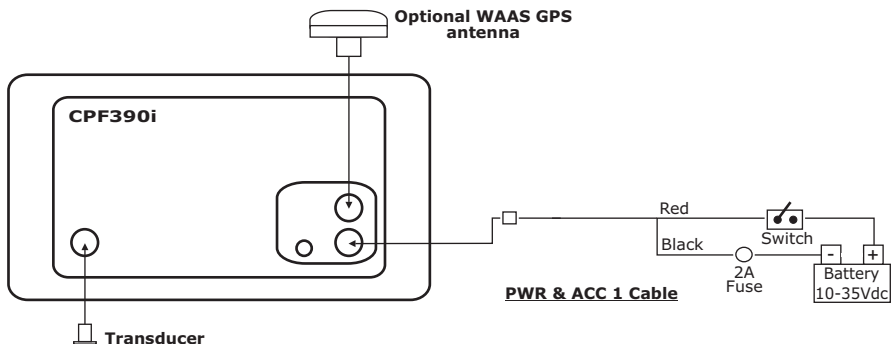

2.4.3.1 Connection a Video Camera, AIS Receiver, VHF and Autopilot

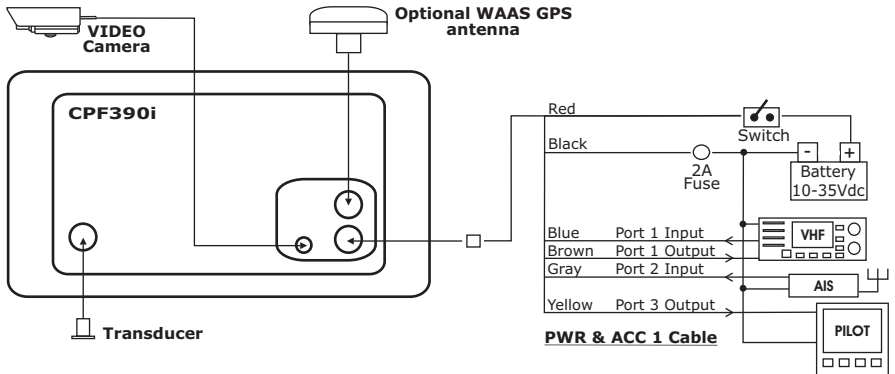

NOTE

The Input and Output baud rate for each port is set using the Advanced Setup>In/Out Connections menu. For example if Port1 is set for AIS 38400, the Input and Output both operate at 38400 baud.

2.4.3.2 AIS Setup

The CPF390i has to be set up to be able to receive NMEA information from the AIS receiver. The GPS Chart Plotter reads the AIS NMEA message VMD, type 1, 2, 3 and 5. Select the used port and transmission speed by following the procedure:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **ADVANCED SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **IN/OUT CONNECTIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Move the ShuttlePoint knob to highlight **PORT2 INPUT** and press **[ENT]** or move the ShuttlePoint knob to the right.
5. Move the ShuttlePoint knob up/down to select **AIS 38400** and press **[ENT]** or move the ShuttlePoint knob to the right.

2.5 BATTERY CONNECTIONS

1. The GPS Chart Plotters are supplied with a fuse and holder. This fuse should be installed into the Black wire to protect the NMEA Output/Input circuits from possible damaged.
2. Connect the Red and Black wires from the GPS Chart Plotter to a 12VDC source as directly as possible.

2.6 NMEA CONNECTIONS

The GPS Chart Plotter can be connected to external devices with NMEA and display information, examples:

- DSC VHF Radio
- Depth Sounder, Speed Log, Wind Instrument, Autopilot etc.
- Radar (USA ONLY)

- Personal Computer
- AIS Receiver
- MOBILARM System

2.7 GPS POSITION ON A VHF RADIO

STANDARD HORIZON has pioneered Digital Selective Calling (DSC) on VHF Radios. Advancements in DSC have made it possible to show the coordinates of a vessel that has transmitted a DSC Distress Call or even polled the location of another vessel and show the position of that vessel on the display of STANDARD HORIZON VHF's.

STANDARD HORIZON has taken this feature one step further. If a CP390i or CPF390i is connected to a DSC capable VHF, the vessel in Distress or the polled position of the vessel is shown on the display of the GPS Chart Plotter, making it easy to navigate to the location of the vessel. This is a great feature that could save someone's life or for anyone wanting to know the position of another vessel.

Other DSC VHF Manufactures

GPS Chart Plotter	Description	VHF
Green	NMEA Common Ground	Connect to NMEA Ground
Brown	NMEA Positive Output	Connect to NMEA Input
Blue	NMEA Positive Input	*Connect to NMEA Output (if available)

* Some manufacturers of DSC VHF's are not capable of outputting NMEA DSC and DSE sentences to the CP390i or CPF390i. Refer to the Owner's Manual and confirm the VHF can output NMEA DSC and DSE sentences.

NOTE

Refer to VHF Digital Selective Calling Section for operation.

2.8 CP390i: OPTIONAL BLACK BOX FISH FINDER

STANDARD HORIZON offers an optional Black Box Fish Finder called the FF525. Please refer to the Owner's Manual supplied with the Fish Finder for connections and operation.



Figure 2.8 - FF525 50/200kHz Black Box Fish Finder

NOTE

The FF520 is also compatible.

2.9 RADAR ANTENNA (USA ONLY)

Please refer to Par. "1.3 Radar Unit supplied by SI-TEX USA". The Radar antenna includes the necessary electronics to deliver Radar information to a compatible STANDARD HORIZON GPS Chart Plotter, and is supplied with mounting hardware kit, interconnection cable and a Radar Junction Box.

Please refer to the Radar Installation Manual and Radar Operation Manual available at www.standardhorizon.com.

2.10 PERSONAL COMPUTER CONNECTIONS

The GPS Chart Plotter can be connected to output Marks and Routes to many available PC programs. To send or receive User Points the PC Program must be able to receive NMEA WPL and RTE sentences. Refer to the table below for connection to a Serial DB9 connector.

Pin	PC DB9 connection	Port1 connection
2	Receive	Brown
3	Transmit	Blue
5	Signal ground	Green

By default Port1 is set to receive or send User Points to and from a PC. The GPS Chart Plotter may be set up to send and receive the User Points on a different Port using the following procedure:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **ADVANCED SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **IN/OUT CONNECTIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Move the ShuttlePoint knob to highlight **SEND/REC RTE & MARKS** and press **[ENT]** or move the ShuttlePoint knob to the right to show the popup window.
5. Move the ShuttlePoint knob to desired Port and press **[ENT]**.

The PC COM settings are:

- Baud Rate : 4800
- Parity : None
- Data Bits : 8
- Stop Bits : 1
- Flow Control : None

The format of the sentences that are sent:

- MARK \$GPWPL,3249.061,N,00710.651,E,MRK002*22
- WAYPOINT \$GPWPL,3933.008,N,00639.969,E,WPT012*22
- ROUTE \$GPWPL,2544.362,N,08011.672,W,WPT003*32
\$GPWPL,2543.921,N,08011.481,W,WPT004*31
\$GPWPL,2543.493,N,08011.768,W,WPT005*37
\$GPRTE,2,1,c,ROUTE01,WPT003,WPT004,WPT005*21

2.11 NMEA DATA PAGE

The NMEA Data page is very useful to see if an external device (example: Depth Sounder) is transmitting NMEA sentences to the GPS Chart Plotter. This page can also be used to see if the GPS Chart Plotter NMEA Output is being loaded down by an external NMEA device the GPS Chart Plotter is connected to. Example: A VHF radio is connected but the radio is not receiving a GPS Position. Usually the VHF radio will be connected to the Green and Brown wires. To check to see if the GPS Chart Plotter is transmitting the sentences:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **NMEA DISPLAY** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **DATA** and press **[ENT]**.
3. The **NMEA DATA** page is shown.
4. Connect the Blue Wire on the GPS Chart Plotter to the junction of the Brown wire and the VHF wire. The display should look similar to the following picture.

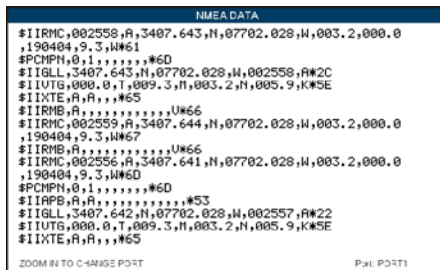


Figure 2.11 - NMEA Data page

2.12 VIDEO INPUT

By accessing this menu it is possible to see images on the CP390i or CPF390i display from an external video signal source, if connected to the CP390i or CPF390i.

It allows the "picture-in-picture" functionality, so a Video Input image can be shown on a window and placed over the Chart, Navigation, Highway, Celestial and NMEA pages image at full screen.

NOTE

If the Video Input signals is not detected (E.g. the video camera is not connected to the Video Input connector), the VIDEO INPUT menu item will be grayed out.

Video Connector

Pin	Description	Connection Example
1	Ground	Connect to Video Signal Ground of DVD/VCR/Video Cameras
2	+ 9 / 12 VDC	Connect to Video Cameras Power Input
3	Video Signal +	Connect to Video Signal + (NTSC/PAL) of DVD/VCR/Video Cameras

2.12.0 Video Camera Input

The CP390i or CPF390i has one connection for video camera. Any NTSC or PAL camera will operate correctly. To connect use the video output of the camera and connect to the optional ACVC10 cable.

2.12.1 VCR or DVD Input

A VCR or DVD may be connected to Video port. The CP390i or CPF390i does not have speakers so the audio from the VCR or DVD would have to be routed to a stereo system. STANDARD HORIZON offers an optional cable called ACVC10 that allows any VCR or DVD to simply be plugged into the CP390i or CPF390i.

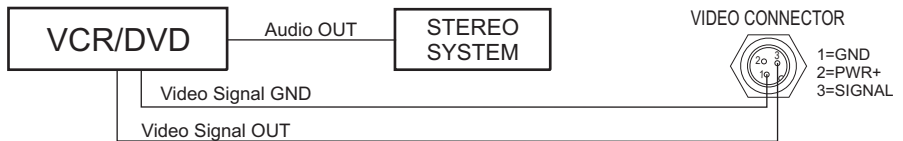


Figure 2.12.1 - VCR/DVD Input

The CP390i or CPF390i has the capability to select the Video Input in three ways.

I. From the menu

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **VIDEO INPUT** and press **[ENT]** or move the ShuttlePoint knob to the right. A menu appears with the following options:
 - a. **ACTIVATE VIDEO**, the possible choices are Full Screen View, PiP (*picture-in-picture*) View and Auto Switch (*).

If **Full Screen View** is chosen, the GPS Chart Plotter will show a warning message with the instructions to adjust the image from the Video Input. If the user agrees to proceed, the image from the video input will be shown.

If **Picture in Picture (PiP) View** is chosen, a Video Input image can be shown on a window and placed over the selected page at full screen. By moving the ShuttlePoint knob, the PiP image is moved. When the focus is on the PiP image, press **[CLR]** to close the PiP image.

If **Auto Switch** is chosen, all the menus will be closed and the video input will be shown switching between the Video Input Full View (if connected) and the selected page. See next section for details of setting up the switching times. If the user agrees to proceed, the image from the Video Input and the CP390i or CPF390i page will be shown intermittently. The intermittence time is selected by Switching Timeout item.
 - b. **SWITCHING TIMEOUT**, the possible choices are 5,10,30 sec, 1, 5, 10 min. Allows selecting the timing to change from Video Input and CP390i or CPF390i display.
 - c. **RESTORE DEFAULTS**, allows restoring the factory defaults for the Input picture adjustment. When Restore default is executed, the message "OK" is shown next to the selected menu item.

*NOTE**

If the video signal is not present on the video connector, the corresponding item in the menu will be shown with a light color (to identify that the option is not available).

II. Quick Activation by pressing **[CLR]** for 1 second

Pressing and holding **[CLR]** for 1 second from the Chart page Display or from any main page (Navigation, Highway, Celestial, GPS Status, DSC, NMEA Display); the following Soft Keys are shown: **[FULL SCREEN]**, **[PiP VIEW]**, **[AUTO SWITCH]**. If no video signal is detected on the Video Input connector, the Soft Keys will be shown in light color in order to identify that they are not active.

III. Quick Activation by Soft Keys

It is possible to assign the Video Input mode to any of the Soft Keys. Press one of the Soft Keys, the Soft Keys functions are shown. Pressing and holding for 1 second one of the Soft Keys, the Soft Keys customization list will be shown. By selecting **VIDEO** option it will be possible to assign the Soft Key to execute the Video Input function. Once the Soft Key has been assigned to Video Input, its label will show the message **[VIDEO]**. If **[VIDEO]** is pressed, the Soft Keys will be assigned this way: **[FULL SCREEN]**, **[PiP VIEW]**, **[AUTO SWITCH]**. From now

on, the functioning is identical to case II.

NOTE

When the PIP video window is shown, the ShuttlePoint knob can be used to move the position of the PIP window or move the cursor around the Chart page. By default the PIP window is controlled by the ShuttlePoint knob. To change so the chart cursor can be moved, press any Soft Key, then press [VIDPAGE]. To change back to control the PIP window press any Soft Key, then press [VIDPAGE] again.

NOTE

When the PIP window is shown, the cursor and the vessels position may be shown under the PIP window.

2.13 DEMO MODE (FOR DEALER USE)

In Demonstration Mode the GPS Chart Plotter automatically places a Destination point on the Chart page and simulates navigation to the point. Also, the active page displayed on the screen changes every 10 seconds. The pages are shown in the following order: Start-Up page, GPS Status page, Chart/Compass tape page, Chart/Fish Finder page, Fish Finder full page, Radar page, Navigation page, Highway page, Celestial page, NMEA Display page.

NOTE

This mode is used by dealers to promote the features of the CP390i or CPF390i when on a retail shelf.

The Demo Mode can be selected from the Simulation Menu following the procedure:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **ADVANCED SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **SIMULATION** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Move the ShuttlePoint knob to highlight **DEMO MODE** and press **[ENT]** or move the ShuttlePoint knob to the right to show the popup window.
5. Move the ShuttlePoint knob to select **ON** and press **[ENT]** or move the ShuttlePoint knob to the right.
6. Demo Mode is now activated.

Once the Demo Mode is enabled, it is possible to temporarily exit Demo Mode by pressing a key and return to the GPS Chart Plotter normal operation. If a key is not touched for 30 seconds the Demo Mode will re-start.

To disable the Demo Mode follow the procedure above selecting **OFF** at step 5.

3. CONTROLS AND INDICATORS

NOTE

This section defines each control of the CP390i or CPF390i. For instructions, refer to Getting Started and Advanced Settings sections of this Owner's Manual.

NOTE

Throughout this Owner's Manual same conventions are used. See the legend below:

[MENU] If you see brackets around a bold and capital letter word this refers to a key press.

[CHART] If you see brackets around a bold and small capital letter word this refers to a Soft Key press.

GENERAL SETUP When a word(s) is bold capital letters and underlined, this refers to a menu selection item.

3.0 CONTROLS AND CONNECTIONS

The CP390i or CPF390i is controlled by using the keys located on the front panel. These labeled keys are dedicated to specific functions. As you press a key, a single audio beep confirms the key action; every time a key press is not valid, three rapid beeps sound to indicate that the key action is not valid. There is also a ShuttlePoint knob to move the cursor across the screen.

The ZOOM IN and ZOOM OUT keys

Pressing **[ZOOM IN]** shows more detail of a smaller area, by changing the chart scale and zooming in on your display. Press **[ZOOM OUT]** to change the scale and show a wider, otherwise less detailed view. Pressing and holding **[ZOOM IN]/[ZOOM OUT]** allows for quick zoom, that is the fast change of the chart scale where only the land areas are drawn. When **[ZOOM IN]/[ZOOM OUT]** is released all chart details are shown.

NOTE

The GPS Chart Plotter contains a Worldwide background that allows you to zoom in to 2Nm. For more detail, a C-MAP BY JEPPESEN NT*/MAX C-CARD must be purchased and installed.

The ShuttlePoint knob

The ShuttlePoint knob moves the cursor around the Chart page (Cursor Mode) and highlights menu items. It changes the GPS Chart Plotter from Home Mode to Cursor Mode on the Chart screen. For a detailed explanation of Cursor VS Home Mode refer to Par. 3.1.1.

The ENT key

Press **[ENT]** to select the desired option or to confirm the selection.

The CLR key

When on the Chart page, press **[CLR]** to set Home Mode, clear a selected function, leave a menu, step backwards in a menu or exit a menu.

The MENU key

Selects the Main Menu. When in the Setup Menu mode, moving the ShuttlePoint knob to the right enters a selection and moving the knob to the left clears the function.

Pressing and holding **[MENU]** for 3 seconds allows you to change the fields contained within the data windows while on the Chart, Navigation, Highway, GPS Status or NMEA Display page.

The GOTO key

This key is very useful when you desire to start navigating (goto) to a destination point. When pressed, a popup window will be shown allowing you to select to start navigating to the Mark, a Route or the position of the cursor.

To stop navigation to a point, press [**GOTO**] and select Stop in the popup window.

The MARK key

This key places a Mark under the ship's position when in Home Mode. When the cursor is shown and [**MARK**] is pressed it will place a Mark under the location of the cursor.

The ROUTE key

When pressed places a Waypoint. Succeeding presses place more Waypoints to form a Route.

The PWR key (Backlight and Contrast)

Press and hold [**PWR**] to turn the GPS Chart Plotter On or Off. Once on, press [**PWR**] to show and change the Contrast and Backlight settings.

The MOB key

When pressed the GPS Chart Plotter automatically places a Mark on the Chart page under the boat's position to aid in the rescue or a person that may have fallen aboard. To stop navigating, press [**GOTO**], select **STOP** and press [**ENT**].

The FIND key

A dedicated key that allows searching the optional C-MAP BY JEPPESEN NT⁺/MAX C-CARD for Port Services, Ports, Tide Stations, Wrecks, Obstructions, Points Of Interest, Lakes Information, Lakes By Name, User Points, GPS Coordinates or Information on any point on the chart.

3.0.0 The Soft Keys

The 6 keys in the bottom of the front panel (hereinafter named Soft Keys) have different functions associated depending on the software: their labels are shown on the screen immediately above the soft keys (the user can customize the function associated with each soft key).

The Soft Keys

These keys allow quick selection to the many pages the GPS Chart Plotter has. These keys can be customized to your preference, however from the factory the keys are preprogrammed with the following pages. From left to right VIDEO, NAV, HIGHWAY, CELEST, CHART, LIST. Press any of the keys and you will see popup windows above the keys. To goto a specific page press the key with the desired popup window. The popup windows will automatically disappear if a key is not pressed or can be removed by pressing [**CLR**].

3.1 GETTING STARTED

The Getting Started section will take you through the frequently used operations and assist you to customize the look of the GPS Chart Plotter.

3.1.0 Power On, Off and ShuttlePoint Knob operation

1. Press and hold [**PWR**] until the display shows the Start-Up page (see the following picture). To turn Off, press and hold [**PWR**] until the display turns Off.



Figure 3.1.0 - Example of Start-Up page on CPF390i

- When the power is first turned on two pages the Start-Up page and the Caution pages are briefly shown before the GPS Status page.



Figure 3.1.0a - Caution pages

NOTE

The Caution page on the left is shown only if the data C-CARD is over one year old.

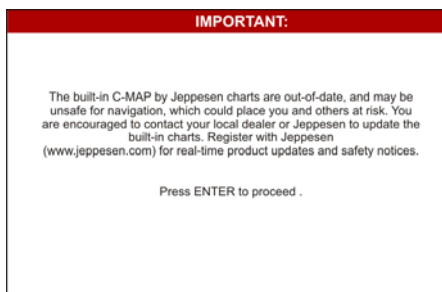


Figure 3.1.0b - Built-In Charts warning pages

- When the GPS Chart Plotter is first turned on it will take some time for the GPS to acquire a fix of your position. Look closely at the GPS Status page and you will see satellites and relative signal strengths of each satellite. After a fix is received the GPS Chart Plotter will automatically switch to the Chart page with the ship icon centered on the screen.
- On the Chart page the ShuttlePoint knob is used to pan around the chart. Move the ShuttlePoint knob to the left and you will notice a cross hair \oplus appear, this is called the cursor.

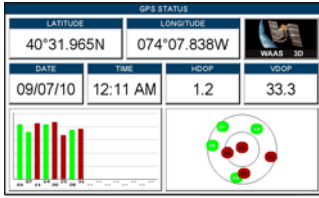



Figure 3.1.0c - GPS Status and Chart pages


- When you move the ShuttlePoint knob you will notice DST and BRG values in the Data window change. This shows the Distance and Bearing from the GPS Fix of your vessel to the position of the Cursor.
- If the cursor is moved to the edge of the screen the GPS CHART Plotter will automatically pan in the desired direction.

3.1.1 Cursor Vs. Home Mode

Cursor Mode

When the  cursor is shown on the Chart page, the GPS Chart Plotter is in Cursor Mode. In Cursor Mode the position of the vessel will not stay in the center of the page and will move right off the edge of the screen (as your boat moves). Cursor Mode allows you to pan around and look at areas on the chart. In this mode you can also create Marks, Routes, measure distance and bearings from your current position.

Home Mode

When the  ship icon is shown on the Chart page (cursor is not shown) you are in Home Mode. Now as the ship moves through the water the vessel's position will be kept in the center of the display.

NOTE

To change from Cursor Mode to Home Mode press **[CLR]**.

3.1.2 Cursor and Menu selection speed

The CP390i and CPF390i allow you to control the speed the cursor moves when the ShuttlePoint knob is pressed. To change the speed:

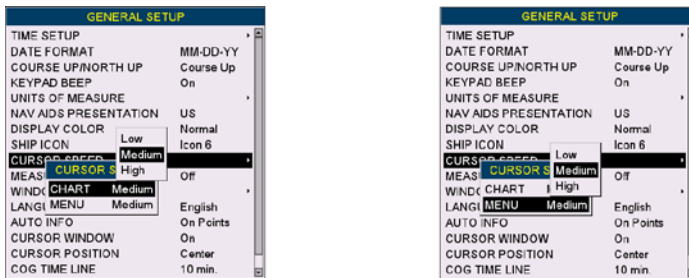


Figure 3.1.2 - Cursor Speed Menu

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **GENERAL SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **CURSOR SPEED** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. The menu now shows two selections, Chart and Menu which allow the Cursor Speed to be selected as High, Medium or Low on the Chart page or within the menus.
5. With **CHART** or **MENU** selected, press **[ENT]** or move the ShuttlePoint knob to the right. Move the ShuttlePoint knob to the desired setting and press **[ENT]** or move the ShuttlePoint knob to the right.
6. Press **[CLR]** until the menu disappears or an easier method is to press the ShuttlePoint knob to the left a few times.
7. Move the cursor on the Chart page and see if the speed is to your liking.

3.1.3 Changing the Ship Icons

The cursor may be changed to any of the following. The default setting is Icon 6.

 


Figure 3.1.3 - Ship Icons

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **GENERAL SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **SHIP ICON** and press **[ENT]** or move the ShuttlePoint knob to the right to show the popup window with ship icons.
4. Move the ShuttlePoint knob to select the desired icon and press **[ENT]** or move the ShuttlePoint knob to the right to select a new icon.
5. Press **[CLR]** or move the ShuttlePoint knob to the left to exit the menu and show the Chart page.

3.1.4 Changing the Backlight and Contrast

With the CP390i and CPF390i turned on, briefly press **[PWR]** to show the backlight and contrast popup window. Move the ShuttlePoint knob to the left or right to adjust the LCD backlight intensity or up or down to change the LCD contrast. Press **[ENT]** to set.

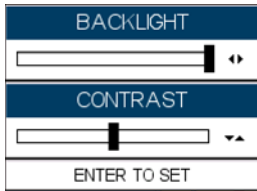


Figure 3.1.4 - Backlight and Contrast adjustment

3.1.5 Selecting North Up or Course Up

The default selection is **COURSE UP**: the top of the Chart page oriented so it will always show the area ahead of the direction your vessel is travelling.

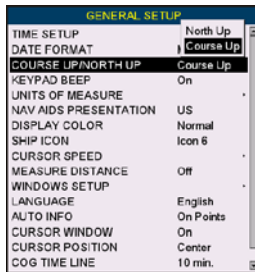



Figure 3.1.5 - Course Up/North Up Menu

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **GENERAL SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **COURSE UP/NORTH UP** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Another popup window will be shown with **NORTH UP** and **COURSE UP**, move the ShuttlePoint knob to the desired selection and press **[ENT]** or move the ShuttlePoint knob to the right.
5. Press **[CLR]** or move the ShuttlePoint knob to the left to exit the menu and show the Chart page.

NOTE

When the CP390i and CPF390i are in Course Up mode a small arrow icon  will be shown on the Chart page indicating North.

3.2 AUTOMATIC TIME

The time information supplied by the GPS satellites is in Universal Time Coordinates (UTC or Greenwich England Mean Time). To change the GPS Chart Plotter to display the local time, first you must figure out the offset and if it is Daylight Savings Time. For example on the West coast of the United States or Pacific Standard Time the offset needed would be -08:00 or -07:00 for Daylight Savings Time, Eastern Standard Time -05:00 or -04:00 for Daylight Savings Time.

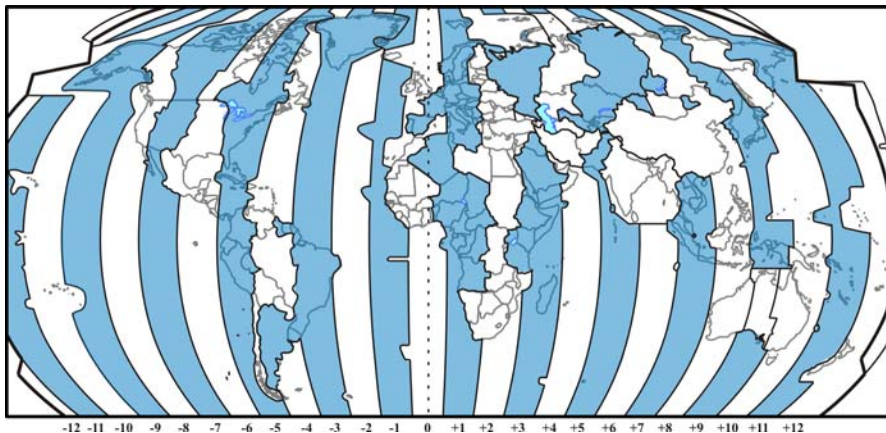


Figure 3.2 - Adjusting Time

The Time Setup Menu allows you to enter a Time Zone offset for your location, selection to automatically adjust the time for daylight savings and to configure the time in 12 or 24 hour formats.

SETUP MENU		
GENE	GENERAL SETUP	Australia (Brisbane) +10:00
CHAR	TIME	Papua New Guinea +10:00
MAX F	DATE	Australia (Sydney) +10:00
ADVAI	COUR	Australia (Canberra) +10:00
C-MAP	KEY/P	Australia (Tasmania) +10:00
AIS SE	UNITS	Russia (Moscovostok) +10:00
VIDEO	NAV AIDS	Lord Howe Island +10:30
DISP	DISPLAY COLOR	Kesrae, Pohnpei, Solomons +11:00
About	SHIP ICON	Russia (Magadan) +11:00
	CURSORS	Norfolk Island +11:30
	CURSORS SPEED	Fiji, Kiribati +12:00
	MEASURE DISTANCE	New Zealand +12:00
	WINDOWS SETUP	Russia (Petrozavlovsk) +12:00
	LANGUAGE	Chatham Islands +12:45
	AUTO INFO	Tonga +13:00
	CURSORS WINDOW	Kiribati (Phoenix Islands) +13:00
	CURSORS POSITION	Kiribati (Line Islands) +14:00
	COG TIME LINE	Other -00:00

Figure 3.2a - Time Setup Menu

NOTE

By setting the time in the steps below, the time shown on the Celestial page is automatically set up.

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **GENERAL SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **TIME SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Move the ShuttlePoint knob to highlight **TIME ZONE** and press **[ENT]** or move the ShuttlePoint knob to the right.
5. Look at the table and find the time zone for your area. Move the ShuttlePoint knob up or down to select the desired zone and press **[ENT]**.
6. Next move the ShuttlePoint knob to highlight **DAYLIGHT SAVING** and press **[ENT]** or move the ShuttlePoint knob to the right.
7. Daylight Saving menu has 3 options:
 - 7.1 **OFF** Select Off when your location does not recognize Daylight Savings Time;

- 7.2 **ON** Select On to manually turn Daylight Savings Time On. This is the default selection;
- 7.3 **AUTO** When selected the Daylight Savings Time offset is automatically changed.
- 8. Press **[CLR]** or move the ShuttlePoint knob to the left until the Chart page is shown.

3.3 SELECTING LORAN TD OR OTHER COORDINATE SYSTEM

The GPS Fix coordinates can be changed to show Latitude/Longitude, Loran TDs or UTM. Below is the window that will appear when customizing the Coordinate System.

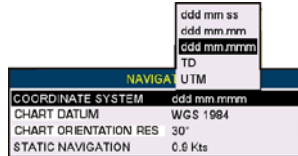


Figure 3.3 - Coordinate System Menu

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **ADVANCED SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **NAVIGATE** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Move the ShuttlePoint knob to highlight **COORDINATE SYSTEM** and press **[ENT]** or move the ShuttlePoint knob to the right.
5. Move the ShuttlePoint knob to highlight the desired coordinate type and press **[ENT]** or move the ShuttlePoint knob to the right.
6. Press **[CLR]** or move the ShuttlePoint knob to the left until the Chart page is shown.

NOTE

If the TD is selected, you should set the Chain, Pair, ASF1, ASF2 and Alter. If the TD numbers are not correct the Pair letters may be backwards. Reversing the two letters usually solves this issue. Example: YZ change to ZY.

3.4 CHANGING THE CHART COLOR

The CP390i and CPF390i have preprogrammed settings allowing you to customize the look of the Chart page. The default is Sunlight, however there are other settings: Classic, NOAA, Night and Normal. Night is very useful during evening hours so not to impair night vision.

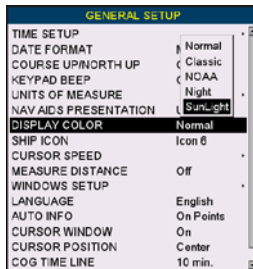


Figure 3.4 - Display Color Menu

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **GENERAL SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **DISPLAY COLOR** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. A popup window will be shown with **Normal**, **Classic**, **NOAA**, **Night** and **Sunlight**. Move the ShuttlePoint knob to the desired selection and press **[ENT]** or move the ShuttlePoint knob to the right.
5. Press **[CLR]** or move the ShuttlePoint knob to the left to exit the menu and show the Chart page.

3.5 SELECTING LANGUAGE

To ease operation in different countries, the software includes translation and display of the following 16 languages:

- English
- German
- Swedish
- Danish
- Finnish
- Japanese
- Italian
- Spanish
- Portuguese
- Dutch
- Russian
- French
- Norwegian
- Chinese (Traditional)
- Greek
- Chinese (Simplified)

The translations are included in Menu descriptions, Soft Key labels and on Info Functions to ease operation. See also Par. 6.0.7. Set the language to be displayed on menus, data pages, warning/alarm messages, full/quick info, list of objects found by find/nearest function, and on charts (such as place's names and buoy's names and so on). The selection now includes the capability to display languages in non-Latin characters (UNICODE format). To select the language you want:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **GENERAL SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **LANGUAGE** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Another popup window will be shown with the available languages, move the ShuttlePoint knob to the desired language and press **[ENT]** or move the ShuttlePoint knob to the right.

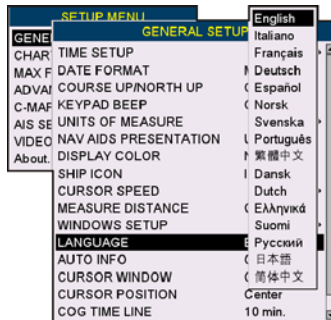


Figure 3.5 - Language Selection Menu

- Press **[CLR]** or move the ShuttlePoint knob to the left to exit the menu and show the Chart page.

NOTE

If the selected language is not available on cartographic data, English is used.

HOW TO RESET LANGUAGE if unable to understand current selected language

If you have accidentally selected a language and are unable to return to the Language Selection Menu, perform the following procedure:

- Select the Chart page.
- Press **[MENU]** two times, move the Shuttlepoint knob to highlight the first (top) selection in the menu and press **[ENT]**.
- Move the Shuttlepoint knob to highlight the **LANGUAGE** item and press **[ENT]**.
- A language window will be shown, select your language and press **[ENT]**.

3.6 SELECTING PAGES USING SOFT KEYS

The Soft Keys located under the LCD are used to select the pages quickly without the need to go into the menu. The default pages are VIDEO, NAV, HIGHWAY, CELESTIAL, CHART and LIST.

When one of the Soft Keys is pressed popup windows above each Soft Key are shown with the key description. Press the Soft Key with the desired page description and the GPS Chart Plotter will change to that page.

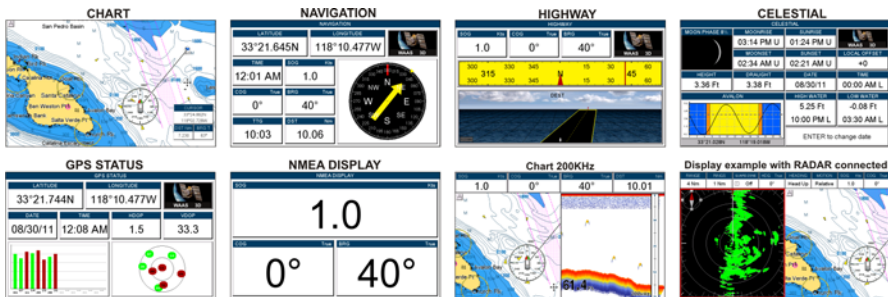


Figure 3.6 - Screen display pages

3.7 CUSTOMIZING THE SOFT KEYS

The Soft Keys can be individually customized from the default pages (discussed above) to the following: CHART, DUAL CHART, CHART/COMPASS, CHART/HIGHWAY, NAVIGATION, HIGHWAY, CELESTIAL, GPS STATUS, DSC LOG, DSC DIRECTORY, NMEA DISPLAY, NMEA DATA, DEPTH TREND, WIND SPEED TREND, TEMP TREND, SOG TREND, MARKS/WAYPOINTS, USER C-CARD, AIS LIST, FIND, VIDEO INPUT, 50kHz FULL PAGE, 200kHz FULL PAGE, 50kHz/CHART PAGE or 200kHz/CHART PAGE.

Also when a SI-TEX Radar antenna is connected (USA ONLY), any Soft Key can be customized to show Radar pages, RADAR FULL, RADAR/CHART, RADAR OVERLAY and RADAR/FISH FINDER.

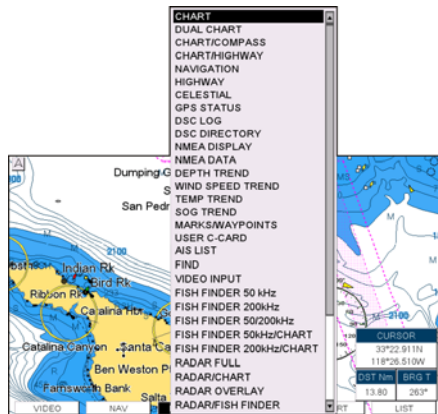


Figure 3.7 - Window options of the selected Soft Key

1. To change, momentarily press any of the Soft Keys, then press and hold the Soft Key you want to customize.
2. A popup window will be shown with the above settings.
3. Move the ShuttlePoint knob up or down to select the desired page.
4. Press **[ENT]** or move the ShuttlePoint knob to the right to save the page to the selected Soft Key.

3.8 SETTINGS IN GENERAL SETUP MENU

The **GENERAL SETUP** menu has other selections that allow you to customize the display. All selections are listed below:

TIME SETUP	Select the Time Zone offset , enable or disable Daylight Savings Time and select the Time Format and switch between 12 or 24 hours time format.
DATE FORMAT	Select the Date format among MM-DD-YY (default), DD-MM-YY or YY-MM-DD .
COURSE UP/NORTH UP	Select North Up (the top of the page is fixed to North) or Course Up (the top of the page is orientated to the direction the vessel is heading. This is the default).
KEYPAD BEEP	Allows the beep produced when a key is pressed to be turned On (default) or Off .
UNITS OF MEASURE	Units of Measure can be selected for Distance , Speed , Depth , Altitude and Temperature : Distance : selections are Nm (Nautical Miles), Sm (Statue Miles), Km (Kilometres), Nm+Mt , Nm+Ft . Note when "Nm+Ft" is selected if the distance is less than 1.0 Nm, it turns to Ft. When "Nm+Mt" is selected if the distance is less than 1.0 Nm, it turns to Meters. Speed : selections are Kts (knots), MPH (miles per hour), Kmh (kilometre per hour). Depth : selections are Ft (feet), FM (fathoms) and Mt (meters). Altitude : selections are Ft (feet) and Mt (meters). Temperature : selections are F (Fahrenheit) and C (Celsius).
NAV AIDS PRESENTATION	Allows the Nav-Aids presentation to be drawn using NOAA symbology when US (default) is selected or International symbols when International is selected. When selected these functions affect how the icons for Lights, Signals, Buoys and Beacons are displayed.
DISPLAY COLOR	Changes the background colors of the chart page to enhance the visibility of the screen depending on the surrounding light conditions. Normal is recommended when the GPS Chart Plotter is not exposed to the direct sunlight. When this mode is set the charts are displayed in order to use colors as similar as possible to ones used in the original paper charts. Classic uses vivid chart colors presentation. NOAA allows setting NOAA paper chart colors presentation. Night is recommended when the environment is dark in order to reduce the glare of the display. The GPS Chart Plotter displays charts and screen in


darker colors. **Sunlight** (default) is designed to enhance the visibility of the screen when the GPS Chart Plotter is exposed to sunlight. The charts are much brighter than in the other modes and the depth areas are filled with the white color so different depth areas are not easily distinguishable.

SHIP ICON Select from a variety of ship icons that represent your vessels position on the Chart page. The default is Icon 6.


CURSOR SPEED Selects the speed among **Low**, **Medium** (default) and **High** for the cursor in the CHART page and within the MENU.

MEASURE DISTANCE When this function is On, and the ShuttlePoint knob is moved to a location where you want to start measuring a distance and press **[ENT]**. Move the ShuttlePoint knob to move the cursor to a second location where you want to finish measuring a distance and press **[ENT]**. A line will appear between the Start and Finish points and a popup window will be shown indicating the distance and bearing from the Start and Finish points. Press **[ENT]** to delete both points. (Off is the default).

START point

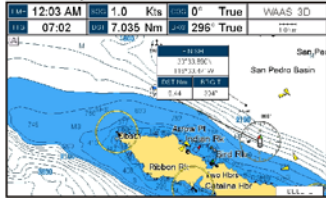

FINISH point

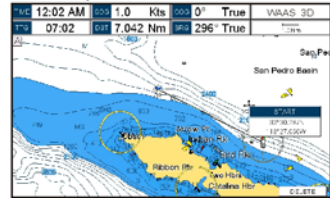


WINDOWS SETUP This menu selection allows the data windows to be customized on the CHART PAGE and NAVIGATION PAGE (refer to section 12.0.0).


LANGUAGE Allows changing the language for menus and data screens.

AUTO INFO When the cursor is moved over a buoy, Mark or other item a popup window will show information of the item. This menu item allows the window to be turned Off, **On Points** (default) or **On All**.


Auto Info OFF

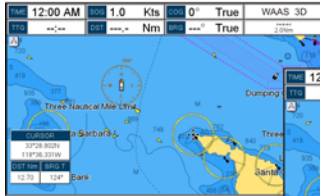

Auto Info ON POINTS

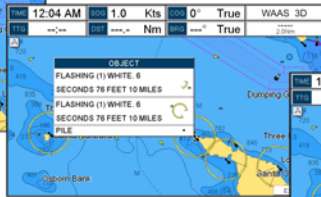

Auto Info ON ALL

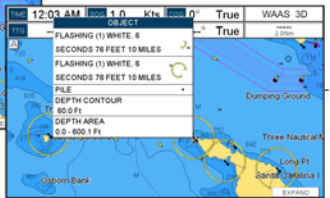

CURSOR WINDOW By default when the cursor is moved a window is shown with the Lat/Lon Distance and Bearing from the vessels location to the cursor. This selection allows the window to be turned On (default) or Off. The Cursor Window is automatically disabled when General is set in Windows Setup option.

Cursor Window ON



Cursor Window OFF



CURSOR POSITION	The position of the cursor can be customized so it is centered in the middle (if Center selected) or centered on the bottom of the Chart page (if Bottom selected, default).
COG TIME LINE	It is a line projected from the ship icon which indicates the distance your vessel will travel at the current speed. Selections are 2, 10 (default), 30 minutes, 1, 2 hours and infinite.
COMPASS ROSE	Allows selection of compass direction indication around ship icon. The default is On.




BUILT-IN CHARTS	Enables (On) or disables (Off) the Built-In Charts. The default is On.
------------------------	--

3.9 ABOUT PAGE

From Main Menu page it is possible to select the About page containing Software, Chart and optional devices information.

① Software System Information

CHARTING OPERATING SYSTEM. Copyright (C) 2011 JEPPESEN Italia S.r.l.		
Software	XXXXXXXX YYYY	①
NTSL	V7.7.25 R (23/04/2010)	
KERNEL	V1.62.0 R (1/10/2010)	
FILE SYSTEM	V3.30.0 R (1/06/2009)	
BIOS	V1.5.16 R (09/03/2010)	
GPS	Generic	
FF LIBMODULE	V1.32.00R (16/10/2009) FF 520	
RADAR LIBMODULE	V1.20.00R (20/05/2009) SIMULATION (S/N: FFFF)	
C-WEATHER	V1.20.00 R (1/09/2009)	
INTCHART 1	-WW-M012.03 MARINE FRESHWATER WWBK	②
BUILT-IN CHARTS:	NA-2D10.00	
C-CARD	: M-NA-MS32.00 LOS ANGELES and SAN PEDRO BAYS	
User Points	3000	
Routes	50	
Track Points	10000	
Tracks	20	
MOBILARM	Function not activated	③
		
MENU for System Update Menu		

② Cartography Information

③ Storage Capacity

Figure 3.9 - Example of About page

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **About...** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. The Information page appears on the screen (see the previous Figure).
4. Press **[CLR]** or move the ShuttlePoint knob to the left to exit and show the Chart page.

4. FIND SERVICES

4.0 USING FIND SERVICES & MORE FUNCTIONS

The CP390i and CPF390i have a dedicated **[FIND]** key that allows searching the optional C-MAP BY JEPPESEN NT+/MAX C-CARD for Port Services, Ports, Tide Stations, Wrecks, Obstructions, Points Of Interest, Lakes, User Points, GPS Coordinates or Information on any point on the chart.

4.0.0 Port Services

This feature is used to locate Port Services nearest the position of your vessel. The table below shows a list of some of the available Port Services and icons shown on the Chart page:

 HEALTH EMERGENCY	 HARBOUR MASTER	 COAST GUARD	 ENGINE REPAIRS	 FUEL STATION	 WATER	 PROVISIONS	 CAR PARKING	 SEWERAGE PUMP-OU...	 PUBLIC TELEGRAPH	 PUBLIC RADIO	 TRANSPD. SERVICES
 ELECTRICITY	 POLICE	 CUSTOMS... POLICE	 BOAT YARD	 ACCESSOR. ELECTRON...	 ELECTRICAL REPAIRS	 COMMERCIAL FISHING SE...	 OTHER MARIN...	 TOWING SERVICES	 PORT PARTNER	 BAIT/TACKLE SHOP	 OFFICE SERVICE
 SAILMAKER	 FISHING/DI... GEAR,SCU...	 PHARMACY	 SLIPWAY	 BOAT HOIST	 CRANE	 NEWSSTAND	 CHARTER	 LAND BASED VESSEL ST...	 AIRPORT	 HULL REPAIRS	 SPORT ACTIVITY
 CHANDLER	 GAS	 PARKING FOR BO...	 YC	 HOTEL/INN	 RESTAUR...	 BOAT RENTAL	 FLOODLIT BERTHS	 INTERNET POINT	 FIRST AID	 BOUTIQUE	 BAR
 BANK/EXC... OFFICE	 SHOWERS	 LAUNDRE...	 PUBLIC TOILETS	 PUBLIC TELEPHONE	 REFUSE BIN	 WATCHING SERVICE	 DIVERS	 MOORING SERVICE	 PROVISION DELIVERY		

Figure 4.0.0 - Port Services Table

1. Press **[FIND]**.
2. Move the ShuttlePoint knob to highlight **PORT SERVICES** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. A popup window will be shown with a list of different Port Services.
4. Move the ShuttlePoint knob to highlight the desired type of service and press **[ENT]**.
5. Another popup window will appear displaying the distance and position of the services closest to your location.
6. Using the ShuttlePoint knob, highlight the desired service and press **[ENT]**. This will show information about the service.
7. Press **[CLR]** to show the actual position of the service on the Chart page.
8. Press **[CLR]** again at any time to return your cursor to your vessel's position.

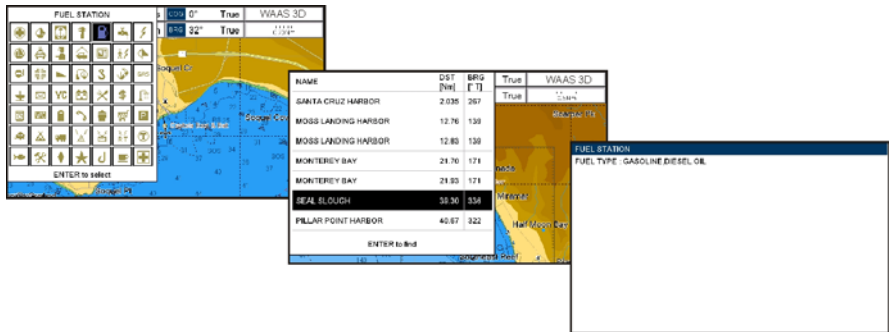



Figure 4.0.0 - Find Port Services

4.0.1 Port


A Port is represented with a  on the Chart page. This feature is used to locate the 20 nearest Ports to the position of your vessel.

1. Press **[FIND]**.
2. Move the ShuttlePoint knob to highlight **PORT** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. A popup window will be shown with a list of nearest Ports.
4. Move the ShuttlePoint knob to highlight the desired Port and press **[ENT]**.
5. Another window will appear displaying the details of the selected Port.
6. Press **[CLR]** to show the actual position of the Port on the Chart page.
7. Press **[CLR]** again at any time to return your cursor to your vessel's position.



Figure 4.0.1 - Find a Port


4.0.2 Tide Stations

A Tide Station is represented with a  on the Chart page. This feature is used to locate the 20 nearest Tide Stations to the position of your vessel. Once a Tide Station is selected the Tide Graph can be used to determine Tide height and draught of the Tide based on a user-specified time.

1. Press **[FIND]**.
2. Move the ShuttlePoint knob to highlight **TIDE STATIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. A popup window will be shown with a list of nearest Tide Stations.
4. Move the ShuttlePoint knob to highlight the desired Tide Station and press **[ENT]**.
5. Another window will be shown detailing the selected Tide Station information.
6. Press **[CLR]** to show the actual position of the Tide Station on the Chart page.

7. Press **[CLR]** again at any time to return your cursor to your vessel's position.

NAME	DIST	BRG	True	WAAS 3D
NEWPORT BAY ENTRANCE, CORO	1.342	87	True	
BALBOA PIER, NEWPORT BEACH	2.126	87		
NEWPORT BAY	2.126	76		
LOS PATOS HIGHWAY BRIDGE	6.718	318		
LONG BEACH, OUTER HARBOR, PL	17.28	305		
LONG BEACH, INNER HARBOR	17.88	307		
LONG BEACH, MIDDLE HARBOR	18.13	302		
SAN CLEMENTE	18.81	124		
LOS ANGELES HARBOUR	18.85	284		



TIDE INFO			
HEIGHT	DRAUGHT	SUNRISE	SUNSET
3.79 Ft	3.80 Ft	01:04 PM U	02:33 AM U
NEWPORT BAY ENTRANCE, CORONA DEL MA			
HIGH WATER			5.70 Ft
LOW WATER			09:45 PM L
LOW WATER			-1.02 Ft
DATE	LOCAL OFFSET	TIME	
04/30/10	+0	00:02 AM L	04:30 AM L


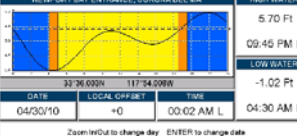


Figure 4.0.2 - Tide Stations

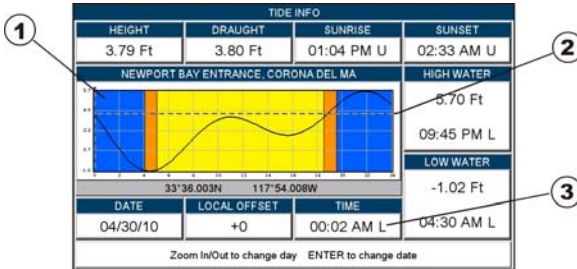

TIDE INFO			
HEIGHT	DRAUGHT	SUNRISE	SUNSET
3.79 Ft	3.80 Ft	01:04 PM U	02:33 AM U
NEWPORT BAY ENTRANCE, CORONA DEL MA			
HIGH WATER			5.70 Ft
LOW WATER			09:45 PM L
LOW WATER			-1.02 Ft
DATE	LOCAL OFFSET	TIME	
04/30/10	+0	00:02 AM L	04:30 AM L

Figure 4.0.2a - Tide Graph page

Refer to the image above. The time **③** displayed corresponds to the location of the cross-hair cursor **②** in the Tide Graph **①**. Moving the ShuttlePoint knob to the left or right changes the time, and moving the ShuttlePoint knob up or down selects the Tide height and Tide draught on the Tide Graph.

NOTE

The Local Offset matches the Time Offset entered in the Time Setup Menu (see Par. 3.2)

4.0.3 Wrecks

This feature is used to locate the 20 nearest Wrecks to the position of your vessel. A Wreck is represented with an icon on the chart. See the following table:

ICON	DESCRIPTION
++	non-dangerous wreck
⊕	dangerous wreck
# [Foul]	distributed remains of wreck
⊕ Masts	wreck showing mast/masts
✈	wreck showing any portion of hull or superstructure

Figure 4.0.3 - Wreck icons Table

1. Press **[FIND]**.
2. Move the ShuttlePoint knob to highlight **WRECKS** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. A popup window will be shown with a list of nearest Wrecks.
4. Move the ShuttlePoint knob to highlight the desired Wreck and press **[ENT]**.
5. Another window will be shown detailing the Wreck information.
6. Press **[CLR]** to show the actual position of the Wreck on the Chart page.

7. Press **[CLR]** again at any time to return your cursor to your vessel's position.



Figure 4.0.3a - Find Wrecks

4.0.4 Obstructions

This feature is used to locate the 20 nearest Obstructions to the position of your vessel. An Obstruction is represented with an icon on the chart, see the following table:

ICON	Obstrn	Mast (12)	#	#	#	#	#	#	Obstrn
DESCR.	snag / stump	wellhead	diffuser	crib	fish haven	foul area	foul ground	ice boom	ground tackle


Figure 4.0.4 - Obstruction icons Table

1. Press **[FIND]**.
2. Move the ShuttlePoint knob to highlight **OBSTRUCTIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. A popup window will be shown with a list of nearest Obstructions.
4. Move the ShuttlePoint knob to highlight the desired Obstruction and press **[ENT]**.
5. Another window will be shown detailing the Obstruction information.
6. Press **[CLR]** to show the actual position of the Obstruction on the Chart page.
7. Press **[CLR]** again at any time to return your cursor to your vessel's position.



Figure 4.0.4a - Find Obstructions

4.0.5 Lakes Information

A Lake Info is represented with a  on the Chart page. This feature is used to find information on the 20 closest Lakes near the position of your vessel.

NOTE

An optional MAX Lake CARD must be inserted into the GPS Chart Plotter to take advantage Lakes Information. The available MAX Lake CARDS are: NA-M017 USA: North; NA-M018 USA: East; NA-M019 USA: South; NA-M020 USA: West; NA-M029: Alaska; NA-M048: Canada.

1. Press **[FIND]**.
2. Move the ShuttlePoint knob to highlight **LAKES INFORMATION** and press **[ENT]** or move the ShuttlePoint knob to the right.

3. A popup window will be shown with a list of Outdoor Recreational Area objects.
4. Move the ShuttlePoint knob to highlight the desired object and press **[ENT]**.
5. Another popup window will appear displaying the distance and position of the Lakes closest to your location.
6. Using the ShuttlePoint knob, highlight the desired Lake and press **[ENT]**. This will show information on the Lake.
7. Press **[CLR]** to show the actual position of the Lake on the Chart page.
8. Press **[CLR]** twice to return your cursor to your vessel's position.

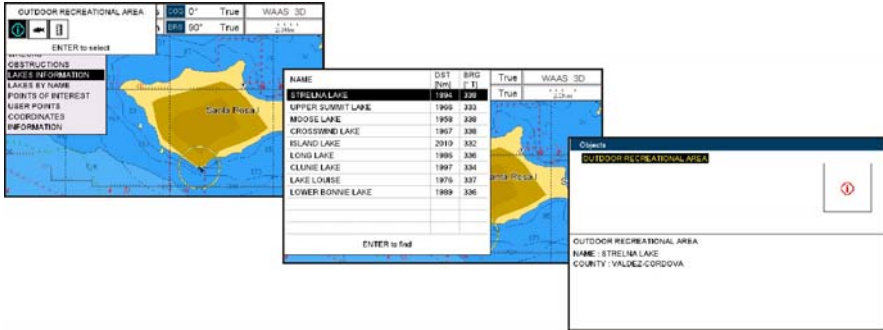


Figure 4.0.5 - Find Lakes Information

4.0.5.0 Quick Info On Lakes

Upon viewing the chart of a lake, you can click on the Lake Info icon to query the available information immediately displayed with many details. For example, see the following picture:



Figure 4.0.5.0 - Example of Lakes info

When the cursor is placed over the icon, the icons of the available services are shown:



Figure 4.0.5.0a - Quick Info: available services

If you press **[ENT]** all available information about the cartographic point under the cursor will be shown. See the next paragraph.

4.0.5.1 Full Info On Lakes

The following is an example of Full Info on Lakes:

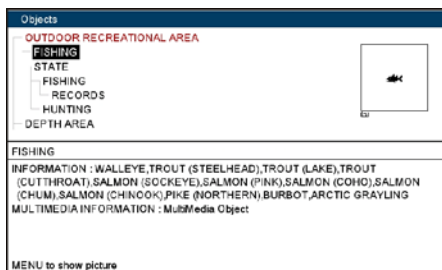


Figure 4.0.5.1 - Example of Full Info page

To see the "Fishing" object press **[MENU]** (when the "Fishing" object is highlighted). On the screen appears:

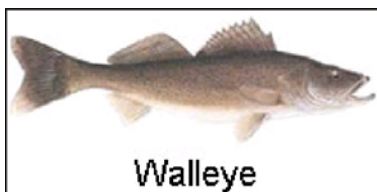


Figure 4.0.5.1a - Example of picture associated to the Fishing object

4.0.6 Lakes By Name

This feature is used to locate Lakes By Name nearest the position of your vessel.

1. Press **[FIND]**.
2. Move the ShuttlePoint knob to highlight **LAKES BY NAME** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. A popup window will be shown with a list of nearest Lakes.

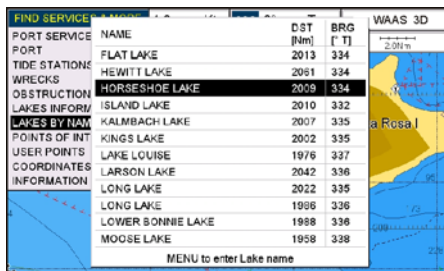


Figure 4.0.6 - Find Lakes By Name

4. Move the ShuttlePoint knob to highlight the desired Lake. Otherwise press **[MENU]** to enter the desired Lake name. A window will be shown: move the ShuttlePoint knob to highlight the edit of Lake name and press **[ENT]** to accept: another popup window will

appear displaying the distance and position of the Lake.

5. Press **[ENT]** to show the actual position of the Lake on the Chart page.
6. Press **[CLR]** twice to return your cursor to your vessel's position.

4.0.7 Points Of Interest

This feature is used to locate Points Of Interest nearest the position of your vessel.

1. Press **[FIND]**.
2. Move the ShuttlePoint knob to highlight **POINTS OF INTEREST** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. A (Category) popup window will be shown with a list of Category types (i.e. attractions, emergency, entertainment).
4. Move the ShuttlePoint knob to highlight the desired Category and press **[ENT]**.
5. A (Type) popup window will be shown with a list of types.
6. Move the ShuttlePoint knob to highlight the desired Type and press **[ENT]**.
7. A popup window will be shown with a list of nearest Points Of Interest that fall into the Category and Type you have selected.
8. Move the ShuttlePoint knob up/down to highlight the desired Point Of Interest and press **[ENT]**.
9. Another window will be shown with detailing the Point Of Interest information.
10. Press **[CLR]** to show the actual position of the Point Of Interest on the Chart page.
11. Press **[CLR]** again at any time to return your cursor to your vessel's position.



Figure 4.0.7 - Find Points Of Interest

4.0.8 User Points

This feature is used to search for User Points (Marks and Waypoints you have created and stored) by name quickly and efficiently.

1. Press **[FIND]**.
2. Move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. The (Select Name) popup window will appear. This window will allow you to enter in the name of the User Point you wish to locate.
4. Move the ShuttlePoint knob up/down to change each number or letter and left/right to move to the next or previous position in the name of the Mark.
5. Once the name of the desired Mark reads in the (Select Name) window, press **[ENT]** to show the location the Mark on the Chart page.

- Press **[CLR]** at any time to return your cursor to your vessel's position.



Figure 4.0.8 - Find User Points (Marks and Waypoints)

4.0.9 Coordinates

This feature allows you to enter Coordinates (Latitude/Longitude) and view the entered position on the Chart page.

- Press **[FIND]**.
- Move the ShuttlePoint knob to highlight **COORDINATES** and press **[ENT]** or move the ShuttlePoint knob to the right.
- A (Coordinate) popup window will be shown to allow you to enter in a specified Latitude and Longitude.
- Move the ShuttlePoint knob up/down to change each number or letter and left/right to move to the next or previous position in the Coordinates.
- Once the Coordinates are entered, press **[ENT]** to show the location the Mark on the Chart page.
- Press **[CLR]** at any time to return your cursor to your vessel's position.

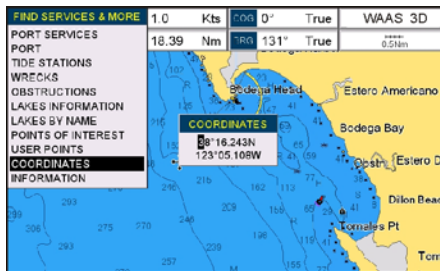


Figure 4.0.9 - Find GPS Coordinates

4.0.10 Information

This feature allows you to obtain information on any position on the Chart page.

- Press **[FIND]**.
- Move the ShuttlePoint knob to highlight **INFORMATION** and press **[ENT]** or move the ShuttlePoint knob to the right.
- A page will be shown with objects information. The upper side of the page contains the Info Tree and the lower side contains the expanded information. While moving the ShuttlePoint knob through the Info Tree, all the relevant information of the selected object is shown on the lower part of the page.

4. Press **[CLR]** again at any time to return your cursor to your vessel's position.

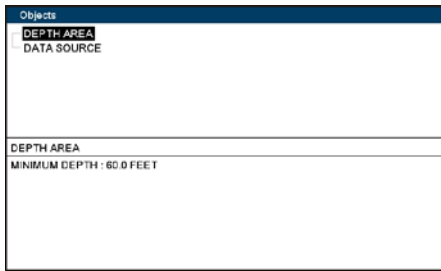


Figure 4.0.10 - Find Information

5. MAX CARTOGRAPHY OVERVIEW

5.0 BUILT-IN CHARTS

5.0.0 Coverage areas and details

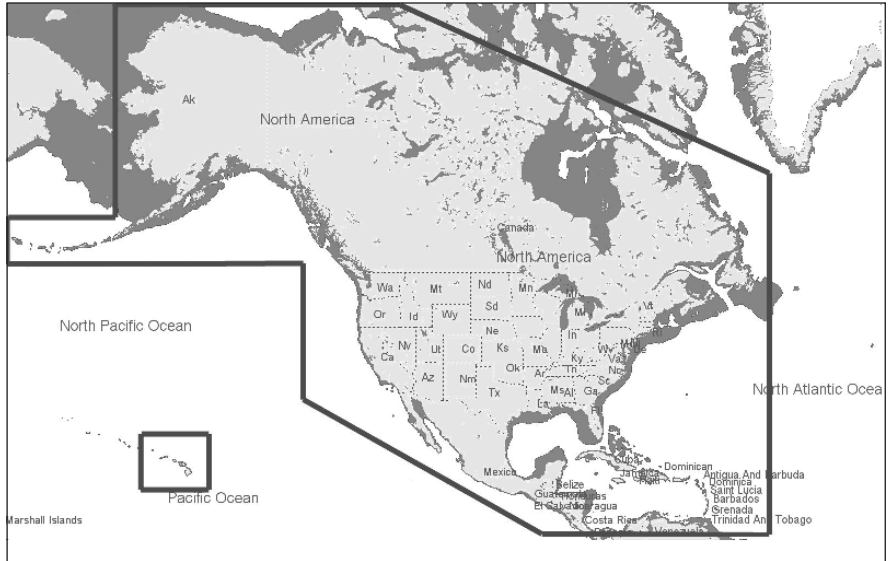


Figure 5.0.1 - Coverage Area

The CP390i and CPF390i have Built-In Charts for coastal navigation of USA including Alaska, Hawaii and Great Lakes, Canada, Bahamas, Caribbean, Cuba, Puerto Rico, and Central America which include:

- Depth Contours and Spot Soundings to 66Ft (20Mt) on lower scale charts and 33Ft (10Mt) on higher scale charts
- All Nav-Aids with icon
- Tidal diamond symbols on Chart page
- Marina symbol with name and the list of services symbols

5.0.1 Updating Built-In Charts

The Built-In Charts can be updated by purchasing a Chart Update Card from your local marine electronics dealer or C-MAP USA at (800) 424-2627.

This Chart Update Card may be used ONE time to update the charts in a GPS Chart Plotter. After the updating, the Chart Update Card will not update other GPS Chart Plotters.

After purchasing the Chart Update Card, follow the procedure below to update the charts.

- Turn Off the GPS Chart Plotter.
- Insert the Chart Update Card into the slot.

3. Press and hold **[PWR]** to turn the GPS Chart Plotter On.
4. The GPS Chart Plotter's display will show a message that the Built-In Charts are being uploaded.
5. After uploading the GPS Chart Plotter will check to ensure the charts have been loaded correctly and show a message.

NOTE

If the message shows the charts were not updated correctly, follow steps 1-4 again. If the GPS Chart Plotter shows a error message again, contact C-MAP USA at (800) 424-2627 for assistance.

5.1 INSERTING THE OPTIONAL MAX C-CARD

Hold the C-CARD by the long inclined side so that you can see the C-MAP BY JEPPESEN label.

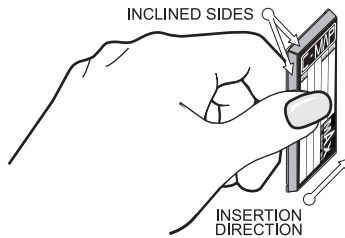


Figure 5.1 - Inserting C-CARD

Open the door, gently push the C-CARD into the slot: push the C-CARD in as far as it will go, then close the door.

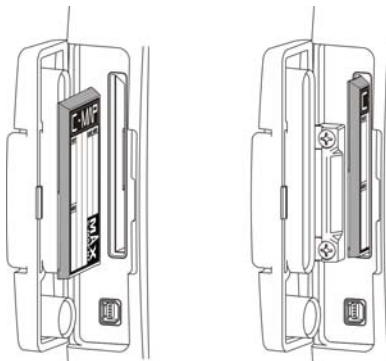


Figure 5.1a - Inserting C-CARD (details)

NOTE

The small connector below the C-CARD is only used by STANDARD HORIZON repair technicians.

Key points are:

Data Features

- **ISO Certification** (*electronic chart production process with quality certification*)

- **Extra Large Coverage** (all the C-MAP electronic chart detail and a huge coverage without having to change cartridge)
- **Official data source** (data based on use of official data sources Hydrographic Offices Release)
- **Detailed World Background** (worldwide background chart with details)
- **Depths & Land Elevation** (color shading of sea depth and land altitude for improved chart appearance)
- **Bathymetric & Spot Soundings** (Data Base with depth and bathy information for an extraordinary view of the seabed depth)
- **Detailed Port Plan to information** (complete port and marina charts with detail)
- **Search & Find** (quickly locates chart contents and objects)
- **Tides Preview** (allows viewing of current, future and past tide cycles of specific NOAA Tide Stations)
- **Dynamic Currents** (current arrows showing speed and direction of current, future and past currents)
- **Dynamic Nav-Aids** (selection to enable the Nav-Aids to blink to their specifications and appear on the chart in color)
- **Port Info** (searchable data base of service in ports)
- **Enhanced Port Info & Roads** (searchable data base of detailed information that include facilities and services in ports and surrounding areas)
- **Object Info** (moving cursor over object to show restricted area details and related information)
- **Quick Info** (moving cursor over wrecks, shoals, Nav-Aids to show restricted area details and related information and object to show details)
- **Photos & Diagrams** (high definition pictures of ports, piers, bridge diagrams and nav-aids)
- **Multilanguage Support** (allows the GPS Chart Plotter to show language of your choice in using proper character set for Asian and other countries)
- **True-Type Font** (improves text on chart for optimal reading)

Presentation Features

- **Clear View** (advanced legibility techniques providing more chart data on the screen)
- **Clear Info** (sophisticated "Human Dictionary" to translate Nav-Aid abbreviations found on paper charts)
- **Flexi-Zoom** (increased Under and Over Zoom between chart levels, resulting in optimal scale display for any situation)
- **Perspective View** ("Real World" perspective view of the chart, updated real-time during navigation)
- **Enhanced Mixing Levels** (seamless data presentation)
- **Off-line redraw** (cartography level transition without image construction)

Cartographic Data related Features

- **Guardian Alarm** (the Guardian Alarm is a user defined area in front of your vessel to alert you while navigating of possible obstacles on the chart)
- **Safety Status Bar** (status bar with six boxes to show the status of certain functions. Any warning or alarm condition is identified by the red color to indicate possible risk)
- **Safety Route Check** (sophisticated function that checks for dangerous objects along your navigation route)

6. MAP FUNCTIONS

6.0 MAX FUNCTIONS MENU

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **MAX FUNCTIONS** and press **[ENT]** or move the ShuttlePoint knob to the right. The MAX FUNCTIONS Menu appears on the screen:

MAX FUNCTIONS	
ZOOM TYPE	Standard
ICONS SIZE	Standard
PLACE NAMES SIZE	Standard
PERSPECTIVE VIEW	Off
DYNAMIC NAV-AIDS	On
SAFETY STATUS BAR	Off
SATELLITE IMAGER Y	On
CURRENTS PREDICTION	
CHART LANGUAGE	

Figure 6.0 - Max Functions Menu

The available Max Functions Menu is described in the following.

6.0.0 Zoom Type

Zoom Type refers to the chart scale selection. It has two options: Standard (default) or Flexi-Zoom. When Zoom Type is set to Flexi-Zoom, a short **[ZOOM IN]/[ZOOM OUT]** push causes a change of chart level, while a long **[ZOOM IN]/[ZOOM OUT]** push (press and hold) causes an expansion or compression of the chart image, without a chart level change.

CHART: US,NOS,GRAPH,11428D
SCALE: 1:40000


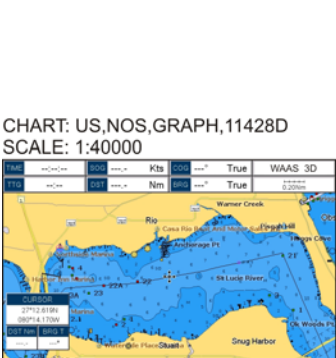


CHART: US,NOS,GRAPH,11474
SCALE: 1:80000

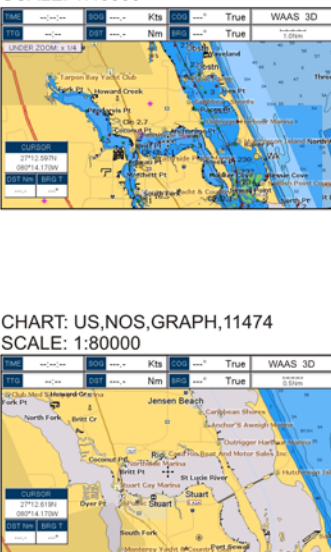

The figure illustrates the Zoom Type function. It shows two examples of the chart display. The first example is at a scale of 1:40000, showing a coastal area with various landmarks and water depths. A callout labeled 'LONG PUSH ZOOM OUT' points to the zoom controls. The second example is at a scale of 1:80000, showing a different coastal area with more detail. A callout labeled 'SHORT PUSH ZOOM OUT' points to the zoom controls.

Figure 6.0.0 - Zoom Type

Note that in the top of the previous picture the chart scale remains the same but it is graphically compressed.

By pressing [**ZOOM IN**]/[**ZOOM OUT**] a popup window is displayed on a corner of the chart screen. The window shows the current zoom factor: Normal is the original chart level (1:1 scale), Over-Zoom x2, x4, x16, x32, Under-Zoom x1/2, x1/4.

To activate this function follow the procedure:

1. Press [**MENU**], move the ShuttlePoint knob to highlight **SETUP MENU** and press [**ENT**].
2. Move the ShuttlePoint knob to highlight **MAX FUNCTIONS** and press [**ENT**] or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **ZOOM TYPE** and press [**ENT**] or move the ShuttlePoint knob to the right.
4. The menu now shows two selections, **STANDARD** or **FLEXI-ZOOM**.
5. Move the ShuttlePoint knob to select the selection and press [**ENT**].
6. Press [**CLR**] until the menu disappears or an easier method is to move the ShuttlePoint knob to the left a few times.

6.0.1 Icon Size

On MAX charts it is possible to set the size of all icons drawn on the charts, selecting between Standard (default) and Large size.

ICONS SIZE standard



ICONS SIZE large



Figure 6.0.1 - Icons Size


To activate this function follow the procedure:

1. Press [**MENU**], move the ShuttlePoint knob to highlight **SETUP MENU** and press [**ENT**].
2. Move the ShuttlePoint knob to highlight **MAX FUNCTIONS** and press [**ENT**] or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **ICONS SIZE** and press [**ENT**] or move the ShuttlePoint knob to the right.
4. The menu now shows two selections, **STANDARD** or **LARGE**.
5. Move the ShuttlePoint knob to select the selection and press [**ENT**].
6. Press [**CLR**] until the menu disappears or an easier method is to move the ShuttlePoint knob to the left a few times.


6.0.2 Place Name Size

On MAX charts it is possible to set the size of all names drawn on the charts, selecting between Standard (default), Medium and Large size.

PLACE NAMES SIZE standard

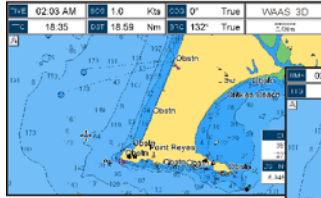

PLACE NAMES SIZE medium

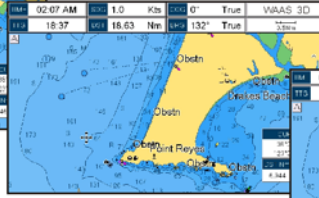

PLACE NAMES SIZE large

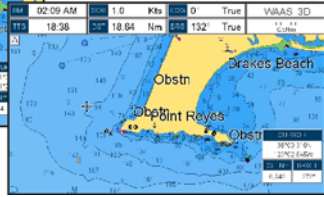


Figure 6.0.2 - Place Names Size

To activate this function follow the procedure:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **MAX FUNCTIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **PLACE NAMES SIZE** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. The menu now shows three selections, **STANDARD**, **MEDIUM** or **LARGE**.
5. Move the ShuttlePoint knob to select the selection and press **[ENT]**.
6. Press **[CLR]** until the menu disappears or an easier method is to move the ShuttlePoint knob to the left a few times.

6.0.3 Perspective View

The Chart page may be show in a perspective (fly over) or normal mode during navigation. Perspective view of the chart is a type of “bird’s eye” view of a chart, and give you a more realistic perspective of the chart. As the upper side of the chart is more compressed than the lower side, a wider chart area is visible, so it allows showing more chart information immediately ahead and around the cursor.

Perspective View ON



Perspective View OFF

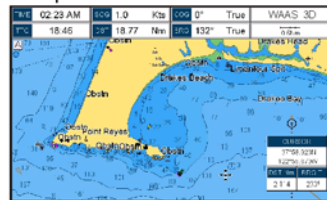


Figure 6.0.3 - Perspective View

To activate this function follow the procedure:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **MAX FUNCTIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **PERSPECTIVE VIEW** and press **[ENT]** or move

the ShuttlePoint knob to the right.

4. The menu now shows two selections, **ON** or **OFF**.
5. Move the ShuttlePoint knob to select the selection and press **[ENT]**.
6. Press **[CLR]** until the menu disappears or an easier method is to move the ShuttlePoint knob to the left until the Chart page is shown.

6.0.4 Dynamic Nav-Aids

This function allows the blinking of the Nav-Aids to be turned On or Off. The blink period and color of each Nav-aid is read from the Nav-Aid attributes stored on the optional C-MAP BY JEPPESEN C-CARD. When the ship is inside the Nav-Aid nominal range, the light of the Nav-Aid will start blinking. When Dynamic Nav-Aids option is set to On, when the flashing light is Off, or when fix position is out of the sector, the light color is displayed by using a faint light color.

To activate this function follow the procedure below:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **MAX FUNCTIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **DYNAMIC NAV-AIDS** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. The menu now shows two selections, **ON** or **OFF**.
5. Move the ShuttlePoint knob to select the selection and press **[ENT]**.
6. Press **[CLR]** until the menu disappears or an easier method is to move the ShuttlePoint knob to the left until the chart page is shown.

6.0.5 Safety Status Bar (DSI - Data Safety Indicator)


When the Safety Status Bar is enabled, a status bar with six boxes show the status of certain functions. Any warning or alarm condition is identified by the red color to indicate possible risk.

To activate this function follow the procedure:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **MAX FUNCTIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **SAFETY STATUS BAR** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. The menu now shows the following selections:

ON: The Safety Status Bar is shown

OFF: The Safety Status Bar is not shown

ICON: In this mode the Safety Status Bar is not shown, rather a Warning Icon  will be shown in the top right corner on the chart page when an alarm condition is met.

5. Move the ShuttlePoint knob to select the selection and press **[ENT]**.
6. Press **[CLR]** until the menu disappears or an easier method is to press the ShuttlePoint knob to the left a few times.



- ① **Normal:** when the chart is displayed at normal scale.
U. Zoom: red when the chart is under-zoomed out more than twice normal scale, gray otherwise.
O. Zoom: red when the chart is over-zoomed in more than twice normal scale, gray otherwise.
No Chart: red when the chart is zoomed in more than twice normal scale, gray otherwise.

Safety Status Bar



- ② Red when a more detailed chart is available under the cursor position.
- ③ Red when at least one of the following objects or layers is turned off (by the user) Depths/soundings; Wrecks/obstructions; Tracks/routes; Attention Areas; Nav-Aids.
- ④ Displays red when clearing overlapping objects.
- ⑤ Red when "Guardian Technology" detects one of the following objects: Land, Intertidal, Depth Area, Rocks, Obstructions, Shoreline Constructions, Fishing Facility, Wrecks, Dragged area, Diffusion area, Mooring facilities, Pingos and Production installations.
- ⑥ Red when "Guardian Technology" detects cautionary or restricted area.

Figure 6.0.5 - Safety Status Bar

6.0.6 Satellite Imagery

This function allows to overlay the Satellite image for background chart. When it is set On, the Palette is set to Normal to display the proper colors.

NOTE

The satellite image is only shown on 100NM, 50NM and 20NM scales.

To activate this function follow the procedure below:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **MAX FUNCTIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **SATELLITE IMAGERY** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. The menu now shows two selections, **ON** or **OFF**.
5. Move the ShuttlePoint knob to select the selection and press **[ENT]**.
6. Press **[CLR]** until the menu disappears or an easier method is to move the ShuttlePoint knob to the left until the Chart page is shown.



Figure 6.0.6 - Example of Satellite Imagery

6.0.7 Currents Prediction

The worldwide database with Tidal stream information is available with MAX C-CARDS. When data/time is available, Tidal stream arrows are shown on the charts, indicating the direction and strength of the Tide:



Figure 6.0.7 - Tidal stream arrows

If no data/time is available from the GPS or the GPS Chart Plotter is not in Simulation Mode, the icon on the chart is generic one. The color of the arrow denotes the strength of the current as follows:

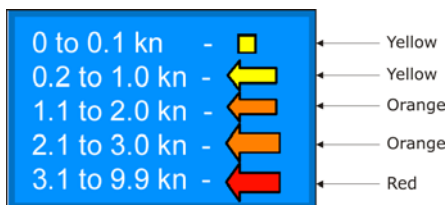


Figure 6.0.7a - Tidal stream arrows table

When the GPS Chart Plotter receives a valid position fix, the Tide icons are shown on the charts on the basis of the current date and time: the screen displays and changes arrows as date/time changes.

It is possible to see the variation of the Tidal arrows on the selected area at any given time. To activate this function follow the procedure:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **MAX FUNCTIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **CURRENTS PREDICTION** and press **[ENT]** or

- move the ShuttlePoint knob to the right.
4. A window is shown on the low-left side of the chart. Press **[SET TIME]** to set the date and time manually, and **[INCR. TIME]/[DECR. TIME]** to decrease/increase time; press **[EXIT]** to exit.

6.0.8 Chart Language

The CP390i and CPF390i may be customized to show the local language of the chart. To select the Chart Language you want:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **MAX FUNCTIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **CHART LANGUAGE** and press **[ENT]** or move the ShuttlePoint knob to the right. A new popup window will appear on the screen. The available functions are described in the table below.

Language	: Allows setting the language to display chart information. The language is chosen among the list of languages available on the cartographic data (data cartridge or embedded charts).
Mode	: Defines how objects are translated. Selections are: <ul style="list-style-type: none"> Off : Enables the language chosen in the Language menu above. If the selected language is not present on the objects information, English is used. English: Always uses English. Local : Uses the Local language present on C-MAP BY JEPPESEN C-CARD. If no Local language is available, English is used.

4. After the selection is made, press **[CLR]** repeatedly or move the ShuttlePoint knob to the left repeatedly until the Chart page is shown.

NOTE

- a. When the Chart Language is changed, the following settings are automatically selected: MODE is set to Off and Chart Language is set to your selection.
- b. If the C-CARD is removed or changed, the Chart Language should be confirmed and changed if necessary.

6.0.9 Pictures and Diagrams

Using optional C-MAP BY JEPPESEN MAX data cards allows you to show pictures or diagrams on the CP390i and CPF390i display. These *Pictures* are typically used to facilitate the identification of cartographic objects or places around the chart: they can be the landscape layout nearby a harbour, the shape of a bridge or of a buoy etc. On some objects, such as bridges, the image associated can represent the *Diagram* representing the shape of the objects and the various characteristics (length, height, type of bridge etc.).

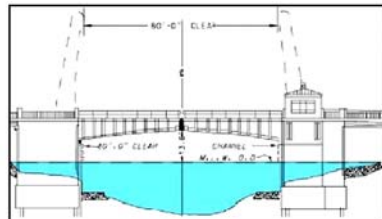


Figure 6.0.9 - Pictures and Diagrams

How to show the Pictures or Diagrams of a Object

They are shown on the Chart page with the camera icon , see the figure below:

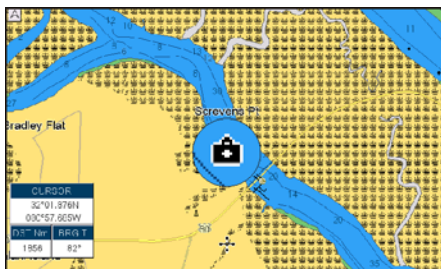


Figure 6.0.9a - Example of camera icon

Move the cursor over the camera icon. You will get the quick info on the object and there is the camera icon on the top bar of the window:

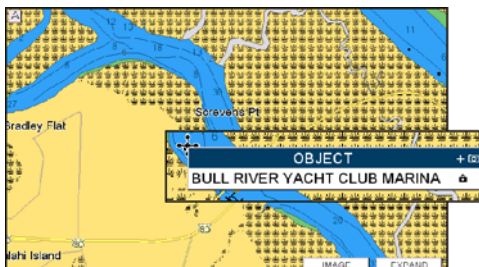


Figure 6.0.9b - Example of Quick Info on camera icon

Press **[IMAGE]** for 1 second to display the image on the screen:



Figure 6.0.9c - Example of displayed image


Otherwise press **[EXPAND]** to open the Full Info on the object. Note that on the Full Info, there is the small camera icon on a corner of the square containing the object icon. To see the picture press **[MENU]** when the object with a picture is highlighted.

When the picture is shown, it is possible to fit it to screen by pressing **[ENT]**, to change the contrast by pressing **[ZOOM IN]** or **[ZOOM OUT]** and to display the next picture associated, if any, by moving the ShuttlePoint knob left or right.

6.0.10 Enhanced Port Info

Optional C-MAP By JEPPESEN MAX C-CARDS include additional Port Services that were not present before.

Additional attributes of Port Areas and Port Marinas have been included as Location, Country, Region, State, Harbour master telephone number etc., see the following figure.

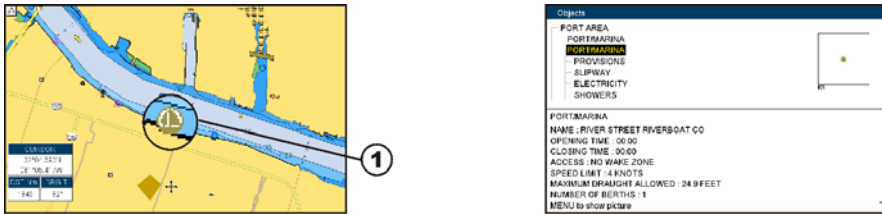

1 PORT icon

Figure 6.0.10 - Example of enhanced Port Info

7. CREATING MARKS

A User Point is an object that you can place on the charts to mark a specific point. The GPS Chart Plotter features two types of User Points: Marks and Waypoints.

- Mark can be a stand alone position or be linked to a Route. A Mark is place on the Chart page using the **[MARK]** key or by entering in information in the Marks/Waypoints List page and selecting **NEW MARK**.
- Waypoints are always liked to a Route. They are placed on the Chart page using the **[ROUTE]** key.

NOTE

The difference between a Mark and a Waypoint is

- a. when a Route is created using Waypoints and the Route is deleted the Waypoints are also deleted.
- b. if a Route is created using Marks and the Route is deleted the Marks remain.

7.0 CREATING A NEW MARK USING THE CHART PAGE

1. Move the ShuttlePoint knob to the desired or approx. Lat/Lon and press **[MARK]**.
2. You will notice a Mark is placed under the location of the cursor and a popup window is shown with the exact Lat/Lon of the Mark.
3. If the position is incorrect press **[EDIT]** that will allow you to change the position, Mark name and icon type. Refer to Par. 7.1 for details.

- ① Mark placed under Cursor
- ② Lat/Lon of Mark, DST/BRG from vessel location
- ③ Press Soft Key to show the Marks/Waypoint List, to edit, to move or to delete Mark
- ④ Vessel location



Figure 7.0 - Mark creation

NOTE

After entering in all the Marks it is a good practice to backup the points to an User C-CARD. Refer to Section 11.

7.1 EDITING A MARK

If a Mark has previously been created and you wish to Edit it, move Cursor over the top of the Mark.

1. After a Mark is created press **[Edit]** to show the edit popup window.



Figure 7.1 - Mark editing

- The Mark Icon is selected, press **[ENT]**. A popup window appears:



Figure 7.1a - Mark Icons

- Move the ShuttlePoint knob to select the desired Mark Icon, when finished press **[ENT]**.
- Move the ShuttlePoint knob to the right to select the Mark Name. Press **[ENT]** and the first digit in the name will be highlighted.
- Move the ShuttlePoint knob up or down to select the first character.
- Move the ShuttlePoint knob to the right to select the next character.
- Repeat steps 4 and 5 until the Mark name is shown. Press **[ENT]**.
- Move the ShuttlePoint knob to the right to select the Lat/Lon and press **[ENT]**.
- Move the ShuttlePoint knob up or down to select the first character.
- Move the ShuttlePoint knob to the right to select the next character.
- Repeat steps 9 and 10 until the desired position is shown. Press **[ENT]** and **[CLR]** to store the Mark.

7.1.0 Deleting a Mark or Waypoint

- Move the ShuttlePoint knob over the Mark or Waypoint to delete.
- Press **[DELETE]**. A popup window will be shown to confirm deleting the point.
- Move the ShuttlePoint knob to highlight **YES** and press **[ENT]**.

7.1.1 Moving a Mark or Waypoint

- Move the ShuttlePoint knob over the Mark or Waypoint you want to move.
- Press **[MOVE]**.
- Use the ShuttlePoint knob to move the cursor. A dotted line, connecting the previous Waypoint position to the new position, is shown:

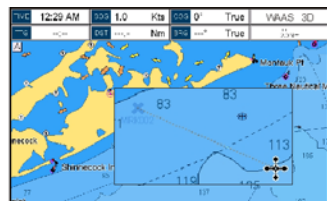


Figure 7.1.1 - Moving Mark or Waypoint (1)

4. Press **[ENT]** (**[CLR]** to abort the move), the Waypoint appears in the new position.

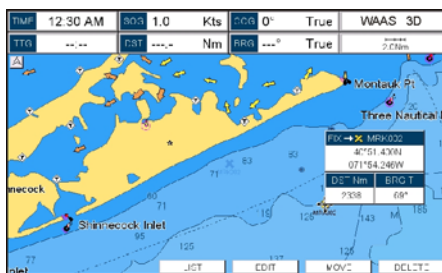


Figure 7.1.1a - Moving Mark or Waypoint (2)

7.2 MARKS/WAYPOINTS LIST

The **MARKS/WPTS** List shows all the Marks and Waypoints that have been stored into the GPS Chart Plotter. This page also allows you to:

ICON	Sorts by icon type. Selections are: <ol style="list-style-type: none"> SELECT : only User Points with the selected icon are shown ALL : all User Points are shown
FIND	Searches through the Marks or Waypoints to find a point by name using the ShuttlePoint knob.
LOCATE	Shows the position of a Mark or Waypoint on the Chart page.
EDIT	Edits a previous stored Mark or Waypoint.
SORT	Sorts the name of User Points. Selections are: <ol style="list-style-type: none"> A-Z ASCENDING : sorts the name of the Mark or Waypoint in ascending order Z-A DESCENDING : sorts the name of the Mark or Waypoint in descending order
NEW MARK	Enters in Marks, editing icon type and position.
MODE	Controls how the Marks or Waypoints are shown on the Chart page. Selections are: <ol style="list-style-type: none"> SHOW : icon and name are shown ICON : only icon (no name) is shown HIDE : Mark or Waypoint is hidden SHOW ALL : all Marks or Waypoints are shown ICON ALL : all icons are shown without name HIDE ALL : all Marks or Waypoints are hidden
DELETE	Allows to delete the selected point.
DEL ALL	Allows to delete all stored points.
SEND*	Sends the stored points to an external device (PC) capable of listening to NMEA WPL and RTE sentences.
RECEIVE*	Receives points from an external device (PC) that is capable of sending NMEA WPL sentence.

NOTE *

The **SEND** and **RECEIVE** functions are used to receive or transmit User Points (Marks and Waypoints) to and from a Personal Computer (see also Par. 2.9).

MARKS / WAYPOINTS																		
SYM	NAME	TYPE	LATITUDE LONGITUDE	DEPTH DEPTH	MODE													
+	HOLDEON	MARK	39°48.328N 18°02.215W	274'	SH-OWN													
M	MH9032	MARK	40°51.403N 071°54.246W	6.500 232'	SH-OWN													
M	MH9033	MARK	39°53.367N 082°29.224W	856.0 213'	SH-OWN													
M	MH9034	MARK	40°53.687N 071°58.314W	8.428 258'	SH-OWN													
M	MH9036	MARK	40°52.404N 071°49.566W	3.425 208'	ICON													
W	WPT038	WPT	40°55.473N 071°46.611W	0.000 0'	SH-OWN													
W	WPT037	WPT	40°52.404N 071°47.441W	3.065 180'	SH-OWN													
<table border="1" style="width:100%; text-align:center;"> <tr> <td>ICON</td> <td>FIND</td> <td>LOCATE</td> <td>EDIT</td> <td>SORT</td> <td>NEW MARK</td> </tr> <tr> <td>MODE</td> <td>DELETE</td> <td>DEL-ALL</td> <td>SH-O</td> <td>RECEIVE</td> <td></td> </tr> </table>							ICON	FIND	LOCATE	EDIT	SORT	NEW MARK	MODE	DELETE	DEL-ALL	SH-O	RECEIVE	
ICON	FIND	LOCATE	EDIT	SORT	NEW MARK													
MODE	DELETE	DEL-ALL	SH-O	RECEIVE														

Figure 7.2 - Example of Marks/Waypoints List

7.3 *CREATING A NEW MARK WITH THE USER POINTS LIST*

NOTE

This function is very useful if you have a list of Marks that you want to enter into the GPS Chart Plotter.

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **MARKS/WPTS** and press **[ENT]**.
3. The Marks/Waypoints List page will be shown (see previous Figure).
4. To create a New Mark, move the ShuttlePoint knob to the right to highlight **NEW MARK** and press **[ENT]**. A row is added for the new Mark.
5. Move the ShuttlePoint knob to highlight **EDIT** and press **[ENT]**; then press **[ENT]** again to display a popup icons window and change the icon.
6. Move the ShuttlePoint knob to highlight the desired Icon and press **[ENT]**.
7. Move the ShuttlePoint knob to the right to select the Mark name. Press **[ENT]** and the first digit in the name will be highlighted.
8. Move the ShuttlePoint knob up or down to select the first character.
9. Move the ShuttlePoint knob to the right to select the next character.
10. Repeat steps 8 and 9 until the Mark name is shown. Press **[ENT]**.
11. Move the ShuttlePoint knob to the right to select the Lat/Lon and press **[ENT]**.
12. Move the ShuttlePoint knob up or down to select the first character.
13. Move the ShuttlePoint knob to the right to select the next character.
14. Repeat steps 12 and 13 until the desired position is shown. Press **[ENT]**.
15. Move the ShuttlePoint knob to the right to select the **MODE** field and press **[ENT]**.
16. Move the ShuttlePoint knob up or down to select the mode to show the Mark. You can choose among **SHOW** to show on the chart the name and icon of Mark, **ICON** to show on the chart only the icon of Mark or **HIDE** to hide on the Chart page the created Mark. Press **[ENT]**.
17. Press **[CLR]** to save the created Mark.
18. Press **[CLR]** again and the new Mark appears on the Chart page.

WARNING

After entering in all the Marks it is a good practice to backup the points to a User C-CARD. Refer to Section 11.

7.4 *GOTO CURSOR, ROUTE AND MARK*

The CP390i and CPF390i can easily be set to start navigating to the cursor on the Chart page, a saved Mark or a Route that was created.

GOTO CURSOR

1. Move the ShuttlePoint knob to the exact position you want to navigate to.
2. Press **[GOTO]** and a GOTO popup window will be shown.

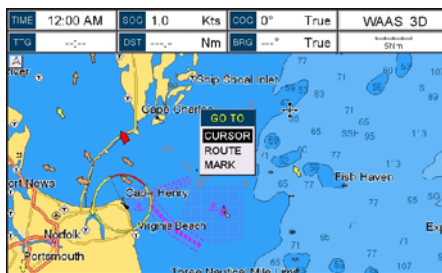


Figure 7.4 - GOTO Menu (1)

3. Move the ShuttlePoint knob to highlight **CURSOR** and press **[ENT]**.

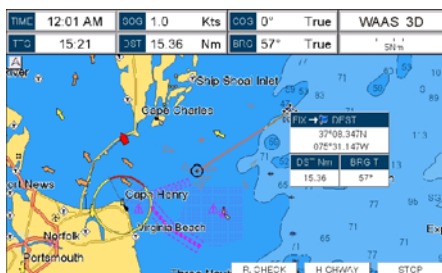


Figure 7.4a - GOTO Menu (2)

4. The GPS Chart Plotter is now navigating from your current position to the location selected at step 1. A bearing line between the vessels location and the destination point is shown. A popup window shows the Distance (DST) and Bearing (BRG) from the vessels location to the destination point. Soft Keys are also shown that allow you to quickly switch to the Highway page, to Route Check or to stop navigation.
5. Moving the ShuttlePoint knob, the popup window disappears.

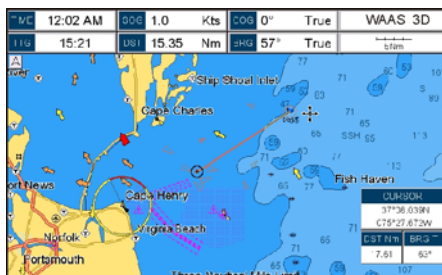


Figure 7.4b - GOTO Menu (3)

6. The GPS Chart Plotter is in Cursor Mode, to switch to Home Mode press **[CLR]** so the vessel will stay in the center of the page.
7. To stop navigation, press **[GOTO]** and a Warning window is shown. Move the ShuttlePoint knob to highlight **STOP** and press **[ENT]**.



Figure 7.4c - Warning window

GOTO ROUTE

When a Route is shown on the Chart page, move the cursor over the designed Waypoint and press [**GOTO**]. For more information about Routes refer to Section 9.

GOTO MARK

1. Move the ShuttlePoint knob to an open position (no buoy, warning etc. under the cursor) on the Chart page.
2. Press [**GOTO**] to show the GOTO popup window.
3. Move the ShuttlePoint knob to highlight **MARK** and press [**ENT**] to show the Marks/Waypoints List.
4. Move the ShuttlePoint Knob to the highlight the desired Mark or Waypoint and press [**GOTO**].
5. You will notice a circle is drawn around the Icon Symbol. This means the GPS Chart Plotter is now navigating to the point.
6. Press [**CLR**] to switch to the Chart page or Highway page to start navigating to the point.

8. MAN OVER BOARD (MOB) FUNCTION

During navigation, the “MOB” feature provides a one-touch method of storing a location, such as a point where a crew member fell overboard. In this mode, the CP390i or CPF390i places a MOB point on the Chart page and all the navigation data shown is related to navigating back to this point, allowing you to retrace your path to the MOB point efficiently.

8.0 PLACING A MOB POINT

1. On the Chart page, press **[MOB]** to start navigating back to the point.
2. You will notice a MOB Mark will be on the Chart page and all navigation is referring back to this point.

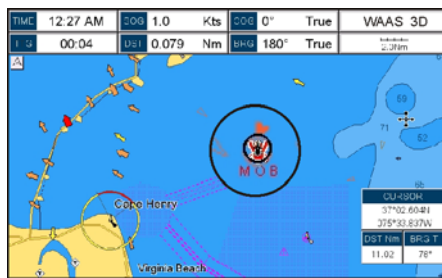


Figure 8.0 - MOB point

3. If the cursor is moved over the MOB icon, the popup windows over Soft Keys will be shown allowing quick access to the Highway or Navigation page, or to Route Check.
4. To stop navigation to the MOB point, press **[GOTO]**, select **STOP** and press **[ENT]**.

8.1 DELETING A MOB POINT

1. Move the ShuttlePoint knob until the cursor is over the top of the MOB icon.
2. Press **[DELETE]**, a popup window will be shown to confirm deleting the MOB point.



Figure 8.1 - Deleting MOB point

3. Move the ShuttlePoint knob to highlight **YES** and press **[ENT]**.

9. ROUTES

The CP390i and the CPF390i have the capability to store 50 Routes with 100 Waypoints or Marks in each Route. A Route can consist of Waypoints or Marks. The difference is when a Route is made using Waypoints and the Route is deleted the Waypoints are also deleted. However if a Route is made of Marks and the Route is deleted the Marks stay in memory.

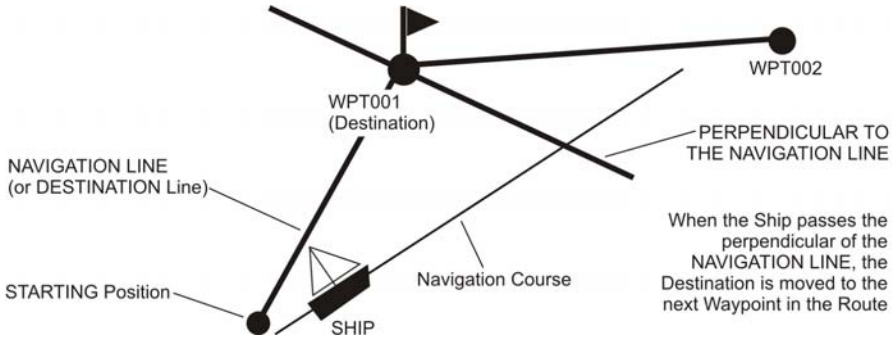


Figure 9 - Example to show how the GPS Chart Plotter switches from one Waypoint to another

9.0 CREATING A ROUTE USING WAYPOINTS

1. On the Chart page move the ShuttlePoint knob to the Lat/Lon of the starting Waypoint in the Route.
2. Press **[ROUTE]**, you will notice the starting Waypoint will be placed under the cursor.
3. Move the ShuttlePoint knob to the second Lat/Lon of the next leg in the Route.
4. Press **[ROUTE]**. You will notice another Waypoint is shown under the cursor and a line joins the starting Waypoint to the second Waypoint.

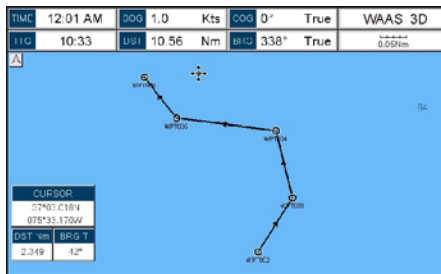


Figure 9.0 - Creating a Route using Waypoints

5. Repeat steps 3 and 4 until all Waypoints are entered into the Route.

NOTE

At this point the Route is saved as ROUTE01. If you would like to save the Route under a specific name follow the next steps.

9.1 CHANGING THE NAME OF A ROUTE

To name the Route:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **ROUTE** and press **[ENT]**.
3. Move the ShuttlePoint knob to highlight **EDIT** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Move the ShuttlePoint knob to highlight **NAME** and press **[ENT]**. A popup window will be shown.
5. Move the ShuttlePoint knob up/down to change the characters and left/right to select a different character in the Routes Name.

WAYPOINT	LAT°' "N/S"	LONG°' "E/W"	BRG T	1. DIST 19m	TRST 19m	TIME	FLTF
WPT002	37°02' 07.7N	075°03' 02.5W					
WPT003	37°02' 77.7N	075°03' 49.5W	33*	0.126	0.126	000.00	0.12
WPT004	37°02' 36.8N	075°03' 22.0W	346*	0.134	0.259	000.07	0.25
WPT005	37°03' 31.0N	075°03' 30.0W	321*	0.131	0.557	000.03	0.55

Figure 9.1 - Edit Route (Route Report)

6. When finished press **[ENT]** to save.
7. Press **[CLR]** to show the Chart page.

9.2 CREATING AN OLYMPIC ROUTE

This feature allows the starting point in a Route to be saved as the final destination point.

1. On the Chart page move the ShuttlePoint knob to the Lat/Lon of the starting Waypoint in the Route.
2. Press **[ROUTE]**, the starting Waypoint will be placed under the cursor.
3. Move the ShuttlePoint knob to the second Lat/Lon of the next leg in the Route.
4. Press **[ROUTE]**. Another Waypoint is shown under the cursor and a line joins the starting Waypoint to the second Waypoint.
5. Repeat steps 3 and 4 until all Waypoints are entered into the Route.
6. Then move the ShuttlePoint knob to the last Waypoint.



Figure 9.2 - Olympic Route creation (1)

7. Press **[OLYMPIC]**. A line joins the starting Waypoint and the last Waypoint.

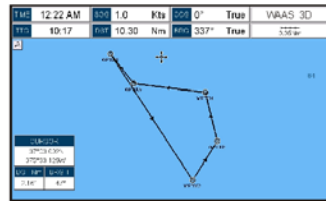
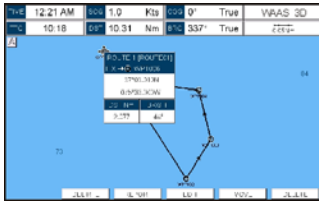


Figure 9.2a - Olympic Route creation (2)

9.3 MAKING ADDITIONAL ROUTES

To create another Route the GPS Chart Plotter must be told that you want to create a second Route.

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **ROUTE** and press **[ENT]**.
3. Move the ShuttlePoint knob to highlight **SELECT** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Move the ShuttlePoint knob to an open Route number example Route 2.
5. Press **[ENT]** or move the ShuttlePoint knob to the right.
6. Press **[CLR]** or move the ShuttlePoint knob to the left until the Chart page is shown.
7. To create the new Route, follow the steps in Creating a Route using Waypoints or Marks sections.

9.4 CREATING A ROUTE USING MARKS ON THE CHART PAGE

To create a Route containing Marks you first must create the Marks and show them on the Chart page.

1. Move the ShuttlePoint knob over the top of a Mark that you wish to be the starting point in the Route and press **[ROUTE]**.
2. Next move the ShuttlePoint knob until the cursor is over the Mark that you want to be the next leg in the Route.
3. Press **[ROUTE]**. You will notice a bearing line joins the first and second Mark which means these Marks are selected into the Route.
4. Repeat steps 3 and 4 until all Marks are entered into the Route.

NOTE

At this point the Route is saved as ROUTE01. If you would like to save the Route under a specific name follow the remaining steps.

5. To name the Route press **[MENU]**. Move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
6. Move the ShuttlePoint knob to highlight **ROUTE** and press **[ENT]**.
7. Move the ShuttlePoint to highlight **EDIT ROUTE** and press **[ENT]** or move the ShuttlePoint knob to the right.
8. Move the ShuttlePoint knob to highlight **NAME** and press **[ENT]** or move the ShuttlePoint knob to the right. A popup window will be shown.

9. Move the ShuttlePoint knob up/down to change the characters and left/right to select a different character in the Routes Name.
10. When finished press **[ENT]** to save.
11. Press **[CLR]** to show the Chart page is shown.

9.5 INSERTING A WAYPOINT INTO A ROUTE

Place the cursor on the navigation line between two Waypoints and press **[INSERT]**. The line between the two Waypoints is turned into a dotted line, see the following picture.



Figure 9.5 - Inserting Waypoint procedure (1)

Move the ShuttlePoint knob to the desired location for the new Waypoint: the line will “rubber-band”, drawing a dotted line between the previous Waypoint and the cursor, and another dotted line between the cursor and the next Waypoint (see the left side of the above picture). Once you have positioned the cursor at the location you want, press **[ENT]** (see the right side of the above picture).



Figure 9.5a - Inserting Waypoint procedure (2)

9.6 GOTO A ROUTE

By having created some Routes, you can choose one of them to place a GOTO on.

9.6.0 Using [GOTO] to select Route

1. Move the ShuttlePoint knob to an open position (no buoy, warning etc. under the cursor) on the Chart page.
2. Press **[GOTO]** to show the GOTO popup window.
3. Move the ShuttlePoint knob to highlight **ROUTE** and press **[ENT]**.
4. The SELECT ROUTE popup window will be shown.

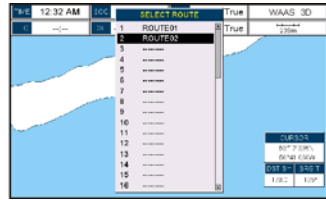


Figure 9.6.0 - GOTO ROUTE procedure (1)

5. Move the ShuttlePoint knob to highlight the desired Route and press **[ENT]**.
6. On the Chart page a circle with a flag is shown on the first leg of the Route and a navigation line is shown, indicating the GPS Chart Plotter is navigating to the first Waypoint in the Route.

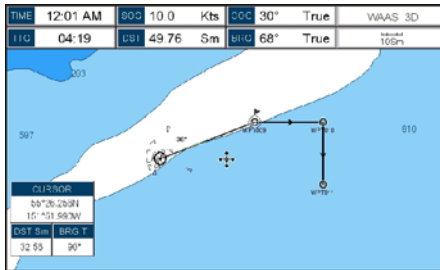


Figure 9.6.0a - GOTO ROUTE procedure (2)

9.6.1 Using the ShuttlePoint knob

1. On the Chart page move the ShuttlePoint knob until the cursor reaches the starting point of the Route.
2. Press **[GOTO]** to start following the Route.
3. Press **[CLR]** twice to revert to Home Mode.

9.7 DELETING A ROUTE

To delete a Route follow the procedure below:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **ROUTE** and press **[ENT]**.
3. Move the ShuttlePoint knob to highlight **DELETE** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. A Warning message appears to confirm. Move the ShuttlePoint knob to highlight **YES** and press **[ENT]**. The Route has been deleted.

WARNING

An active Route (one that you are navigating to) cannot be deleted until you stop navigating to the Route.

9.8 OTHER SETTINGS IN ROUTE MENU

You will notice the **ROUTE** menu has other selections.

SELECT	Chooses an available Route to create or chooses a stored Route to show and follow on the Chart page.
REVERSE	Reverses the Route, when chosen starting point is at the end of the Route.
COLOR	Allows changing the color of the navigation lines between each leg in the Route.
EDIT	The Edit Route (Route Report) menu is useful to show details of the Waypoints contained within the Route. This menu also allows you to enter in your average speed and fuel consumption and calculate the approximate fuel used when following the Route.
SEND	Sends the stored points to a external device (PC) capable of listening to NMEA RTE sentence.
RECEIVE	Receives the points from an external device (PC) capable of sending NMEA RTE sentence.
THICKNESS	Allows the Route line to be easily seen; default selection is Thick.

9.8.0 Route Check

The Route Check function is used after you have created a Route to ensure you and your vessel will not have problems while navigating. This is done by the CP390i and CPF390i by reviewing the Route and looking for the following hazards that may effect safe navigation.

- Land Areas
- Shallow Water
- Intertidal Areas (*areas emerged at low tide*)
- Rocks
- Wrecks
- Obstructions
- Shoreline Constructions
- Fishing Facility
- Dredged Areas
- Diffusers (*submarine pipeline*)
- Mooring/Warping Facility
- Production Installation (*an installation for the exploitation of natural resources*)
- Pingos (*small conical hills having a large central core of ice formed from the encroachment of permafrost and the resulting hydrostatic pressure*)
- No Data Available (*no adequate data coverage*)

If any of these alarm conditions is detected, the function returns the list of dangerous objects and the relative dangerous Route leg, that is drawn with a different color.

- Route legs which were classified as dangerous are displayed in RED. It means that there is at least one dangerous object in the vicinity of this leg and it has been found.
- Route legs which were classified as safe are displayed in GREEN. It means that the data was checked on detailed chart levels and no problems were found for all segments of the leg.
- Route legs for which there was not sufficient data to be checked are displayed in YELLOW. It means that no problems were found but the data was not sufficient or not available at all to classify such a leg as safe.


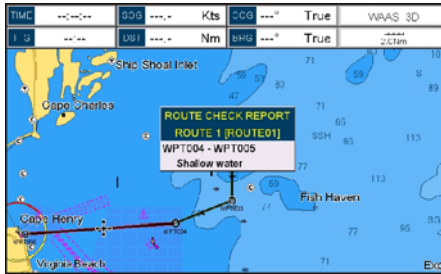


Figure 9.8.0 - Example of dangerous objects found on the chart

To activate this function:

AUTOMATIC CHECK	Turns the Route Check feature On or Off. Turn the Automatic Route Check on after you have created a new Route, or if you inserted a new Waypoint, deleted, moved or edited any Waypoint in a saved Route to confirm the Route can be safely navigated.
ROUTE WIDTH	Allows you to select the width from the left and right of the Route leg where the GPS Chart Plotter will check to confirm navigation threats. See the picture below. The default for this selection is 0.04Nm.
DEPTH LIMIT	Allows you to select the water depth in the Route width area so the GPS Chart Plotter can check and confirm underwater threats. It checks if some objects with the depth attribute (like Shallow Water, Dredged Areas, Diffusers, Obstructions, Pingos, Production Installation and Wrecks) are above this depth level. Only if the depth attribute is above the depth limit are they found and considered as dangerous. See the picture below. The default setting is 10Ft.
ACCURACY	Defines a segment length into which a leg of the Route is divided in order to execute the search for dangerous objects with better accuracy. When accuracy is maximal, a segment length is the shortest. When accuracy is minimal, a segment length is the longest. Selects among Minimum, Low, Medium, High and Maximum. See the picture below. The default setting is Medium.
ROUTE CHECK REPORT	Shows the list of the dangerous objects found on the charts crossed by the Route.

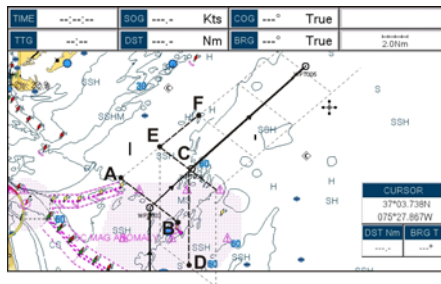

A-B = Width
 C-D = Depth
 E-F = Accuracy

Figure 9.8.0a - Route Check parameters

NOTE

Although the functionality is called Route Check, it can also be activated when the navigation is set to a single point (like DSC, MOB, Mark). In the case of checking a single point towards which the navigation is started, the leg for which the Route Check is executed is defined by the current position (the leg's starting point) and the destination point (the leg's ending point).

10. TRACKS

The CP390i and the CPF390i have the capability to store 20 individual Tracks and record up to 10000 Track Points.

Before using the Track function you will need to setup the Track function that suits your boat. The Track function records your tracks your vessels location as it moves through the water. The Track function can be setup to lay down a Track for a predetermined time or distance interval. If you have a fast moving boat you may want to setup the CP390i or CPF390i to record a Track point every 0.5Nm or if you have a sail boat you may want to setup to lay down a Track point once every 1 minute.

NOTE

Please note the Track point memory capacity is 10,000 points. This means for a long journey you may have to adjust the time or distance to be able to track your journey. It should be noted when the 10,000 Track points are used up, the first Track point layed down will be deleted when a new point is placed on the chart.

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **TRACK** and press **[ENT]**.
3. Move the ShuttlePoint knob to highlight **STEP UNIT** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Move the ShuttlePoint knob to highlight **Dist** or **Time** and press **[ENT]** or move the ShuttlePoint knob to the right.

TRACK	
TRACKING	On
ACTIVE TRACK	1
VISIBLE	On
LINE COLOR	Dist
DELETE	Time
STEP UNIT	Dist
DISTANCE	0.1 Nm
TIME	5 min

Figure 10 - Distance Units and Time Units

5. Move the ShuttlePoint knob to highlight **DISTANCE** or **TIME** step interval and press **[ENT]** or move the ShuttlePoint knob to the right.
6. Move the ShuttlePoint knob up/down to the desired step value and press **[ENT]** or move the ShuttlePoint knob to the right.
7. Press **[CLR]** or move the ShuttlePoint knob to the left until the Chart page is shown.

10.0 TRACKING

When using the Tracking feature you will notice every time a Track Point is layed down on the Chart page a small filled in circle is shown on the Track line. If you move the cursor over the top of the circle a popup window will be shown with the Time, Water Temperature, Speed and Course Over Ground (COG). This is very useful if you are fishing and want to review the conditions where the fish were being caught.

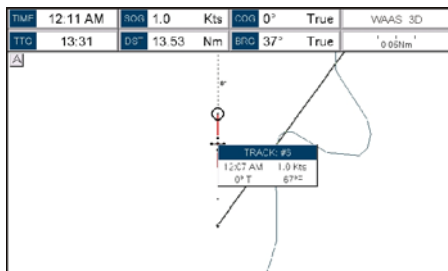


Figure 10.0 - Tracking

10.0.0 Saving and starting a new Track

A Track is automatically saved and retained in memory when the power is turned off. To start a new Track:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **TRACK** and press **[ENT]**.
3. Move the ShuttlePoint knob to highlight **ACTIVE TRACK** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Move the ShuttlePoint knob up/down to select the next available open Track and press **[ENT]** or move the ShuttlePoint knob to the right.
5. Move the ShuttlePoint knob to highlight **TRACKING** and press **[ENT]** or move the ShuttlePoint knob to the right to set On.
6. Press **[CLR]** or move the ShuttlePoint knob to the left until the Chart page is shown.
7. A new Track now will be laid down.

10.0.1 Deleting a Track

To delete a Track:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **TRACK** and press **[ENT]**.
3. Move the ShuttlePoint knob to highlight **DELETE** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. A warning popup window will be shown to confirm if you want to reset the Track. Move the ShuttlePoint knob to highlight **YES** and press **[ENT]** or move the ShuttlePoint knob to the right. The Track is now deleted.
5. Press **[CLR]** or move the ShuttlePoint knob to the left until the Chart page is shown.

10.0.2 Other settings

You will notice the Track Menu has other selections:

TRACKING	Allows turning on or off the tracking function
ACTIVE TRACK	Allows saving a Track to one of the 20 Tracks available
VISIBLE	Shows or hides a Track shown in ACTIVE TRACK menu
LINE COLOR	Selects the color of the Track line
DELETE	Deletes a Track selected in the ACTIVE TRACK menu
STEP UNIT	Allowable selection are Distance or Time

DISTANCE	User adjustable Distance interval of when Track point is laid down on the Chart page.
TIME	User adjustable Time interval of when Track point is laid down on the Chart page.

10.1 TRIP LOG

10.1.0 Using the Trip Log

On the Chart, Navigation, Highway and NMEA Data pages the windows may be customized to show Trip Log information.

1. Select one of the pages listed above, press and hold **[MENU]**. You will notice one of the data boxes will be highlighted.
2. Press **[ENT]** and move the ShuttlePoint knob to highlight **TLOG**, press **[ENT]** or move the ShuttlePoint knob to the right.
3. A popup window will be shown with **Nm** (Nautical Mile), **Sm** (Statute Mile), **Km** (Kilometer), **Nm+Mt**, **Nm+Ft** and **RESET**. Move the ShuttlePoint knob to select the desired units of measure and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Press **[CLR]** or move the ShuttlePoint knob to the right until the selected page (Chart, Navigation, Highway or NMEA Data Page) is shown.

10.1.1 Setup / Reset

When Trip Log is selected in one of the data windows and you want to reset the log:

1. Press and hold **[MENU]** until a field is highlighted (it will be shown in a yellow frame).
2. Move the ShuttlePoint knob to highlight the Trip Log window **TLOG** and press **[ENT]**.
3. A popup window will be shown. Move the ShuttlePoint knob to **TLOG** and press **[ENT]**.
4. Another popup window will be shown. Move the ShuttlePoint knob to **RESET** and press **[ENT]**.
5. A warning popup window will be shown to confirm if you want to reset the Trip Log. Move the ShuttlePoint knob to highlight **YES** and press **[ENT]**. The Trip Log is now reset.
6. Press **[CLR]** to store and exit the editing mode

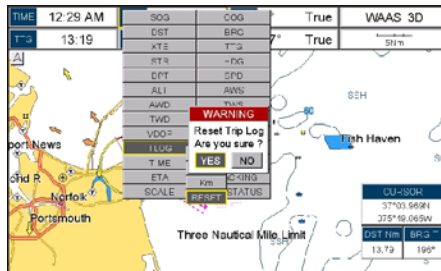


Figure 10.1. 1 - Trip Log Reset

11. USER C-CARD

The optional User C-CARD is used to backup Marks, Routes, and Tracks stored in your GPS Chart Plotter's memory. In the USA the User C-CARD is available directly from Jeppesen Marine at 800/424-2627. The User C-CARD is similar to a backup disk used with a PC, in case you have to clear the RAM to resolve an issue or load new software, or if you would like to transfer Waypoint, Track and Route information from one STANDARD HORIZON GPS Chart Plotter to another.

11.0 USER C-CARD MENU

This optional card is similar to using a floppy disk or memory stick on a PC to backup your files or to transfer the information that you have stored to a friend's GPS Chart Plotter. The information shown below will assist you to transfer the User Points, Routes and Track history to the optional User C-CARD.

① Time of file creation
② Date of file creation
③ Type of data contained in the file (Mark file, Waypoint file...)
④ File name
⑤ Number of Selected file
⑥ Information on stored User Points on Internal Memory

FILE	NAME	TYPE	DATE	TIME
0	JILE06	TRACKS	01/01/80	00:00:00
MRKS	FILE02	MARKS	01/01/80	00:00:00
1	FILE07	TRACKS	01/01/80	00:00:00
	FILE04	MARKS	01/01/80	00:00:00
WPTS	JILE0710	TRACKS	01/01/80	00:00:00
10	GILE06	TRACKS	01/01/80	00:00:00
	GJLE07	TRACKS	01/01/80	00:00:00
RTES	FILE08	MARKS	07/02/98	17:17:00
2	FILE09	ROUTES	07/02/98	17:17:00
	FILE01	TRACKS	01/01/80	00:00:00
TRKS	FILE03	MARKS	01/01/80	00:00:00
350				

SAVE LOAD DELETE FORMAT REFRESH

Figure 11.0 - User C-CARD Menu

11.0.0 Formatting the optional User C-CARD

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **USER C-CARD** and press **[ENT]**.
3. Move the ShuttlePoint knob to highlight **FORMAT** and press **[ENT]**.
4. A popup Warning window will confirm you want to format the User C-CARD.
5. Select **YES** and press **[ENT]** to confirm (select **NO** otherwise). The format of User C-CARD must be done before using a new User C-CARD: this operation prepares the User C-CARD to receive and store information.

NOTE

Formatting permanently erases all files previously saved on the User C-CARD.

11.0.1 Transferring files to the optional User C-CARD

1. Remove a C-MAP BY JEPPESEN NT+/MAX C-CARD if present and insert the optional User C-CARD into the slot.

2. Press **[MENU]**, move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
3. Move the ShuttlePoint knob to highlight **USER C-CARD** and press **[ENT]**.
4. A screen will appear. Move the ShuttlePoint knob to the left to highlight **SAVE** and press **[ENT]**.
5. A popup **SAVE FILE** window will appear. In this window you can change the name and the file type by using the ShuttlePoint knob and pressing **[ENT]**, when finished press **[CLR]** once.
6. To save the file, move the ShuttlePoint knob to **SAVE** in window and press **[ENT]**.
7. A Information popup window will momentarily be shown "SAVING" then show "SAVING OK".
8. Press **[ENT]** to confirm.

11.0.2 Loading a file from the optional User C-CARD

If you have a problem and accidentally loose the User Points in the GPS Chart Plotter with the optional User C-CARD it is possible to load the data back into the GPS Chart Plotter using the following procedure:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **USER C-CARD** and press **[ENT]**.
3. Select the saved file from the User C-CARD list by using the ShuttlePoint knob and press **[ENT]**.
4. Move the ShuttlePoint knob to the left to highlight **LOAD** and press **[ENT]**.
5. A popup information window will appear when loading is complete.
6. Press **[ENT]** to confirm.

11.0.3 Deleting a file from the optional User C-CARD

You may want to delete a saved file on the User C-CARD.

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **USER C-CARD** and press **[ENT]**.
3. Select the saved file from the User C-CARD list by using the ShuttlePoint knob and press **[ENT]**.
4. Move the ShuttlePoint knob to the left to highlight **DELETE** and press **[ENT]**.
5. A popup Warning window will to confirm you want to delete the file.
6. Press **[ENT]** to confirm.

11.0.4 Refreshing the optional User C-CARD

You may want to change the User C-CARD inserted in the slot with a new one.

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **USER C-CARD** and press **[ENT]**.
3. Open the door, remove the User C-CARD from the slot and insert another User C-CARD into the same slot.
4. Move the ShuttlePoint knob to highlight **REFRESH** and press **[ENT]**. This "new" User C-CARD is now ready to receive and store information.

12. PAGES

The CP390i and CPF390i have many pages that are designed to ease your navigation.

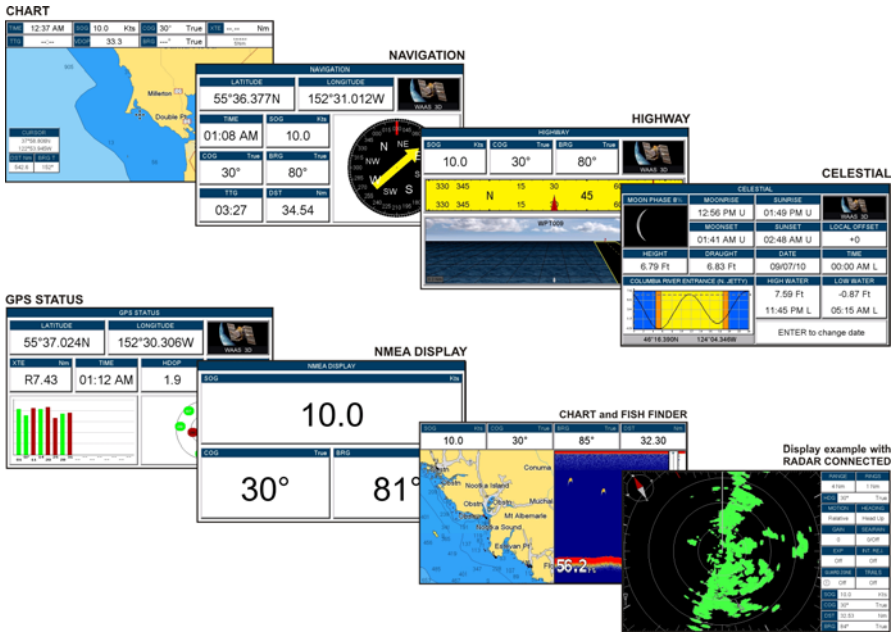


Figure 12 - Example of screen display pages

The pages can be selected in the following way:

Selection by MENU

1. Press **[MENU]**. The following menu is shown on the screen:

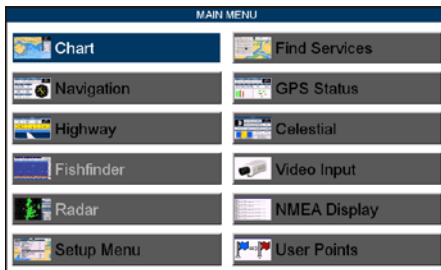


Figure 12a - Main Menu

2. Move the ShuttlePoint knob to highlight the desired page and press **[ENT]**.

Selection by SOFT KEY

Press one of the Soft Keys under the display, then press the Soft Key to show the desired page.



Figure 12c - Screen display pages (by Soft Keys)

12.0 CHART PAGE

The Chart page is the main page of the GPS Chart Plotter. From this page the user can zoom in/out, pan around the chart, show information about cartographic objects, see the exact vessel position with the COG and SOG, place points, GOTO a destination point, show Track history etc. The GPS Chart Plotter come with Built-In Charts for coastal navigation of USA including Alaska, Hawaii and Great Lakes, Canada, Bahamas, Caribbean, Cuba, Puerto Rico, and Central America. For details refer to Par. 5.0. For more details, optional C-MAP BY JEPPESEN NT+/MAX C-CARDS or to update the Built-In Charts, refer to Par. 5.1.

It is possible to set the chart as a single or two charts side by side.

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **CHART** and press **[ENT]**. Two Chart page types are available: Single and Dual.
2. Move the ShuttlePoint knob to highlight **Single** or **Dual** and press **[ENT]**.

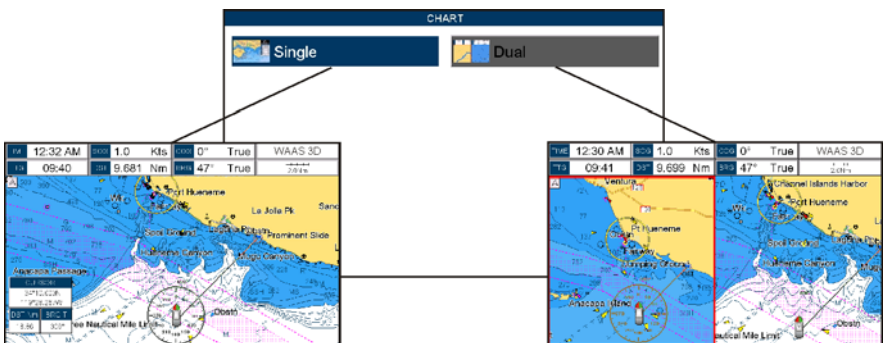



Figure 12.0 - Chart Selection Menu

NOTE

 may appear on the unused window of the Dual Chart page. It happens when the GPS Chart Plotter updates the displayed chart in the not active window. So the user understands that the GPS Chart Plotter is busy.

12.0.0 Focus Soft Key on Dual Chart page

When Dual Chart is selected, you will notice one of the chart windows will have a red border around it. This red border indicates which chart window the GPS Chart Plotter has the focus on, meaning if the ShuttlePoint knob is moved the cursor on chart window will move.

The focus may be changed to the other chart window with the procedure below:

1. Press any Soft Key. The Soft Key labels appear on the bottom of the screen. A **[Focus]** Soft Key will be shown.

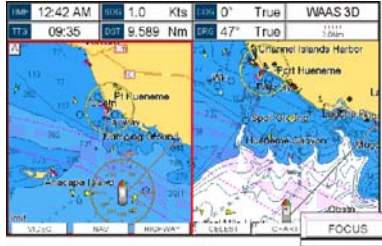


Figure 12.0.0 - Example of Dual Chart page with **[Focus]** shown

2. Press **[Focus]**. A popup window appears where the active focus window label is highlighted.

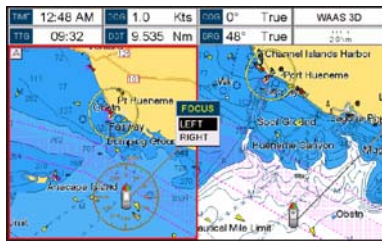


Figure 12.0.0a - Example of Dual Chart page with focus window shown

3. Move the ShuttlePoint knob up and down to highlight the desired item and press **[ENT]**. The red border is moved to the focused window.

NOTE

It is possible to change the focus by pressing and holding **[FIND]** for 2 seconds (in place of 1 and 2 steps in the above procedure).

12.0.1 Single Chart page

1 Time
 2 Speed Over Ground
 3 Course Over Ground
 4 Fix status
 5 Time To Go
 6 Distance from Fix to Destination
 7 Bearing from Fix to Destination
 8 Chart Scale
 9 Cursor Coordinates
 10 Distance & Bearings from Fix to Cursor

Figure 12.0.1 - Example of Single Chart page

12.0.2 Window Selections

The default is the Two Line Small window. The CP390i and CPF390i windows may be changed by the procedure below.

GENERAL
 HIGHWAY
 COMPASS
 FULL CHART (None)
 1 LINE SMALL
 1 LINE LARGE
 2 LINES SMALL

Figure 12.0.2 - Data window layout

1. To change, press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **GENERAL SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **WINDOWS SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.

4. Move the ShuttlePoint knob to highlight **CHART PAGE** and press **[ENT]** or move the ShuttlePoint knob to the right.
5. Select the desired window, **HIGHWAY** or **COMPASS**, and press **[ENT]** or move the ShuttlePoint knob to the right.
6. Press **[CLR]** or move the ShuttlePoint knob to exit the menu and show the Chart page.

12.0.3 Customizing the Data Windows

The data fields contained on the General, 1 Line Small/Large and 2 Line Small data windows can be changed to the following selections:

- MAX SPD = Max Speed
- SOG = Speed Over Ground
- COG = Course Over Ground
- DST = Distance to Destination
- BRG = Bearing to Destination¹
- XTE = Cross Track Error
- TTG = Time To Go
- STR = Steering
- HDG = Heading from Electronic Compass
- DTP = Depth
- SPD = Speed
- ALT = Altitude
- AWS = Apparent Wind Speed
- AWD = Apparent Wind Direction
- TWS = True Wind Speed
- TWD = True Wind Direction
- HDOP = Horizontal Dilution of Precision
- VDOP = Vertical Dilution of Precision
- Temp = Water Temperature
- TLOG = Trip Log
- DATE = Current Date
- TIME = Current Time
- VMG = Velocity Made Good
- ETA = Estimated Time of Arrival
- TRACKING = Tracking
- SCALE = Chart Scale
- GPS Status = Shows GPS Fix Status (WAAS, 3D, 2D, ...)

NOTE¹

When the GENERAL window is selected and the GPS Chart Plotter is in Home Mode, the BRG will show --, unless the GPS Chart Plotter is navigating to a point. When in Cursor Mode, the BRG shows the Bearing from the ship's position to the cursor location.

To select the desired field, follow the procedure:

1. Press and hold **[MENU]** until a field is highlighted (it will be shown in a yellow frame).
2. Move the ShuttlePoint knob to the desired data field (the yellow frame is moved to the desired data field) and press **[ENT]**. The popup window will be shown.
3. Move the ShuttlePoint knob up/down or left/right to choose the desired setting and press **[ENT]**.
4. Press **[CLR]** to store and exit the editing mode.

NOTE

Data window field on the NAVIGATION, HIGHWAY, GPS STATUS, and NMEA pages may be customized in the above manner.

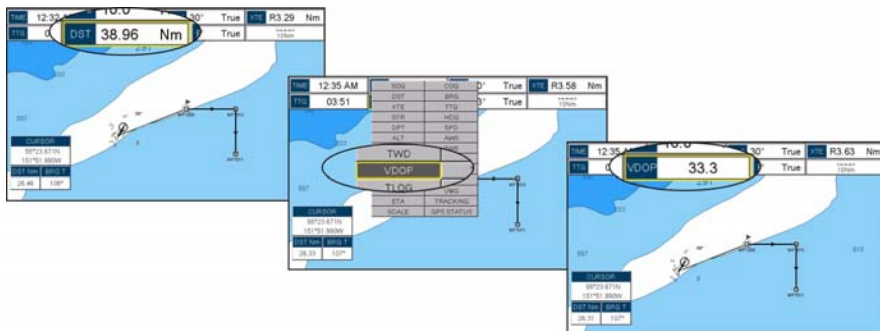


Figure 12.0.3 - Customizing the Data Windows

NOTE

See Par. 10.1.0 if Trip Log is selected in one of the data windows and you want to reset the log.

12.0.4 Additional Functions on Chart page

When on the Chart page you will notice icons of Buoys, Towers, Lights, Wrecks, Tide Stations and Port Icons. If the cursor is moved over the top of these icons a popup window will be shown with information about the icon.

12.0.5 Turning Off Information on Icon Points

The GPS Chart Plotter allows you to select to see information On Points, On All items or to turn this function off. The default setting is On Points.

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **GENERAL SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **AUTO INFO** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Move the ShuttlePoint knob up or down to highlight **OFF**, **ON POINTS** or **ON ALL** and press **[ENT]** or move the ShuttlePoint knob to the right.
5. Press **[CLR]** or move the ShuttlePoint knob to the left until the Chart page appears.

Auto Info OFF



Auto Info ON POINTS



Auto Info ON ALL



Figure 12.0.5 - Example of Auto Info settings

12.0.6 Display Mode

Selects from a pre-defined table what cartographic objects are displayed and which display options are set. Pre-programmed settings are user selectable from Full, Medium, Low, Radar (reduces the information on the display to simulate items that would be shown on a Radar display. Please note this function is not actually showing Radar information it is only showing what typically would be shown by a separate dedicated Radar display), Tides, Custom (default mode).

To change to one of the pre-programmed settings:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **CHART CONFIGURATIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **DISPLAY MODE** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Move the ShuttlePoint knob up or down to select the preset and press **[ENT]**.
5. Press **[CLR]** or move the ShuttlePoint knob to the right until the Chart page is shown.

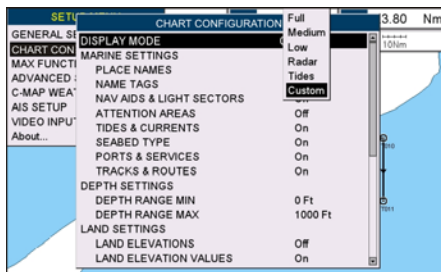


Figure 12.0.6 - Display Mode settings

The table below shows the selections for each mode:


Setting	Full	Medium	Low	Radar	Tides	Custom (default values)
Place Names	On	On	On	On	On	On
Name Tags	On	Off	Off	Off	Off	Off
Nav Aids & Light Sectors	On	No Sectors	No Sectors	No Sectors	Off	On
Attention Areas	On	On	Off	Off	Off	Off
Tides & Currents	On	Off	Off	Off	On	On
Seabed Type	On	Off	Off	Off	Off	On
Ports & Services	On	On	Off	On	Off	On
Tracks & Routes	On	Off	Off	Off	Off	On
Depth Range Min	0FT	0FT	0FT	0FT	0FT	0 FT
Depth Range Max	32804FT	32804FT	32804FT	32804FT	32804FT	32804FT
Land Elevations	On	On	Off	Off	Off	Off
Land Elevation Values	On	Off	Off	Off	Off	On
Roads	On	Off	Off	Off	Off	On
Points Of Interest	On	Off	Off	Off	Off	On
Lat/Lon Grid	On	Off	Off	Off	Off	Off
Chart Boundaries	On	Auto	Off	Off	Off	On
Value Added Data	On	Off	Off	Off	On	On
Chart Lock	On	On	On	On	On	On
Mixing Levels	On	On	On	On	On	On
Underwater Ob. Limit	1000FT	32FT	32FT	32FT	32FT	1000FT
Rocks	Icon + Depth	Icon	Icon	Icon	Icon	Icon
Obstructions	Icon + Depth	Icon	Icon	Icon	Icon	Icon
Diffusers	Icon + Depth	Icon	Icon	Icon	Icon	Icon
Wrecks	Icon + Depth	Icon	Icon	Icon	Icon	Icon

12.0.7 Marine Settings

Controls the display on the chart of the marine features.

Place Names	: Turns the local area names On or Off.
Name Tags	: Turns a tag for particular chart objects that either includes the Name of the chart object or the Depth of an Underwater chart object On or Off.
Nav Aids & Light Sectors:	Turns the presentation of Lights, Signals, Buoys and Beacons On (Nav-Aids & Light Sectors are shown), Off (Nav-Aids & Light Sectors are not shown) or No Sector (Nav-Aids are shown, Light Sectors are hidden).
Attention Areas	: Turns the Attention Areas (areas in which special attention by the mariner is required because of natural or man-made hazards sailing regulations and restrictions) On or Off.

Tides & Currents : Turns the Tides and Currents On or Off.
 When data/time is available, Tidal stream arrows are shown on the charts, indicating the direction and strength of the Tide. If no data/time is available from the GPS or the GPS Chart Plotter is not in Simulation mode, the icon on the chart is generic one. The color of the arrow denotes the strength of the current as follows:

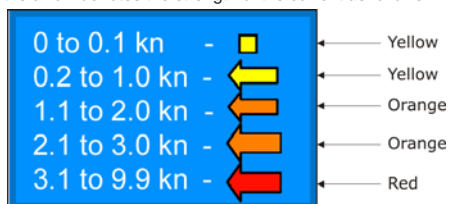

When the GPS Chart Plotter receives a valid position fix, the Tide icons are shown on the charts on the basis of the current date and time: the screen displays and changes arrows as date/time changes.


Seabed Type	: Turns the Seabed Type On or Off.
Ports & Services	: Turns the Ports and Service icons On or Off. Areas along the shore with facilities for mooring, downloading and uploading of ships, generally sheltered from waves and winds. Port installations are piers, wharves, pontoons, dry docks, cranes....
Tracks & Routes	: Turns the Tracks and Routes On or Off (recommended and established routes for ships at sea, including traffic separation schemes, deep water routes).

12.0.8 Depth Settings

Controls the depth information on the Chart page.

Depth Range Min	: Sets the minimum depth limit to show Depth Sounding, Bathymetric Lines and Depth Areas.
Depth Range Max	: Sets the max depth limit to show Depth Sounding, Bathymetric Lines and Depth Areas.

0-1000 Ft

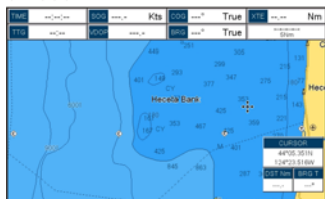

50-100 Ft

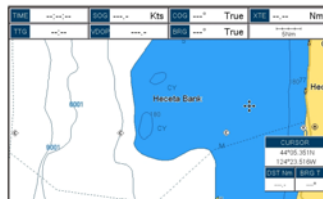


Figure 12.0.8 - Depth Settings

12.0.9 Land Settings

Controls the display on the map of the terrestrial features.

Land Elevations : Turns the Land Elevations On or Off.

Land Elevation Values : Turns the Land Elevation Values On or Off.

Roads : Turns the Roads On or Off.

Points Of Interest : Turns the Points of Information On or Off.



① ROAD

② POINT OF INTEREST (LIBRARY)


Figure 12.0.9 - Example of Roads and Points Of Interest

12.0.10 Chart Settings

Settings that control how the chart features will be shown on the Chart page of the GPS Chart Plotter.

Lat/Lon Grid : Turns the Latitude and Longitude grid lines On or Off on the Chart page. See the figure below:

Lat/Lon Grid ON

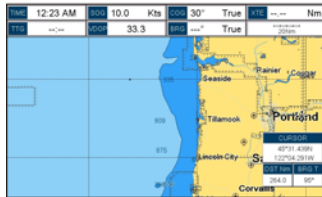

Lat/Lon Grid OFF

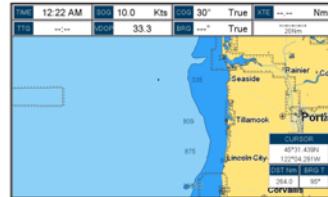


Chart Boundaries : Turns the Chart Boundaries On, Off or Auto. The Chart Boundaries are the “ticked” boxes surround the coastline. Each box indicates an area where more details is available. The Chart Boundaries are only show when a C-MAP By JEPPESEN NT*/MAX C-CARD is inserted into the GPS Chart Plotter. See the pictures below:

Chart Boundaries ON



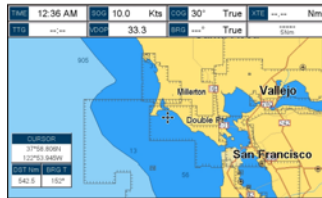


Chart Boundaries OFF

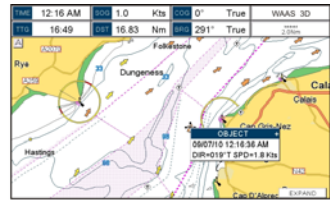

Value Added Data : Turns the Value Added Data On or Off. The Value Added Data (VAD) is a collection of additional cartographic objects which are not present on the original paper chart (from which the electronic chart derives). These objects have been obtained from other sources and then merged to the electronic charts in order to provide more information useful for the navigation. VAD object can be any cartographic objects and it can be distinguished from the official-chart-objects from the Quick Info. A dedicated icon is shown on the Quick Info window to indicate that the object queried is a VAD. The same icon is also shown on the Full Info page and in addition the extended text Value Added Data is shown on the details of the VAD object. See the figure below:

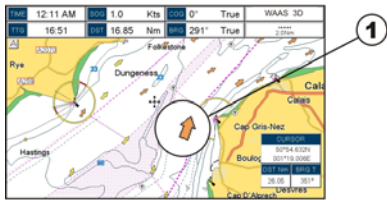

1 Example of VAD object

Chart Lock (*) : Turns the chart function On/Off. When Chart Lock is On, the available zoom scales are only the ones containing cartographic data. Instead when Chart Lock is Off, it is possible to zoom down into zoom scales not covered by cartographic data after the last available zoom scale covered by cartographic data. The DSI (Data Safety Indicator) window, if present, will show "NO CHART", when an empty level is entered in the location of chart expansion mode.

Mixing Levels : When the chart coverage at the current chart scale does not fill the entire display, the GPS Chart Plotter draws the rest of the chart using charts from above and below the current scale. When this function is turned on you will notice the display may redraw 2 to 3 times to show all the details.

NOTE*

When an empty level is entered, the message "No cartographic coverage" is shown on a window in a corner of the chart display. The warning message is always displayed as long as the current zoom has no data coverage.

12.0.11 Underwater Objects Settings

The following selections are used to control which Underwater Objects are shown on the Chart page.

Underwater Object Limit : Selects the max depth value to display Underwater Objects. If value is set to 0Ft, the Underwater Objects are not shown on the charts. Menu options are grayed out. If value is more than 0Ft (i.e. 10Ft), in the Range from 0Ft to the selected value the Underwater Objects are displayed according to their setting below.

Rocks : Sets Off/Icon/Icon+Depth* the displaying of the Rocks.

Obstructions : Sets Off/Icon/Icon+Depth* the displaying of the Obstructions.

Diffusers : Sets Off/Icon/Icon+Depth* the displaying of Diffusers (Diffuser is a structure on an outfall through which liquids are discharged. The structure will usually project above the level of the outfall and can be an obstruction to navigation).

Wrecks : Sets Off/Icon/Icon+Depth* the displaying of Wrecks.

NOTE*

Choose the options: OFF (the object is not visible independently of the selected "Underwater Object Depth Value"); ICON (the object icon is visible without tags, in the range selected from "Underwater Object Depth Value" option); ICON+DEPTH (the object icon and tag is visible, in the range selected from "Underwater Object Depth Value" option).

12.1 CUSTOMIZING CHART SETTINGS

The GPS Chart Plotter also allows you to customize items shown on the chart (discussed in above sections) instead of using a pre-defined table discussed in Par. 12.0.4 Display Mode.

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **CHART CONFIGURATIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.

3. Move the ShuttlePoint knob to highlight **DISPLAY MODE** and press [ENT] or move the ShuttlePoint knob to the right.
4. Move the ShuttlePoint knob to highlight **Custom** and press [ENT] or move the ShuttlePoint knob to the right.
5. Move the ShuttlePoint knob up or down to select the desired item within the groups Marine Settings, Depth Settings, Land Settings, Chart Settings or Underwater Settings and press [ENT]. See the above sections for details on selections.

12.2 NAVIGATION PAGE

This page is useful to show information when heading to a destination, following a compass heading or navigating to a Mark or a Route. The default page is shown with a Compass Rose, however this can be customized to show a Compass Tape.

1. To change to show the Compass Tape, select the Chart page, press [MENU]. Move the ShuttlePoint knob to highlight **SETUP MENU** and press [ENT].
2. Move the ShuttlePoint knob to highlight **GENERAL SETUP** and press [ENT] or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **WINDOW SETUP** and press [ENT] and press [ENT] or move the ShuttlePoint knob to the right.
4. Move the ShuttlePoint knob to highlight **NAVIGATION PAGE** and press [ENT] and press [ENT] or move the ShuttlePoint knob to the right.
5. Move the ShuttlePoint up or down to select **COMPASS TAPE** and press [ENT].
6. Press [CLR] or move the ShuttlePoint knob to the right until the Chart page is shown.

- 1 Fix position
- 2 Time
- 3 Speed Over Ground
- 4 Course Over Ground
- 5 Bearing to Destination
- 6 Time To Go
- 7 Distance to Destination
- 8 Compass Rose

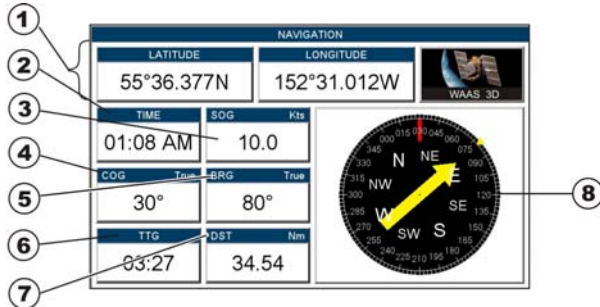


Figure 12.2 - Navigation page with Compass Rose

- 1 Fix position
- 2 Compass Tape
- 3 Time
- 4 Time To Go
- 5 Speed Over Ground
- 6 Distance to Destination
- 7 Course Over Ground
- 8 Bearing to Destination

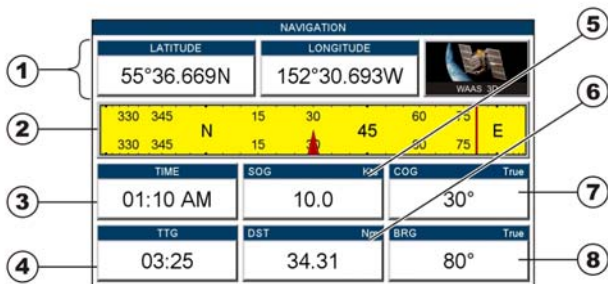


Figure 12.2a - Navigation page with Compass Tape

NOTE

The COG heading is computed and supplied to the plotter from the internal GPS or external GPS.

12.3 HIGHWAY PAGE

Shows a 3D view of the vessel travelling through the water when navigating to a destination point, Mark or following a Route. Press **[ZOOM IN]** or **[ZOOM OUT]** to change the highway scale.

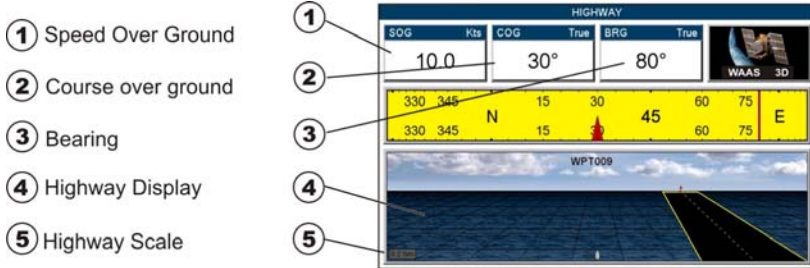


Figure 12.3 - Highway page

12.4 CELESTIAL PAGE

The Celestial page contains Tide information critical for safe navigation. This page is also useful for boaters that are concerned about the height of the water under a bridge or by fisherman that wish to know the tide and moon phase of a specific date.

Changing date

1. Press **[ENT]** and a popup window will be shown.
2. Moving the ShuttlePoint knob up or down changes the digits and left and right selects the month, day and year.
3. Press **[CLR]** to exit and view the information.

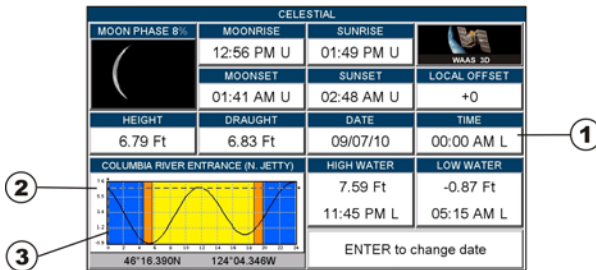


Figure 12.4 - Celestial page

Refer to the image above. The time (1) displayed corresponds to the location of the cross-hair cursor (3) in the Tide Graph (2). Moving the ShuttlePoint knob to the left or right changes the time, moving the ShuttlePoint knob up or down selects the Tide height and draught (draft) on the Tide Graph.

NOTE

The **draught** window shows the height of the tide water during a 24hr period of time. For example if the ShuttlePoint knob is pressed up to move the cursor to the top of the Tide Graph this is the High Water Level and if the cursor is moved to the bottom of the Tide Graph the draught will show the Low Water Level.

Example 1

You anchor in 15Ft of water (under your keel) at a time of day where the water is the highest (High Water). Let's say the High Water window shows 5Ft and the Low Water window shows 1Ft this means the water under your vessel over a 24 hour period of time could fall 4Ft (High Water - Low Water). With your vessel in 15Ft of water and with a maximum water change of 4Ftduring the day, the worst case situation there will be 11Ft of water under your vessel.

12.5 GPS STATUS PAGE

This page is used as a reference to see how well the GPS is receiving satellites.

① Ship's Coordinates

② Date and Time

③ WAAS/GPS Icon

④ Vertical Dilution of Precision
Horizontal Dilution of Precision

⑤ Tracked, but not used,
Satellite

⑥ Used Satellite

⑦ COG (Course Over Ground)

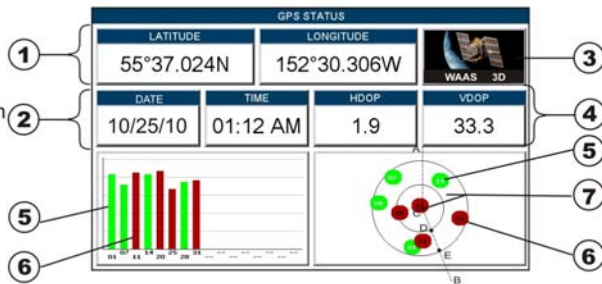


Figure 12.5 - GPS Status page

The WAAS/GPS Icon area may change due to the satellite reception:

ACQUIRING : the GPS is trying to receive a valid position fix.

GPS2D : the GPS is receiving at least 2 valid satellites

GPS3D : the GPS is receiving at least 3 satellites.

WAAS 2D/3D : the GPS is receiving a 2D or 3D position and the correction from the WAAS satellite.

HDOP : Horizontal Dilution of Precision

VDOP : Vertical Dilution of Precision

12.5.0 WAAS/EGNOS Setting

From this page it is possible to disable the WAAS/EGNOS function following this procedure:

1. Press **[MENU]**, move the ShuttlePoint knob to enter **GPS STATUS** page and press **[ENT]**.
2. Press and hold **[ENT]**. The GPS Setup Menu appears on the screen.
3. Move the ShuttlePoint knob to highlight **DIFF CORRECTION SOURCE** and press **[ENT]**.
4. Move the ShuttlePoint knob to highlight **None** (to disable) and press **[ENT]**.
5. Press **[CLR]** until the menu disappears or an easier method is to move the ShuttlePoint knob to the left until the menu disappears.

12.5.1 Setup Menu

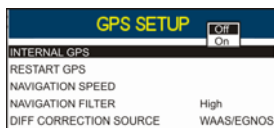


Figure 12.5.1 - Setup Menu

From this page it is possible to activate the GPS Setup Menu following this procedure:

1. Press **[MENU]**, move the ShuttlePoint knob to enter **GPS STATUS** page and press **[ENT]**.
2. Press and hold **[ENT]**. The GPS Setup Menu appears on the screen. See the following table:

Internal GPS	: Enables (On) or disables (Off) the internal GPS. The default setting is On.
Restart GPS	: Restarts all GPS processes. Once executed, the message "Done" is shown.
Navigation Speed	: Allows setting the Navigation Speed among Low and High. The default setting is High.
Speed Filter	: Allows to resolve erratic speed readings in rough seas. Available values are Off, Low, Medium, High. The default setting is Off.
Differential Correction Source	: Allows setting what kind of Differential Correction will be used by the GPS between WAAS-EGNOS and none. The default setting is WAAS-EGNOS.

3. Move the ShuttlePoint knob to highlight the preferred item and press **[ENT]**.
4. Press **[CLR]** until the menu disappears or an easier method is to move the ShuttlePoint knob to the left until the menu disappears.

12.6 NMEA DISPLAY PAGE

The GPS Chart Plotter is capable of displaying information in the customizable data windows from external NMEA-0183 devices. Depth Sounder, Speed Log with temp, Wind speed and direction, Flux gate compass, and GPS information can be shown in any of the boxes. The default NMEA Display shows 3 windows. When going to a destination, this screen is useful to navigate as to get to the destination keep the Course Over Ground (COG) and Bearing (BRG) figures the same.

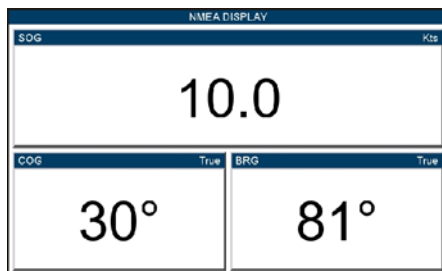


Figure 12.6 - NMEA Display page

The NMEA sentences read from external devices are: BWC, DSC, DSE, GGA, GLL, GSA, GSV, HDG, HDM, HDT, RMC, VHW, VTG, DPT, DBT, MTW, VWR, VWT, TLL, WPL, RTE.

CHANGING the NMEA PAGE Windows

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **NMEA DISPLAY** and press **[ENT]**. Otherwise, from the factory the right most Soft Key is programmed for direct access. Press this key two times to show the NMEA Display page.



Figure 12.6a - NMEA Display Menu

2. Move the ShuttlePoint knob to highlight **DISPLAY** and press **[ENT]**.
3. To change the 5 different pages move the ShuttlePoint knob to the left or right.

12.7 NMEA DATA PAGE

The NMEA Data page is very useful to see if an external device (example: Depth Sounder) is transmitting NMEA sentences to the GPS Chart Plotter. This page can also be used to see if the GPS Chart Plotter NMEA output is being loaded down by an external NMEA device the GPS Chart Plotter is connected to.

Scenario: VHF Radio connected but the Radio is not receiving a GPS Position.

Usually the VHF Radio will be connected to the Green and Brown wires. To check to see if the GPS Chart Plotter is transmitting the sentences:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **NMEA DISPLAY** and press **[ENT]**.

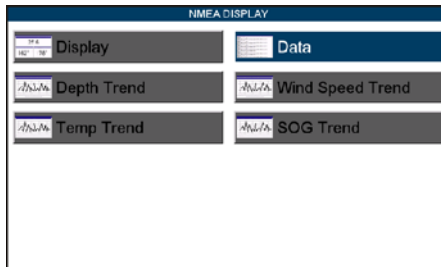


Figure 12.7 - NMEA Display Menu

2. Move the ShuttlePoint knob to highlight **DATA** and press **[ENT]**.
3. Connect the Blue Wire on the GPS Chart Plotter to the junction of the Brown wire and the VHF wire. The display should look similar to the following picture.

```

NMEA DATA
#IIRMC,002558,A,3407.643,N,07702.028,W,003.2,000.0
,190404,9.3,M#61
#PCHPN,0,1,,,,,,#6D
#IIGLL,3407.643,N,07702.028,W,002558,A#2C
#IUTGS,000.0,T,009.3,H,003.2,N,005.9,K#5E
#IIXTE,A,A,,,,#65
#IIRMB,A,,,,,,U#66
#IIRMC,002559,A,3407.644,N,07702.028,W,003.2,000.0
,190404,9.3,M#67
#IIRMB,A,,,,,,U#66
#IIRMC,002556,A,3407.641,N,07702.028,W,003.2,000.0
,190404,9.3,M#6D
#PCHPN,0,1,,,,,,#6D
#IIRPB,A,A,,,,,,#53
#IIGLL,3407.642,N,07702.028,W,002557,A#22
#IUTGS,000.0,T,009.3,H,003.2,N,005.9,K#5E
#IIXTE,A,A,,,,#65
ZOOM IN TO CHANGE PORT          PWR PORT1

```

Figure 12.7a - NMEA Data page

4. Press **[ENT]** to freeze the data on the display so it is easy to read and understand.
5. Press **[ENT]** again to receive data again.
6. View data from a device connected to another data port, press the **[ZOOM IN]**.

12.8 NMEA TREND PAGES

The CP390i* and CPF390i have the following NMEA Trend pages. Trends will be shown for Depth, Temperature and Speed (DST521 or DST526 must be connected to show speed through the water) when a STANDARD HORIZON transducer is connected. To show Wind trend information the CP390i and CPF390i must be connected to the NMEA output of an external Wind instrument.

*NOTE**

The CP390i must be connected to the Optional FF525 50/200kHz Black Box Fish Finder.

To select a NMEA Trend page:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **NMEA DISPLAY** and press **[ENT]**.

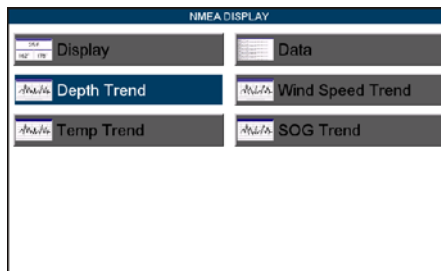


Figure 12.8 - NMEA Display Menu

2. Move the ShuttlePoint knob to select **DEPTH TREND**, **WIND SPEED TREND**, **TEMP TREND** or **SOG TREND** and press **[ENT]**.



Figure 12.8a - NMEA Trend pages

12.9 VHF DIGITAL SELECTIVE CALLING

Digital Selective Calling is a semi-automated method of establishing a VHF radio call. DSC had also been designated as part of the Global Maritime Distress and Safety System (GMDSS).

This new system allow mariners to instantly send a distress call with GPS position (when connected to the transceiver) to the US Coast Guard and other vessels within range of the transmission. DSC will also allow mariners to initiate POSITION Request, POSITION Report calls to or from another vessel equipped with a DSC transceiver.

Compatible VHF Marine Radios with Digital Selective Calling are able to be interfaced with the GPS Chart Plotter which feeds GPS data to the VHF and listens for DSC calls from the VHF. By connecting a few wires between the compatible DSC VHF radios and the GPS Chart Plotter it will receive:

1. a vessel that has transmitted a DSC Distress Call
2. a vessel that has transmitted a DSC Position Send Call
3. The position of a vessel that transmitted a DSC Position Request Call

12.9.0 Interfacing

To take advantage of these functions the GPS Chart Plotter must be interfaced (wired) to a STANDARD HORIZON or compatible DSC VHF.

For additional information refer to Par. 2.4 Connections.

12.9.1 Distress Call

STANDARD HORIZON GPS Chart Plotters are able to display the location of a vessel in distress when interfaced to a compatible DSC VHF with NMEA-0183 output and the radio receives a DSC Distress Call. STANDARD HORIZON GPS Chart Plotter also log DSC

13. ADVANCED SETTINGS

The Advanced Setup Menu allows customization of many GPS functions, Alarms and NMEA interfacing.

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **ADVANCED SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.

While in this menu you will see many selections which are described in the next sections.

13.0 INPUT/OUTPUT (NMEA, AIS, RADAR)

13.0.0 Input

The CP390i has 4 Inputs and 5 Outputs connections. The CPF390i has 3 Inputs and 3 Outputs connections.

These ports may be set up to receive and output the following.

- NMEA-0183 - NMEA devices* set to 4800 Baud (default setting)
- Fish Finder: Only for CP390i: FF525 50/200kHz Black Box Fish Finder - refer to Fish Finder Owner's Manual
- C-COM - C-Weather refer to Section 15
- Radar - SI-TEX optional Radar refer to Radar Owner's Manual
- AIS 38400 - AIS Receiver, refer to Section 14
- MOBILARM - Mobilarm receiver, refer to Section 16
- Disabled - allows the port to be disabled.

*NOTE**

RS232 not opto-isolated electrical interface

NOTE

When a Port is configured, both the Input and Output have the same setting. Port1 is set to Radar, both the Input and Output wires are set to SI-TEX proprietary Radar sentences. This means other devices should not be connected to the Input or Output wires.

13.0.1 Output

The ports may be setup to output NMEA sentences. The table below shows the default setting each port.

CP390i

Sentence	Port1	Port2	Port3	Port4	Port5
GLL	On	On	On	On	On
VTG	Off	Off	Off	Off	Off
BWC	Off	Off	Off	Off	Off
WCV	Off	Off	Off	Off	Off

APA	Off	Off	On	Off	Off
APB	Off	Off	On	Off	Off
HDG	Off	Off	Off	Off	Off
BOD	Off	Off	On	Off	Off
XTE	On	On	On	On	On
RMA	Off	Off	Off	Off	Off
RMB	Off	Off	Off	Off	Off
RMC	On	On	On	On	On
GGA	On	On	On	On	On
HSC	Off	Off	Off	Off	Off
DBT	On	Off	Off	Off	Off
DPT	On	Off	Off	Off	Off
MTW	On	Off	Off	Off	Off
VHW	On	Off	Off	Off	Off
GSA	On	Off	Off	Off	Off
GSV	On	Off	Off	Off	Off

CPF390i

Sentence	Port1	Port2	Port3
GLL	On	On	On
VTG	Off	Off	Off
BWC	Off	Off	Off
WCV	Off	Off	Off
APA	Off	Off	Off
APB	Off	Off	Off
HDG	Off	Off	Off
BOD	Off	Off	Off
XTE	On	On	On
RMA	Off	Off	Off
RMB	Off	Off	Off
RMC	On	On	On
GGA	On	On	On
HSC	Off	Off	Off
DBT	On	Off	Off
DPT	On	Off	Off
MTW	On	Off	Off
VHW	On	Off	Off
GSA	On	Off	Off
GSV	On	Off	Off

13.1 NAVIGATE

The Navigate Menu allows customization of the Coordinate System (Loran TD's), Chart Datum, Chart Orientation Resolution (angle the vessel has to change before the chart is redrawn) and Static Navigation. See the following table

Coordinate System	: Selections are: a. TD: Time Difference, based on Loran (see the following Par. 13.1.0) b. UTM: Universal Transverse Mercator Grid c. ddd mm.mmm: Degrees Minutes and Thousands of Minutes d. ddd mm.mm: Degrees Minutes and Hundredths of Minutes e. ddd mm.ss: Degrees Minutes and Seconds (default)
Chart Datum	: Allows selection of Chart Datums. The default Datum is WGS84 as C-MAP By JEPPESEN cartography has been compiled using the WGS84 Datum. A datum is a mathematical

model of the Earth which approximates the shape of the Earth, and enables calculations such as position and area to be carried out in a consistent and accurate manner.

Chart Orientation Resolution : Sets the angle the vessel has to change before the chart is redrawn. The default setting is 30 degrees. Example: if the vessel is heading 000T at a speed of 25 Kts, the display will redraw:

- In Home Mode the GPS Chart Plotter centers the location of the vessel in the center of the display. To keep the vessel in the center of the display the GPS Chart Plotter will occasionally redraw.
- If the vessel changes course greater than 330T or more than 30T the chart will be redrawn.

Static Navigation : Sets up a threshold for the speed. When the speed received from the positioning device is under that threshold, the GPS Chart Plotter displays zero. The default setting is 0.9 Kts.

13.1.0 Loran TD

The Loran TD selection allows the GPS Chart Plotter to be set up so the user can enter in Loran TD's directly into the GPS Chart Plotter. After the TD's have been entered, and the user changes to ddd mm.sss (Degrees Minutes and Seconds) the TD's will be converted to Lat/Lon coordinates.

To use the TD Coordinate System the user must setup the Chain and Pair information of the TD's. If you do not know this information, refer to paper charts that show the Chain and Pair information.

ASF1/2 : **Additional Secondary phase Factor (TD Coordinate System)**
Correction to TD1/2 values which can be inserted by the user to take in account the additional signal propagation delay over a mixed land/seawater path compared to an all-seawater path. Normally the user does not enter a ASF value. However for experienced users this function allows entering of signal delay values to fine adjust the calculated position. The user should enter delay values to fine adjust the position calculated.

Alter : **Alternate Solution (TD Coordinate System)**
Parameter selected by the user that is applied in the conversion of geographical coordinates Lat/Lon to TD values. To be used if the position displayed is roughly not correct.

13.2 COMPASS

The GPS Chart Plotter computes compass direction from the constellation of GPS satellites. For the GPS Chart Plotter to compute direction the vessel must be moving through the water unless connected to an optional Flux Gate Compass sensor. The Compass Menu allows the GPS Chart Plotter to customize the following selections:

Bearings : Selects between True and Magnetic. When Magnetic bearings is enabled, the GPS Chart Plotter applies the selected Magnetic Variation (Auto or Manual, see next paragraph) to compute Magnetic bearing.

Variation : Allows the user to select Auto or Manual. When Auto mode is selected the GPS Chart Plotter computes the offset by the current GPS fixed location. Manual mode allows the user to enter in a Magnetic Variation that is applied in the True conversion.

Calibration : This function allows a user to enter in the offset for areas that the vessel may cruise instead of entering in a manual offset for one location. This offset is useful for cruising vessels or vessels that travel internationally often.

N	N/E	E	S/E	S	S/W	W	N/W
+00°	+00°	+00°	+00°	+00°	+00°	+00°	+00°

Figure 13.2 - Compass Table

13.3 ALARMS

The Alarms Menu is used to select and setup audible and visual Alarms. Available alarms are Arrival, XTE, Depth, Anchor and Grounding Alarm.

Arrival Alarm	: Alerts when the vessel is approaching single destination point or when arriving at a leg in a Route. Available selections: 0.00 to 9.99Nm.
XTE Alarm	: Alerts when the vessel is deviating from a defined course. Available selections: 0.00 to 9.99Nm.
Depth Alarm	: Alerts when the received depth Value is lower than the selected value. Available selections: 0000 to 3000Ft.
Anchor Alarm	: Alerts when the ships moves off a selected locations by a selected distance. Available selections: 0.00 to 9.99Nm.
Audible Alarm	: Enables or disables the alarm beep.
Grounding Alarm	: Looks ahead of the vessels heading to see if a potential danger exists. When the Grounding Alarm is enabled the GPS Chart Plotter will draw a triangle in front of the vessel on the Chart page showing the area that is being searched as shown below. The depth and range (distance) of the area the GPS Chart Plotter looks ahead for a shallow area can be set using this function.
Grounding Alarm Range	: Allows setting the distance of the grounding alarm zone (the length of the sector to be detected) among the 0.25, 0.5, 1.0 Nm selections. When a depth or any of the searched objects is found in the scanned area, a tick marker is printed on the relative box in the Grounding Alarm Report page to identify which dangerous objects have been currently detected.
Grounding Alarm Report	: This function allows displaying a report of the dangerous objects currently detected.

The following warning appears when the Grounding Alarm is enabled.

NOTES

The Grounding Alarm function is available only if a NT*/MAX C-CARD is inserted. It also affects the screen redraw speed so we suggest to disable it when not used.

When any of the objects checked are found for the first time, the GPS Chart Plotter shows a pop up window to alert the user of the possible danger. The name of each new dangerous object found is reported in the warning window. In the Grounding Alarm Report page the relative item has a tick marker next to it, to identify the dangerous object currently detected. If in the next search cycle the same objects are found again, the alarm window will not be shown. Instead, if in the next searches the objects found before are no longer detected, their relevant item in the Grounding Alarm Report page is cleared (note that in this case, if the same object type is found again later, the Alarm will be shown). The GPS Chart Plotter shows an icon on the charts that identifies when a Grounding Alarm is detected.

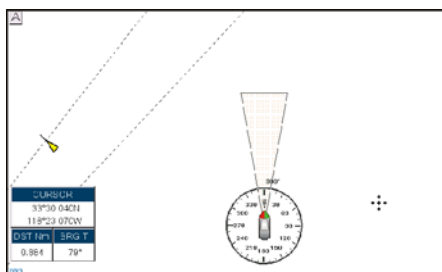


Figure 13.3 - Grounding Alarm

13.4 SIMULATION

The built-in Simulator function allows you to become proficient in the use of the GPS Chart Plotter, see the following Simulation Menu:

Simulation Mode	: Three selections: a. Off - turn the Simulation Mode Off b. On - enable the Simulation Mode, where the speed and course are adjusted by entering in values in the Course and Speed selection discussed later in this table. c. Route - this selection allows you to navigate to a saved route.
Course	: To start the simulator you can insert the Course value.
Speed	: To start the simulator you can insert the Speed value.
Date	: To start the simulator you can insert the date.
Time	: To start the simulator you can insert the time.
Cursor Control	: Enables (On)/disables (Off) the cursor control. Moving the ShuttlePoint knob up or down will change the SOG and left or right will change the COG of the simulated vessel.
Demo Mode	: In Demo Mode the GPS Chart Plotter automatically places a Destination point on the Chart page and simulates navigation to the point. Also, the active page changes automatically every 10 seconds. The pages are shown in the following order: Start-up screen, GPS Status, Chart/Compass tape, Chart/Fish Finder, Full page Fish Finder, Full page Radar, Navigation, Highway, Celestial, NMEA. Once the Demo Mode is enabled, pressing any key it is possible to temporarily exit and return to GPS Chart Plotter normal operation, but if you do not touch any key for 30 seconds Demo Mode re-starts.

13.4.0 Navigating a Route in Simulation Mode

This selection allows you to navigate to a saved Route to see how data windows on the Chart page and how the Navigation and Highway pages operate.

1. Create a Route. Refer to Par. 9.0 Route.
2. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
3. Move the ShuttlePoint knob down to highlight **ADVANCED SETUP**, then press **[ENT]**.
4. Move the ShuttlePoint knob to highlight **SIMULATION** and press **[ENT]**.
5. Move the ShuttlePoint knob to highlight **SIMULATION MODE** and press **[ENT]** to show a popup window.
6. Move the ShuttlePoint knob to highlight **ROUTE** and press **[ENT]** which will show a popup window with the Route(s) that are stored in the GPS Chart Plotter's memory.
7. Highlight the desired Route and press **[ENT]**.
8. Move the ShuttlePoint knob to highlight **SPEED** and press **[ENT]**.
9. Enter in the speed you want to vessel to travel at in Simulation Mode, by moving the ShuttlePoint knob left or right to select a number and up or down to change a number.
10. When the speed is adjusted, press **[ENT]**.
11. Press **[CLR]** multiple times until the Chart page is shown.

13.5 DSC POLLING

This menu is used to enable or disable features related to the DSC function.

Auto Position	: Selects between Manual or Auto. See also the Par. 12.8.1. When Auto Position item is set to Manual and receiving the Position Request, the Position Request pop-up window is not displayed and the cursor does not move to the position of the received Position Request data point. Otherwise when Auto Position item is set to Auto , the GPS Chart Plotter works as follows: 1 : when receiving the Position Request, the Position Request popup window is displayed; 2 : when selecting VIEW ON CHART , the position is indicated on the chart marked with "P". The cursor is moved to the point "P" and shows the point in the center of the screen; 3 : when moving the cursor from "P", the location can be confirmed. At this time, the same MMSI Position Request data that were received before are remaining and displayed.
Auto Info	: Enables or disables the Auto Info. This selection is available only when Auto Position is set to Manual. If Auto Info is set to On, when receiving the Position Request it is possible to center the cursor over the top of the Position Request icon and show the Position Request popup window

14. AIS

AIS is an Automatic Identification System. It has been introduced to improve the safety of navigation by assisting in the efficient operation of ship-to-ship location reporting and VTS applications. The system should enable operators to obtain information from the ship automatically, requiring a minimum of involvement of ship's personnel, and should have a high level of availability. AIS transponders installed on IMO vessels use VHF frequencies to:

- Transmit details of their own vessel
- Receive details from other vessels or navigation aids within VHF range.

STANDARD HORIZON GPS Chart Plotters are able to display AIS Target (for collision avoidance) on the Chart page and AIS List pages when connected to a AIS Receiver (GX2100 or GX2150 STANDARD HORIZON VHF/AIS transceiver) or transponders which output NMEA-0183 VDM sentence at 38400 or 4800 baud. The Chart Plotters are able to show targets from both Class A (commercial) and Class B targets.

14.0 SYSTEM DEFINITIONS

- **Target:** It is a vessel equipped with AIS. Information about the targets is being received by AIS Receiver and displayed on the screen.
- **CPA :** Closest Point of Approach is the closest distance that will be achieved between your vessel and the tracked target, based on your vessel's speed and direction and the target's speed and direction.
- **CPA Limit:** This is the distance from your vessel that a target may reach before a target is deemed a threat.
- **CPA Alarm:** Occurs if CPA is less or equal to CPA Limit. This test is done for active targets only.
- **TCPA:** Time to Closest Point of Approach is the time remaining until the CPA will occur.
- **TCPA Limit:** This is the time remaining before the CPA is reached.
- **TCPA Alarm:** Occurs if TCPA is less or equal to TCPA Limit. This test is done for active targets only and if CPA value is less or equal to CPA Limit.
- **Radio Call Sign:** International call sign assigned to vessel, often used on voice radio.
- **Name:** Name of ship, 20 characters.
- **MMSI:** Maritime Mobile Service Identity.
- **MMSI number:** A unique 9 digit number that is assigned to a DSC radio station. It primarily registers the boat information in the U.S. Coast Guard's national distress database for use in emergency situations.
- **Active Target:** Target located within the Activation Range. Active Target is represented by oriented triangle with COG and Heading vectors. Rate of turn may also be displayed.
- **Dangerous Target:** Target detected by CPA or TCPA Alarm. Dangerous Target is Active Target by definition. For better visibility Dangerous Target symbol is flashing.
- **Sleeping Target:** Target located outside the Activation Range. Sleeping Target is represented by a small oriented triangle.
- **Lost Target:** When the AIS info is not received from that vessel for 3.5 minutes. The presentation will be a flashing black triangle with a cross through.
- **Activation Range:** Range around your boat where targets become active. AIS Target

become active within this range. Activation Range should be greater than CPA Limit by definition.

NOTE

A Target is removed from the screen if data is not received for 10 minutes.
 The maximum number of tracked Class A or B targets is 200.
 This information is updated every 3 seconds to 6 minutes depending on speed and rate of turn, enabling the track of the vessels in range to be plotted.





TARGET STATUS	DESCRIPTION	SYMBOL
ACTIVE TARGET	Target located within the Activation Range.	
DANGEROUS TARGET	Target detected by CPA or TCPA Alarm. Dangerous Target is Active Target by definition.	
SLEEPING TARGET	Target located outside the Activation Range.	
LOST TARGET	Ais info is not received from that vessel for 3.5 minutes.	

Figure 14.0 - AIS Symbols

14.1 MENU

To configure the GPS Chart Plotter to receive AIS data, follow the procedure:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **AIS SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right. The new AIS Menu appears on the screen. The available functions are described in the following table.

Display	: Turns the display of AIS Targets overlay on the cartography On or Off. The default setting is On.
Activation Range	: Defines the range from the fix within which the AIS Target becomes active. The values allowed are from 0.1 to 20 Nm. The default setting is 5 Nm.
CPA Alarm	: Turns On or Off the alarm. The default setting is On.
CPA Limit	: The values allowed are from 0.1 to 10 Nm. The default setting is 0.5 Nm.
TCPA Alarm	: Turns On or Off the alarm. The default setting is On.
TCPA Limit	: The values allowed are from 1 to 30 Min. The default setting is 10 Min.

14.2 AIS SETUP

Refer to Par. 2.4 for connections.

14.3 QUICK INFO ON AIS TARGET

By placing the cursor over a AIS Target icon using the ShuttlePoint knob, the following information is displayed (see the following picture):

- Vessel Name
- MMSI number
- Radio Call Sign
- SOG
- COG
- CPA and TCPA values



Figure 14.3 - Quick Info on AIS

NOTE

The selected AIS Target icon is surrounded by a square frame when user places the cursor over the icon.

14.4 LIST

It is possible to show the AIS List page that show basic information of the Target ship with the ability to select a Target ship and locate it on the chart.

Follow the procedure:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **AIS LIST** and press **[ENT]**.

AIS LIST							
NAME	CALL SIGN	MMSI	SO/NL/DCR	SOG Kts	COG T	CPA Nm	TCPA
\$ M/L/0	SIM/L/0	10000000	10000000	1.0	56°	04	08:30
\$ M/L/6	SIM/L/6	10000006	10000006	3.0	288°	07	01:01
\$ M/L/5	SIM/L/5	10000005	10000005	4.5	3°	61	-->---
\$ M/L/9	SIM/L/9	10000009	10000009	3.1	200°	3.25	-->---
\$ M/L/8	SIM/L/8	10000008	10000008	1.0	186°	3.87	-->---
\$ M/L/1	SIM/L/1	10000001	10000001	3.7	76°	---	-->---
\$ M/L/2	SIM/L/2	10000002	10000002	4.6	255°	---	-->---
\$ M/L/3	SIM/L/3	10000003	10000003	1.0	211°	---	-->---
\$ M/L/4	SIM/L/4	10000004	10000004	1.2	258°	---	-->---

EH™ to show the target on chart

Figure 14.4 - AIS List page

3. Move the ShuttlePoint knob up or down to select the Target and scroll the page up or down. Press **[ENTER]** exits the page and shows the Target ship on the Chart page along with the current position of the GPS Chart Plotter.

14.5 AIS TARGET COLORS

The received AIS Targets are shown in color. The color depicts the type of AIS ship shown on the Chart page. Refer to following table.

TYPE OF SHIP	GRAPHICAL PRESENTATION
Undefined	▲ (yellow)
Fishing	△ (white)
Pleasure Craft	▲ (light green)
Tanker	▲ (dark blue)
Pilot Vessel	△ (light gray)
SAR	▲ (black)
Tug	△ (pale green)
Port tenders	▲ (brown)
Vessels with antipollution facilities or equipment	△ (light blu)
Low enforcement vessels	▲ (light red)
Medical transport	▲ (dark green)
Vessels according to Resolution N° 18 (Mob-83)	▲ (cyan)
HSC	▲ (red)
Passenger ship	▲ (magenta)
Cargo ship	▲ (dark gray)

Figure 14.5 - Color AIS Targets

15. C-WEATHER SERVICE

C-Weather is a **free** service available on the CP390i and CPF390i. C-Weather service gives excellent coverage for the whole World. Weather forecasts are based on data received from the leading meteorological centers. This data is processed by Jeppesen server and made available via INTERNET connection to be transferred by using the C-Map By JEPPESEN PC-Planner Windows Application. Then the weather data can be saved into a User C-CARD to be loaded by the GPS Chart Plotter (see Par. 15.0.1).

Features: 5-day weather forecast updated every 6 hours; coverage of 180x180 Nm with information frequency of 0.5° Lat/Lon; wind direction and strength; wave height and direction; ground temperature; level of humidity; visibility in miles.








Data Type	Display
WIND (Speed & Dir)	- 0 →
WAVE Height & Dir	- 1 →
TEMPERATURE	18°
HUMIDITY (%)	30
VISIBILITY	20
WEATHER TYPE: Sun	
WEATHER TYPE: Rain	
WEATHER TYPE: Fog	
WEATHER TYPE: Snow	
WEATHER TYPE: Clouds	
WEATHER TYPE: Partly Cloudy	
WEATHER TYPE: Thunderstorm	

Figure 15 - Weather data package

15.0 C-WEATHER SERVICE MENU

To select the menu:

1. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **C-WEATHER SERVICE** and press **[ENT]** or move the ShuttlePoint knob to the right.

The C-Weather Menu is shown on the screen, the items are described in the following paragraphs.

15.0.0 Download

Allows to connect the software to the weather server and to download weather data directly via C-COM.

Select Country To Call : Allows the selection of the country to call. The whole telephone number set is automatically updated after every download.

SIM Pin : Allows inserting of the Pin of the SIM.

Download Area : Allows the weather download: a squared grey area, where the weather data will be downloaded, is centered on cursor position. See the following picture.

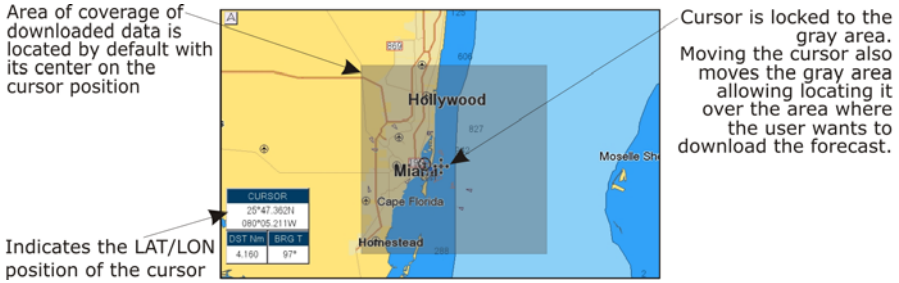


Figure 15.0.0 - Example of Download Area

Press [LOAD] to activate the C-Weather Download: the whole data package (see the previous "Weather data package" table) are downloaded. **[STOP]** allows to interrupt the data download. At the end of the operation press **[EXIT]** to close the window.

15.0.1 Copy From User C-CARD

Allows the whole data package C-Weather loading from the User C-CARD.

15.0.2 Weather Forecast

Allows selecting the Layer of specific weather data to be displayed on the screen and to change date and time of the forecast preview. The following functions are available:

- **Panning:** default usage of the cursor key is the normal panning function.
- **Zoom in/out:** zoom in/out functions are allowed as usual by using **[ZOOM IN]/[ZOOM OUT]**.
- **Set of date and time:** **[DATE]** to modify date and time values.
- **Layer selection:** **[LAYER]** to cycle of the weather layers.
- **Exit:** **[EXIT]** to close the weather prediction page.

15.0.3 Real Time View

The following selections are available:

- **Real Time View On:** the data is shown (the area of the download) at the current date and time (received from the GPS).
- **Real Time View Off:** the weather data is not displayed.

The layer displayed is the one selected into the previous menu item.

15.0.4 Type of Data

Allows selecting the type of data, refer to the table in the Figure 15.

16. MOBILARM

The MOBILARM is an automated crew monitoring system dedicated to monitoring onboard crew by maintaining a constant link between the crew member and the boat. When a man over-board event happens, an automatic alarm is sounded, and the vessels position is shown on the STANDARD HORIZON GPS Chart Plotter.

16.0 MOBILARM-GPS CHART PLOTTER CONNECTION

Connect the MOBILARM system to one of the Ports on the STANDARD HORIZON GPS Chart Plotter. Refer to Par. 2.4.0 "Connection Table" for CP390i, Par. 2.4.2 "Connection Table" for CPF390i and MOBILARM Owner's Manuals for connections.

Connection Example

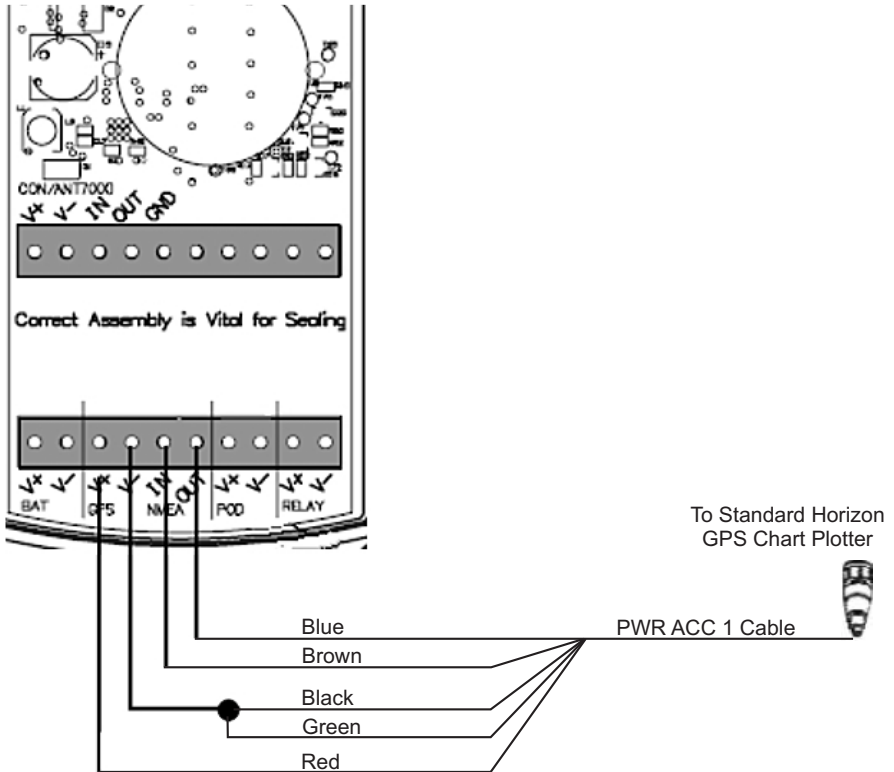


Figure 16.0 - Connection Example

NOTE

Note the CP390i and CPF390i have 3 Ports so Port1, Port2 or Port3 can be used.

Port1 Example

Chart Plotter	MOBILARM
Blue	NMEA Out
Brown	NMEA In
Red	GPS V+
Black	GPS V-

NOTE

Refer to the Figure 16.0, the Blue and Brown wires are from Port1. If these wires are being used to connect to another NMEA device, choose another wire pair and configure the port associated with the wires.

16.1 SOFTWARE SETUP

After the Port has been chosen and connected in Par. 16.0, the GPS Chart Plotter must be setup to communicate with the MOBILARM.

Use the steps below to set up the Port the MOBILARM is connected to the GPS Chart Plotter.

1. Select the Chart page.
2. Press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
3. Move the ShuttlePoint knob to highlight **ADVANCED SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Move the ShuttlePoint knob to highlight **IN/OUT CONNECTIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
5. Move the ShuttlePoint knob to highlight any input port and press **[ENT]** or move the ShuttlePoint knob to the right.
6. Move the ShuttlePoint knob up/down to select **MOBILARM** and press **[ENT]** or move the ShuttlePoint knob to the right. Selecting MOBILARM format, activates the function.
7. Press **[CLR]** or move the ShuttlePoint knob to the left until the Chart page is shown.

The GPS Chart Plotter continuously verifies the communication status with MOBILARM PTX (Personal Transponder) device. When a signal from the PTX is lost for more than one minute, the MOBILARM sends a NMEA message to the GPS Chart Plotter which will produce an alarm and a popup window will be shown on STANDARD HORIZON GPS Chart Plotter.

16.2 MOBILARM STATUS

To confirm the status of the MOBILARM, select the About page:

1. Select the Chart page.
2. Press **[MENU]** two times. Move the ShuttlePoint knob to highlight **About...** and press **[ENT]**.

On the About page you can see the status of the MOBILARM, below are the possible messages.

- a. **Function not Activated** : MOBILARM has not been setup in the I/O Connections menu. Refer to Par. 16.1.
- b. **Not connected/detected** : possible wiring problem, confirm wires are correct con-

- c. **Connected** : the communication with MOBILARM device is Ok.
- d. **Signal Lost** : the MOBILARM has been connected in the past, however no signal is being detected from the MOBILARM. Check wire connections from the GPS Chart Plotter to the MOBILARM.
- e. **No valid GPS position** : the communication with MOBILARM device is Ok, but the GPS position fix is not received from the GPS Chart Plotter.

See the following example of About page:

1 MOBILARM status Information

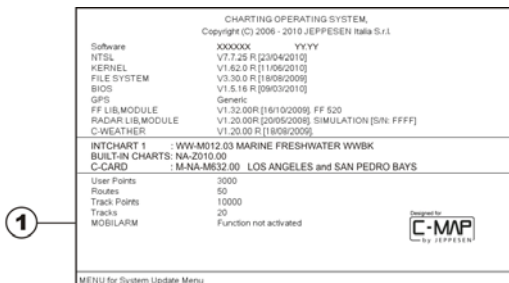


Figure 16.2 - Example of About page with MOBILARM information

16.3 MOBILARM PTX

A PTX is the Personal Transponder device that is worn by the crew. If a crew member falls in the water the MOBILARM sends a signal to the GPS Chart Plotter which creates and displays a PTX icon on the Chart page.

16.3.0 MOBILARM MOB alert is received

When crew member falls in the water, the MOBILARM sends a signal to the GPS Chart Plotter which creates and displays a PTX MOB icon on the Chart page.



Figure 16.3.0 - The PTX icon

On the GPS Chart Plotter all menus and/or pages are closed and the chart is centered on the PTX MOB received position. A Audible Alarm is heard and a pop-up warning window appears to notify that a PTX has been received:



Figure 16.3.0a - Example of PTX warning window

It is possible to Goto (navigate) to the received MOBILARM PTX position (see Par. 16.4.1) or open the MOBILARM Alarm Status List page (see Par. 16.4.2). Selecting Goto or Alarm Status List will mute the Audible Alarm.

NOTE

When the same PTX is received again:

- a. If the received PTX is not the active one, the user must confirm to navigate to it.
- b. If the received PTX is the active one, navigation data is updated. The PTX icon appears at the new position and a pop-up warning window appears.

16.4 PLACING CURSOR ON THE PTX ICON

Moving the ShuttlePoint knob so the cursor is over the PTX icon on the Chart page will show an information window and allow you to Goto the location of the PTX, delete the PTX icon or show the Alarm Status list as shown below.



Figure 16.4 - Example of PTX information window

16.4.0 Delete PTX

The Delete PTX function permanently removes the selected PTX from the MOBILARM Alarm Status List and from the Chart page. Using the ShuttlePoint knob, move the cursor over the PTX icon and then press **[DELETE]**. A warning pop-up window will be shown. Select **YES** and press **[ENT]**.

16.4.1 Goto PTX

When Goto is selected on the GPS Chart Plotter, navigation will start to the PTX icon location. After the GPS Chart Plotter has received a PTX MOB alarm, using the ShuttlePoint knob move the cursor over the PTX to navigate to and then two Soft Keys under the display

will be shown:

- a. **[Goto]**, when pressed will start navigating to the PTX MOB location
- b. **[List]**, when pressed will show the MOBILARM Alarm Status List page. Refer to Par. 16.4.2 for Alarm Status List.



Figure 16.4.1 - Example of Goto PTX

If the navigation is set to the selected PTX icon, to terminate the navigation press **[STOPGoto]**.



Figure 16.4.1a - Example of Stop Goto PTX

16.4.2 The MOBILARM Alarm Status List

The MOBILARM Alarm Status List shows the list of all PTX that the GPS Chart Plotter has received an alarm from. To review the page:

1. Select the Chart Page.
2. Press **[MENU]** to show the Main Menu.
3. Move the ShuttlePoint knob to highlight **USER POINTS** and press **[ENT]**.
4. Move the ShuttlePoint knob to highlight **MOBILARM** and press **[ENT]**.

- ① PTX number
- ② Time the PTX alarm was received
- ③ PTX position
- ④ PTX status

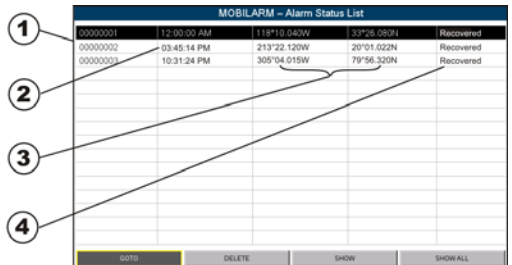


Figure 16.4.2 - Example of MOBilarm PTX List page

This page allows you to:

GOTO	Activates navigation to the selected PTX. Once the navigation has been activated, close all menus/data pages (if open) and center the chart selected PTX.
DELETE	Deletes the selected PTX.
SHOW	Centers the chart on the selected PTX.
SHOW ALL	Selects the best chart scale to see all PTX icons on the chart at the same time.

17. FISH FINDER FOR CPF390i

The Fish Finder consists of a high power transmitter, sensitive receiver and a transducer. The Fish Finder sends an electrical pulse to the transducer, which contains an element that converts the pulse into acoustic (sound) waves, which is sent through the water. As this wave travels from the transducer to the bottom, it may strike fish, structures, thermoclines (temperature changes in the water). When the wave strikes an object(s) a certain amount of the wave is reflected back to the transducer depending on the composition and shape of the object. When the reflected wave is returned to the transducer it is converted into a voltage and is amplified by the receiver, processed and sent to the display. The speed of sound in water is roughly 4800Ft/sec, so the time lapse between the transmitted signal and the received echo can be measured and the distance to the object determined.

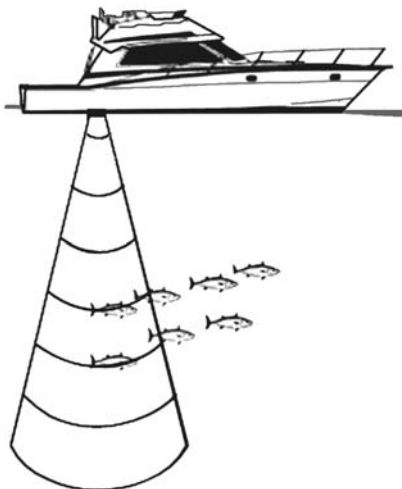


Figure 17 - Fish Finder working principle

17.0 ENABLE/DISABLE

The internal Fish Finder may be enabled (default setting) or disabled by the following procedure:

1. From the Chart page, press **[MENU]**, move the ShuttlePoint knob to highlight **SETUP MENU** and press **[ENT]**.
2. Move the ShuttlePoint knob to highlight **ADVANCED SETUP** and press **[ENT]** or move the ShuttlePoint knob to the right.
3. Move the ShuttlePoint knob to highlight **IN/OUT CONNECTIONS** and press **[ENT]** or move the ShuttlePoint knob to the right.
4. Move the ShuttlePoint knob to highlight **FISH FINDER** and press **[ENT]** or move the ShuttlePoint knob to the right.
5. Move the ShuttlePoint knob up/down to select **OFF** and press **[ENT]** or move the ShuttlePoint knob to the right.
6. Press **[CLR]** or move the ShuttlePoint knob to the left until the Chart page is shown.

17.1 UNDERSTANDING THE FISH FINDER PAGE

The display on CPF390i shows a time history of the echoes received by the transducer. The CPF390i have a menu that allows adjustments to receiver sensitivity, depth range and scrolling speed of the Fish Finder display.

- ① Warning message
- ② Fish Finder window
- ③ Digital Depth
- ④ Water temperature
- ⑤ Shallow Alarm Bar
- ⑥ Range Bar
- ⑦ Variable Depth Marker (VDM)
- ⑧ A-Scope
- ⑨ Deep Alarm Bar
- ⑩ Transmit Frequency
- ⑪ Color Bar

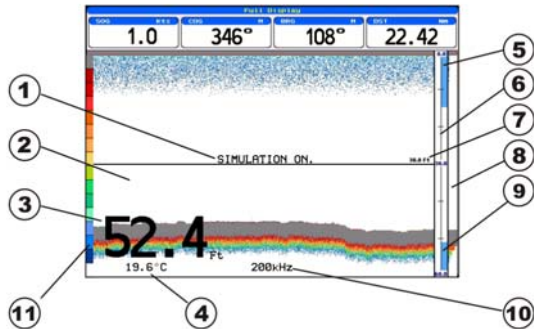


Figure 17.1 - The Fish Finder page

The following is a brief description of terms listed in the previous Figure 17.1:

- ① **Warning Message**
Flashing label that is turned On when the Echosounder is in Simulation Mode.
The following is the list of the warning messages (see also Par. 17.13):
 - SHALLOW WATER
 - DEEP WATER
 - HIGH WATER TEMP
 - LOW WATER TEMP
 - WATER TEMP RATE
 - FISH SPOT
 - NO DATA, problem with connection between CP and Fish Finder Tee Cable
- ② **Fish Finder window**
Graphic presentation of sonar soundings recorded as a continuous profile scrolling across the screen from right to left. Such recordings represent the image of the water beneath your boat, items appear as they pass under your transducer; the items on the right side of the screen are closer to you than those on the left. The correct interpretation of the Fish Finder page allows retrieving useful information about what is under the boat.
- ③ **Digital Depth**
Readout of the current bottom depth.
- ④ **Water Temperature**
Readout of the current water temperature returned by the temperature sensor included in DST520, DST521, DST523, DST525, DST526, DST527, DST528A.
- ⑤ **Shallow Alarm Bar**
Located on the right side of the Range Bar, the Shallow Alarm Bar shows the range outside of which the depth measurement will trigger a Shallow Alarm.

- ⑥ **Range Bar**
Vertical graduated bar that is located along the right side of the screen. It is a scale which reflects the depth of the area being displayed.
- ⑦ **Variable Depth Marker (VDM)**
Horizontal line on to the Fish Finder page window with a depth label. Move the ShuttlePoint knob up or down to change the position of the VDM. The label displays the depth of the cursor position. The VDM can be moved to any location pinpointing the depth of a target.
- ⑧ **A-Scope**
Real time representation of fish and bottom features passing through the beam of the transducer, drawn as column of horizontal lines whose length and hue is proportional to the echo strength returned. The color of the echo strength depends on the selected display color. When the default palette is selected, the strongest sonar returns will be shown as red and weaker returns will be shown blue.
- ⑨ **Deep Alarm Bar**
Bar located on the left side of the Range Bar, showing the portion of the Echogram currently represented in the zoomed window (on the left part of the screen). It is turned On selecting the Echosounder Split page.
- ⑩ **Transmit Frequency**
Shows the selected depth transmit frequency. As a reference, 200kHz selection is normally used to see targets in depth up to 400Ft, and 50kHz is used in water over 400Ft.
- ⑪ **Color Bar¹**
Colored scale located on the left side of the screen that shows the colors used in the Fish Finder page to represent the echoes strength. The color on the top of the bar represents the maximum echo strength, while the color on the bottom of the bar represents the minimum echo strength.

NOTE

Color Bar is displayed only if the Fish Finder is in 16 Colors (not 256 Colors) mode. Refer to Par. 17.4 FISH FINDER COLOR to change the color.

17.1.1 Understanding the Fish Finder display

- ① Fish
- ② Thermocline
- ③ White Line
- ④ Surface Clutter
- ⑤ Structures
- ⑥ Bottom Echo Profile

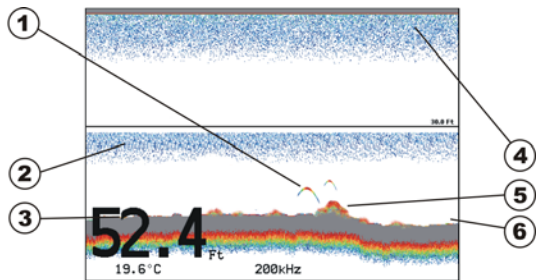


Figure 17.1.1 - The Fish Finder display

① **Fish**

Fish are usually represented by small dots on the display when using 200kHz and by arches when using 50kHz.

② **Thermoclines**

Are the zones where two layers of different water temperatures meet. The greater the temperature differential, the denser the thermocline shows on the screen. Thermoclines are represented as horizontal stripes of noise. They are very important for fishing since often many species of game fish like to suspend in, just above, or just below the thermoclines.

③ **White Line**

The White Line shows the difference between hard, soft bottoms and even distinguishes between fishes and structures located near the bottom. In this way it is easier to tell the difference between a hard and soft bottom and even to distinguish fishes and structures located nearby the bottom.

④ **Surface Clutter**

Appears like noise at the top of the screen extending many feet below the surface. It's caused by many things, including air bubbles, bait fish, plankton and algae.

⑤ **Structures**

Generally, the term "structure" is used to identify objects like wrecks and weeds rising from the bottom.

⑥ **Bottom Echo Profile**

Bottom profile recorded by the Fish Finder. When the echo sounder is set in Auto Range mode, the bottom is kept in the lower half in the display.

17.2 DISPLAYING THE FISH FINDER PAGE

This section explains how to show and customize the selection of the Fish Finder display pages.

1. From all pages (except the Fish Finder page), press **[MENU]**.
From Fish Finder page, press **[MENU]** two times.

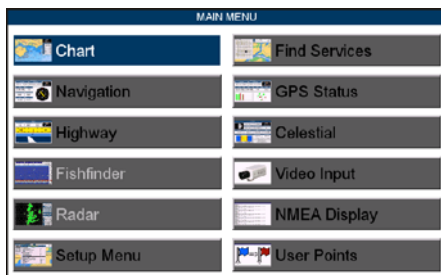


Figure 17.2 - Main Menu

2. Move the ShuttlePoint knob to highlight **FISH FINDER** and press **[ENT]**.

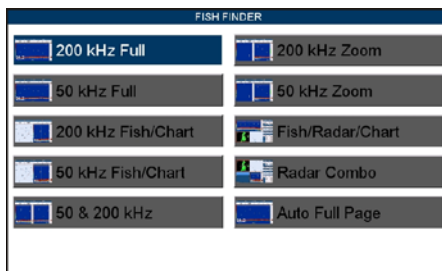


Figure 17.2a - Fish Finder page selection menu

3. Move the ShuttlePoint knob to select the desired display and press **[ENT]**. The Page options are shown in the following paragraphs.

17.2.0 Auto Full page

When this page is selected, the Fish Finder automatically changes the transmit frequency to show depths. Automatic switching occurs when depth of water is less than 400Ft (200kHz) and greater than 400Ft (50kHz).

17.2.1 200kHz Full, 50kHz Full and 50&200kHz Display pages

Allows the user to setup the GPS Chart Plotter display to show 200kHz, 50kHz or 50 & 200 kHz split screen Fish Finder.

200kHz

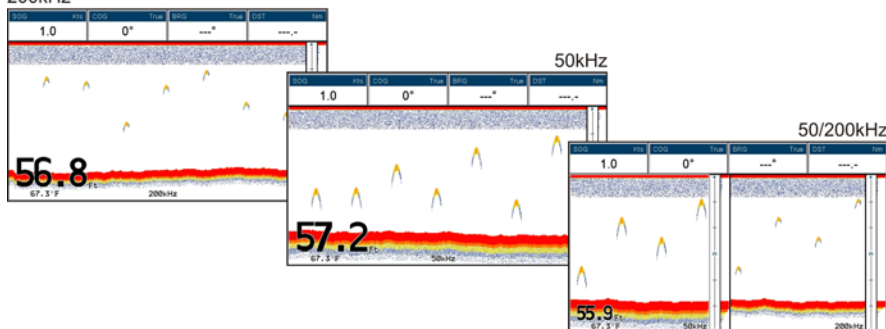


Figure 17.2.1 - Full Display pages

When the 50 & 200 kHz page has been selected the active window has a yellow border. Please follow the procedure below to change the focus:

1. Move the ShuttlePoint knob to the right or left: the focus is changed and the focused window has a yellow border.

17.2.2 200kHz and 50kHz Zoom pages

Allows the user to zoom into the 200kHz or 50kHz Fish Finder display to show detail of the area selected by the VRM (Variable Range Marker). Referring to Figure 17.2.2, the left display shows the zoomed display and the right display shown the unzoomed display.

To select the area to be zoomed in move the ShuttlePoint knob up or down which moves the VRM line. To zoom In or Out, press **[ZOOM IN]** or **[ZOOM OUT]**. The zoom ranges are 2x and 4x the normal Fish Finder display.

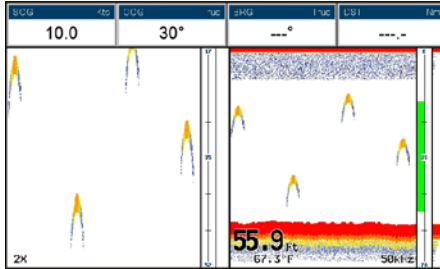


Figure 17.2.2 - Zoom Full page

17.2.3 200kHz and 50kHz Fish/Chart pages

Selects the GPS Chart Plotter display to show the Chart page on the left half of the screen and the Fish Finder on the right half of the screen. 200kHz or 50kHz Fish Finder can be selected on the right half of the display.

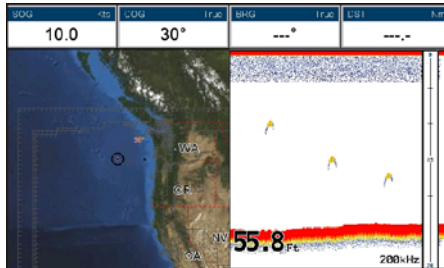


Figure 17.2.3 - Fish/Chart page

When the Fish/Chart page has been selected please follow the procedure below to place the focus on the Chart or Fish Finder window:

1. Press one of the Soft Keys under the display. The Soft Key labels appear on the bottom of the screen. A **[Focus]** Soft Key will be shown.
2. Press **[Focus]** to show the Focus popup window, where the active focus window label is highlighted.
3. Select **CHART** or **FISH FINDER** using the ShuttlePoint knob and press **[ENT]**.



Figure 17.2.3a - Example of Fish/Chart page with **[Focus]** shown (on the left side) and with Focus popup window (on the right side)

NOTE

It is possible to change the focus by pressing and holding **[FIND]** for 2 seconds (in place of 1 and 2 steps in the above procedure).

With the focus on the Chart page the cursor may be moved and all chart menus can be selected. When focus is on the Fish Finder window the Variable Range Marker can be moved to see the depths of targets and Fish Finder menus can be accessed.

17.2.4 Radar pages

17.2.4.0 Fish/Radar/Chart page

Selects the GPS Chart Plotter display to show the Chart, the Fish Finder and the Radar page on the screen.

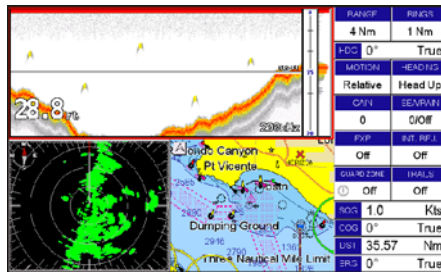


Figure 17.2.4.0 - Fish/Radar/Chart page

17.2.4.1 Radar Combo page

Selects the GPS Chart Plotter display to show the Chart, the Fish Finder, the Radar and the Highway page on the screen.

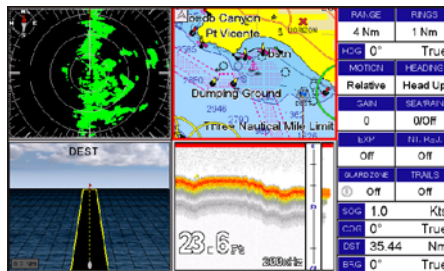


Figure 17.2.4.1 - Radar Combo Page

17.2.4.2 Focus Soft Key

When the Fish/Radar/Chart page or the Combo page has been selected, the active window is highlighted a "red" border around the window. The keyboard commands are related to that focused view. To move the focus to a different window follow the procedure:

1. Press any Soft Key. The Soft Key labels appear on the bottom of the screen. A **[Focus]** Soft Key will be shown.
2. Press **[Focus]** to show the Focus popup window, where the active focus window label is highlighted.

NOTE

It is possible to change the focus by pressing and holding **[FIND]** for 2 seconds (in place of 1 and 2 steps in the previous procedure).

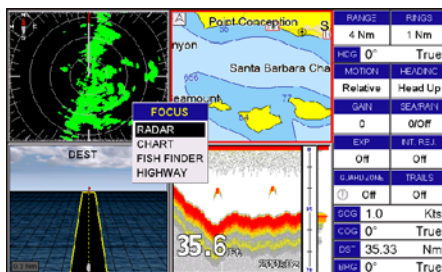


Figure 17.2.4.2 - Example of Combo page with **[Focus]** shown

3. Move the ShuttlePoint knob to highlight the desired window and press **[ENT]**. The red border is moved to the focused window.

NOTE

When the focused window (identified by the red border) is the Fish Finder page and the selected Fish Finder page is the 50 & 200 kHz, it is possible to change the active FF sub-window (identified by the yellow border). To change the focus between the 50kHz and 200kHz sub-window please move the ShuttlePoint knob to the right or left, the focus is changed and the focused window has a yellow border (see also Par. 17.2.1).

17.3 SOFT KEY OPERATION

1. Press any of the Soft Keys to show the key descriptions, then press the **[200kHz]** Soft Key if it has been customized (for details see the Par. 3.7).

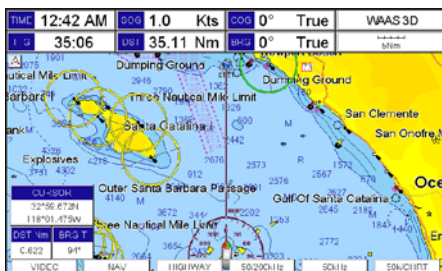


Figure 17.3 - Example of Fish Finder page selection by Soft Keys

17.4 SETUP MENU

This section explains how to show the Fish Finder Setup Menu and describe the Fish Finder Setup Menu sub-options.

1. From the Full Fish Finder page, press **[MENU]**. The following menu appears:

FISH FINDER SETUP	
PRESETS	Cruise
FREQUENCY	50 kHz
GAIN MODE	Manual
RANGE MENU	
INTERF REJECT	Off
SENSITIVITY MENU	
DISPLAY SETUP	
TRANSDUCER SETUP	
ALARMS	
LOAD SETTINGS FROM USER C-CARD	
SAVE SETTINGS TO USER C-CARD	
RESTORE CURRENT PRESET DEFAULTS	
FISH FINDER COLOR	256colors
MENU for Main Menu	

Figure 17.4 - Fish Finder Setup Menu

17.5 FISH FINDER COLOR

Allows you to choose the Fish Finder colors between 16 and 256 colors.

FISH FINDER SETUP	
PRESETS	Cruise
FREQUENCY	50 kHz
GAIN MODE	Manual
RANGE MENU	
INTERF REJECT	Off
SENSITIVITY MENU	
DISPLAY SETUP	
TRANSDUCER SETUP	
ALARMS	
LOAD SETTINGS FROM USER C-CARD	
SAVE SETTINGS TO USER C-CARD	16colors
RESTORE CURRENT PRESET DEFAULTS	256colors
FISH FINDER COLOR	256colors
MENU for Main Menu	

Figure 17.5 - Fish Finder Color Menu

17.6 PRESETS

To simply menu selections, the Fish Finder has two presets that can be easily selected for Fishing or Cruising:

FISH FINDER SETUP	
PRESETS	Fish
FREQUENCY	200 kHz
GAIN MODE	Manual
RANGE MENU	
INTERF REJECT	Off
SENSITIVITY MENU	
DISPLAY SETUP	
TRANSDUCER SETUP	
ALARMS	
LOAD SETTINGS FROM USER C-CARD	
SAVE SETTINGS TO USER C-CARD	
RESTORE CURRENT PRESET DEFAULTS	
MENU for Main Menu	

Figure 17.6 - Presets Menu

	FISH	CRUISE
Gain	Auto	Auto
Range mode	Auto	Auto
Gain offset	0%	10%
Shift	0	0
STC	Short	Short
Noise level	2	4
Scrolling Speed	10	10
Fish Symbols	Echo	Echo
A-Scope	On	On
Surface Declutter	4	4

Figure 17.6a - Presets table

NOTE

For Gain and Gain Offset settings refer to Sensitivity Menu (see Par. 17.11).

For Range and Shift settings refer to Range Menu (see Par. 17.9).

17.7 FREQUENCY

Allows you to choose the frequency among Auto, 50kHz, 200kHz or 50&200kHz when single frequency page is selected.

FISH FINDER SETUP		Auto
PRESETS		50 kHz
FREQUENCY		200 kHz
GAIN MODE		50&200 kHz
RANGE MENU		
INTERF REJECT		Off
SENSITIVITY MENU		
DISPLAY SETUP		
TRANSDUCER SETUP		
ALARMS		
LOAD SETTINGS FROM USER C-CARD		
SAVE SETTINGS TO USER C-CARD		
RESTORE CURRENT PRESET DEFAULTS		
FISH FINDER COLOR		16colors
MENU for Main Menu		

Figure 17.7 - Frequency Menu

17.8 GAIN MODE

FISH FINDER SETUP		Manual
PRESETS		Manual
FREQUENCY		Auto
GAIN MODE		Manual
RANGE MENU		
INTERF REJECT		Off
SENSITIVITY MENU		
DISPLAY SETUP		
TRANSDUCER SETUP		
ALARMS		
LOAD SETTINGS FROM USER C-CARD		
SAVE SETTINGS TO USER C-CARD		
RESTORE CURRENT PRESET DEFAULTS		
FISH FINDER COLOR		16colors
MENU for Main Menu		

Figure 17.8 - Gain Mode Menu

17.8.0 Auto Mode

Allows the Fish Finder to automatically adjust receiver Gain depending on water depth.

17.8.1 Manual Mode

Allows the user to change the Gain manually to fine tune the Fish Finder's receiver.

17.9 RANGE MENU

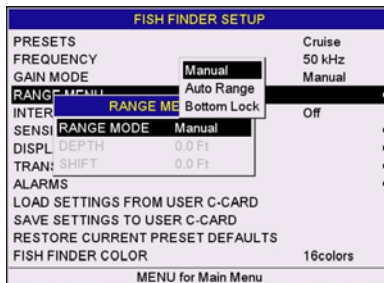


Figure 17.9 - Range Menu

17.9.0 Range Mode

Selects among Manual, Auto Range and Bottom Lock.

- **Manual Mode**

Used to set the depth Range (from the surface) the Fish Finder display will show.

- **Auto Range**

The Fish Finder automatically determines the Range to keep the bottom visible in the lower bottom of the screen. In this mode, Shift is always set to 0.

- **Bottom Lock**

The Bottom Lock function keeps the screen display locked onto a certain Range around the bottom. Let's say the bottom is 400Ft and the Bottom Lock Range is set to display 30Ft around the bottom, the screen (instead of displaying from 0Ft to e.g. 450Ft) will display only a Range of 30Ft around the bottom, e.g. from 380Ft to 410Ft.

17.9.1 Depth

Moves the display from showing the bottom to the depth value entered.

17.9.2 Shift

Shifts the display from the bottom of the transducer to the depth value entered.

Example: Your vessel is in about 57Ft of water, however there is fish suspended in 35Ft of water. You want to display to 10Ft area around the fish. Shift would be set to 30Ft and Depth would be set to 40Ft shown in the following example.

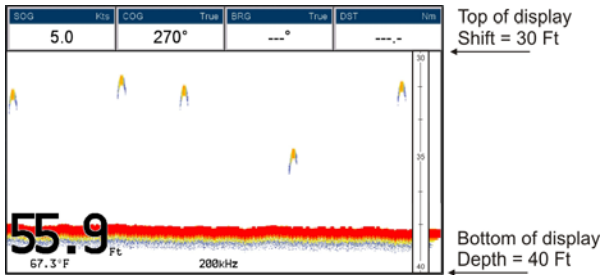


Figure 17.9.2 - Example of Depth and Shift

17.10 INTERFERENCE REJECTION

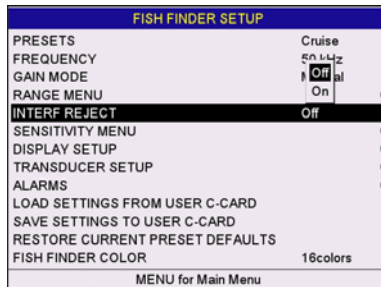


Figure 17.10 - Interference Rejection Menu

Turns On or Off a filter to remove noise from other Fish Finder or Depth Sounders that may be near by when fishing.

17.11 SENSITIVITY MENU

All settings in the Sensitivity Menu are related to the selected Fish Finder transmit frequency (50 or 200kHz).



Figure 17.11 - Sensitivity Menu

17.11.0 Gain

Allows you to control the Sensitivity of the unit's receiver from 0 to 100%. To see more details, increase the receiver Sensitivity by selecting a higher Gain percentage. If there is too much detail or if the screen is cluttered, lowering the Sensitivity may increase the clarity of the display.

NOTE

When the Gain Mode option is set to Auto, the receivers Gain cannot be changed.

When the Gain Mode option is set to Manual, the Gain can be manually adjusted. When switching from Automatic to Manual Mode, the Gain + Offset value is copied into the Manual Gain setting of the receiver.

17.11.1 STC (Sensitivity Time Control)

The STC function attenuates echos from surface down to the specified STC depth by changing the sensitivity of the receiver, decreasing it near the surface and gradually increasing it as the depth increases.

STC impacts bottom finding so can be particularly useful i.e. to better track a rock sea bottom distinguishing it from the mud in suspension over it for example when close to rivers outlet to the sea (consider to use at same time also Dual Frequency mode and White Line for an easier identification of real sea bottom), as well as to solve issues in false bottom detection when in presence of significant surface clutter.

Its default value is SHORT for the 200kHz frequency and MID for the 50kHz frequency. Such values are good in most conditions. However when navigating in very Shallow Waters it may be necessary to switch it to OFF, while in very deep waters with a lot of Surface Clutter it may be better to increase it to MID or LONG.

NOTE

In some situations it may be necessary to adjust the STC so the sounder can read through the surface noise and show the bottom. One indication that the STC needs to be changed is when the display intermittently changes the depth from the correct depth to a very shallow depth.

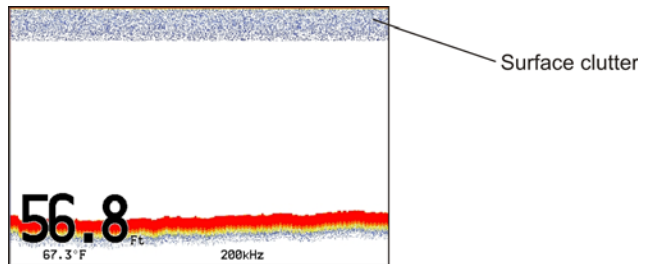


Figure 17.11.1 - STC - Surface Clutter

The STC can be changed from Short, Mid, Long and Custom.

- **STC Length**

This is the depth range which the STC operates. In custom mode it can be varied from 0Ft to 1000Ft (60Ft or 255Ft on previous software versions). In preset mode it's value is reported in the following table.

- **STC Strength**

It is the starting attenuation value of the STC. It acts by attenuating the Gain of the given percentage value. In custom mode it can be varied from 0% to 100%. The STC effect is maximum near the surface, to mitigate the Surface Clutter and it progressively diminishes to 0 at the selected STC depth.

- **Preset values table**

	OFF	SHORT	MID	LONG
STC Depth (Ft)	1	60	60	255
STC Length	0	10%	30%	57%

Figure 17.11.1 - STC Preset values table

When in shallow water and the Fish Finder display is showing a bottom or digital readout deeper than the actual depth this situation may occur if STC is set to LONG or MID when the bottom is shallow. This issue may be resolved by adjusting the STC value to SHORT or even to OFF in very Shallow Waters.

When in DEEP WATER the Fish Finder display is showing a very shallow bottom or digital readout this may happen because in conditions of strong Surface Clutter the Fish Finder may erroneously look on to the Surface Clutter. To solve this situation try to increase the STC to LONG or to CUSTOM increasing the STC length and strength. When in DEEP WATER the Fish Finder doesn't see the bottom, this may happen because the bottom is out of range or is very near to the maximum depth that can be tracked by the Fish Finder. In the latter case this may happen if the bottom composition is soft as mud, if the sea conditions are bad, there are thermoclines or the water is full of suspended materials (silt, plankton). All these factors may affect considerably the performance of the Fish Finder to be able to see the bottom. In these cases change the RANGE MODE from AUTO to MANUAL Range and manually adjust the depth range until the bottom echo becomes visible on the Fish Finder display.

17.11.2 Surface Noise Filter

An automatic filter that attempts to remove Surface Clutter that causes the screen to be filled up with strong return echoes just below the surface. It may seem that the same functionality could be achieved using on the STC control however there is main difference between such control in fact the STC control impacts the capability to detect and track the bottom and is not designed to cancel completely the surface noise, on the other side the Surface Noise Filter attempts to cancel completely the surface noise but it doesn't affect the capability to detect and track the bottom. Filter gradually attenuates surface noises. The Surface Noise Filter has 9 settings: OFF, 1, ..., 8. When set to 1 the Surface Noise is attenuated from surface down to a depth of 5 Ft, increasing the Surface Noise increases the depth in which the Surface Noise is attenuated as well as the attenuation level increases; when the preset is set to 8 the attenuation is maximum and is applied from surface level down to a depth of 255 Ft, as shown in the Surface Noise Filter Table reported below:

SURFACE NOISE FILTER DEPTH								
Preset	1	2	3	4	5	6	7	8
Depth (Ft)	5	10	15	20	30	60	130	255

Figure 17.11.2 - Surface Noise Filter Depth table

17.12 DISPLAY SETUP

Allows the Fish Finder's display page appearance to be changed.

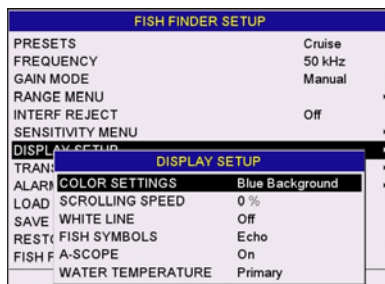


Figure 17.12 - Display Setup Menu

17.12.0 Color Settings

Allows you to change the color of the Fish Finder display from Blue (default), White, Black, Gray scale.



Figure 17.12.0 - White and Blue background examples

17.12.1 Scrolling Speed

Controls the rate the Fish Finder scrolls and updates the Fish Finder display.

17.12.2 White Line

Controls how the bottom type (hard or soft) is shown on the display. When the White Line is Off the bottom return will display as red. When the White Line is On it can be used to determine bottom hardness.

NOTE

The White Line option is not available in the 50 & 200kHz page.

17.12.3 Fish Symbols

Controls the graphical representation of underwater-suspended targets.

- Echo : shown as arches (echoes)
- Icon + Echo : shown as arches with the Fish icon
- Icon + Echo + Depth : shown as arches with the Fish icon and relative depth values
- Echo + Depth : shown depth values
- Icon : shown as Fish icons without the arches
- Icon + Depth : shown as Fish icons and their relative depth values (shown accordingly to currently selected depth unit)

17.12.4 A-Scope

Shows the real time display of the echo from the bottom.

17.12.5 Water Temperature

Allows selection between:

- a. the temperature sensor in the depth transducer
- or
- b. an external temperature sensor connected to the Optional Connection wires.

17.13 TRANSDUCER SETUP

This menu allows you to calibrate the speed through the water, water temperature and the keel/prop offset of the transducer.

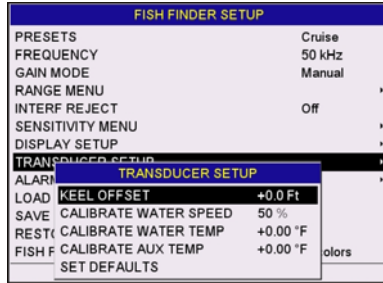


Figure 17.13 - Transducer Setup Menu

17.13.0 Keel Offset

The keel offset can be set to cause the Fish Finder to display an offset depth below the keel or the actual water depth from the surface. To setup to show the depth below the keel, enter a negative depth value or a positive depth to show offset from the transducers face to the water surface.

17.13.1 Calibrate Water Speed

Used to calibrate the Water Speed readings from the transducer. Adjustment can be made from -10% to +10%.

17.13.2 Calibrate Water Temp

Used to calibration on the Water Temperature sensor in the transducer.

17.13.3 Set Defaults

Restores the factory settings.

17.14 ALARMS

The Alarms Menu allows you to define alarm settings for Shallow Alarm, Depth Alarm and Temperature Upper/Lower/Rate.

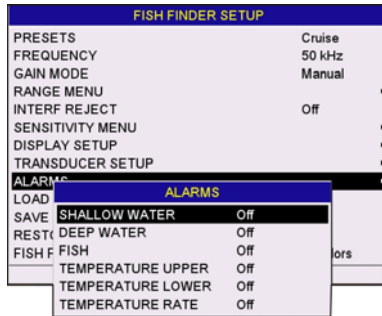


Figure 17.14 - Alarms Menu

To set an Anchor Alarm, enter in a Shallow Water and Deep Water value above and below your actual anchoring Depth. The alarm will sound when the Depth becomes shallower or deeper than the settings.

17.14.0 *Shallow Water*

Triggers an alarm when Depth becomes shallower than the set Depth.

17.14.1 *Deep Water*

Triggers an alarm when Depth becomes deeper than the set Depth.

17.14.2 *Fish*

The Fish Alarm can be set to detect and alert you depending on the size of fish. The options are: Off, Small, Medium, Big and Huge. The alarm sounds if the set size (or bigger) is detected.

17.14.3 *Temperature Upper*

Triggers an alarm when the transducer reports a Temperature above the set Temperature.

17.14.4 *Temperature Lower*

Triggers an alarm when the transducer reports a Temperature below the set Temperature.

17.14.5 *Temperature Rate*

Triggers an alarm when the transducer reports a Temperature variation rate above the set Temperature.

17.15 *SAVE SETTINGS TO USER C-CARD*

This option saves the complete set of Fish Finder settings to an optional User C-CARD. This is useful to avoid the user having to retune up Fish Finder after a RAM Clear operation or a software update.

FISH FINDER SETUP	
PRESETS	Cruise
FREQUENCY	50 kHz
GAIN MODE	Manual
RANGE MENU	▶
INTERF REJECT	Off
SENSITIVITY MENU	▶
DISPLAY SETUP	▶
TRANSDUCER SETUP	▶
ALARMS	▶
LOAD SETTINGS FROM USER C-CARD	
SAVE SETTINGS TO USER C-CARD	
RESTORE CURRENT PRESET DEFAULTS	
FISH FINDER COLOR	16colors
MENU for Main Menu	

Figure 17.15 - C-CARD - Save settings

17.16 LOAD SETTINGS FROM USER C-CARD

This option loads the complete set of Fish Finder settings from the User C-CARD (Memory Card that may be used to backup the User Points and Tracks too).

FISH FINDER SETUP	
PRESETS	Cruise
FREQUENCY	50 kHz
GAIN MODE	Manual
RANGE MENU	▶
INTERF REJECT	Off
SENSITIVITY MENU	▶
DISPLAY SETUP	▶
TRANSDUCER SETUP	▶
ALARMS	▶
LOAD SETTINGS FROM USER C-CARD	
SAVE SETTINGS TO USER C-CARD	
RESTORE CURRENT PRESET DEFAULTS	
FISH FINDER COLOR	16colors
MENU for Main Menu	

Figure 17.16 - C-CARD - Load settings

17.17 RESTORE CURRENT PRESET DEFAULTS

This option restores the default values only for the current presets and does not affect the other presets.

FISH FINDER SETUP	
PRESETS	Cruise
FREQUENCY	50 kHz
GAIN MODE	Manual
RANGE MENU	▶
INTERF REJECT	Off
SENSITIVITY MENU	▶
DISPLAY SETUP	▶
TRANSDUCER SETUP	▶
ALARMS	▶
LOAD SETTINGS FROM USER C-CARD	
SAVE SETTINGS TO USER C-CARD	
RESTORE CURRENT PRESET DEFAULTS	
FISH FINDER COLOR	16colors
MENU for Main Menu	

Figure 17.17 - C-CARD - Restore settings

18. TROUBLESHOOTING

The GPS Chart Plotter does not turn On. The voltage or the polarity may not be correct. Make sure that the correct voltage (10-35 volt dc) is present. Check also that the polarity is correct.

The GPS Chart Plotter does not get a valid fix. The external WAAS GPS antenna may not be in an open sky position or the antenna cable may not be properly connected. Make sure that no metal obstacle (solar panel about the GPS Chart Plotter) is placed around the GPS Chart Plotter (or external antenna when connected) acting as a shield for the antenna and disconnect and connect again the antenna cable to the GPS Chart Plotter. If, after 15 minutes, the GPS Chart Plotter does not get the fix, turn it Off and On again.

The GPS Chart Plotter does not turn Off. The GPS Chart Plotter may be in an unpredictable status. If, after pressing **[PWR]** (for at least 3 seconds) the GPS Chart Plotter does not turn Off, turn Off the voltage.

The GPS Chart Plotter screen becomes very dark after a long exposure to direct sunlight. The internal temperature is very high. Protect the GPS Chart Plotter from direct sunlight.

The GPS Chart Plotter does not respond to any command. The GPS Chart Plotter may be in an unpredictable status. Try to turn Off, and then turn On. If the problem persists, reset the RAM or remove power from the battery.

The location of my fix is not shown correctly on the Chart page. Please report to C-MAP USA (800/424-2627) the Latitude & Longitude of your vessels position, the position where you think your vessels should be and details of the cartography such as "Compilation scale", "Notice to mariners" and "Horizontal datum" (which can be seen by selecting the Chart page, press **[FIND]**, move the ShuttlePoint knob to **Data Source** and press **[ENT]**).

After storing the GPS Chart Plotter over the winter, it takes a long time to receive a fix. This is usually caused by the internal rechargeable memory battery from becoming low which could cause the Internal RAM memory to become corrupted. To solve this issue, perform a RAM Clear (refer to Section 19).

NOTE

After performing a RAM Clear all Marks, Routes and tracks will be erased. To backup these points refer to Section 11 for details.

19. TECHNICAL TESTS

19.0 SYSTEM TEST

If you have connected your GPS Chart Plotter according to the instructions, and chosen the proper menu selection for your device, and are still having problems with your GPS Chart Plotter, the extended auto-test should help determine the problem. Make sure the GPS Chart Plotter is turned Off. While pressing and holding any other key, turn the GPS Chart Plotter On. A new menu will appear on the display:

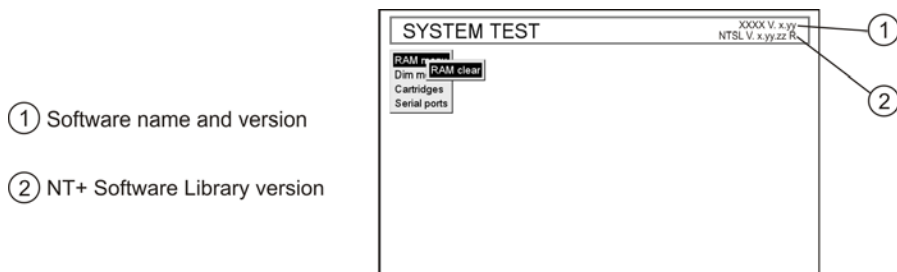


Figure 19.0 - System Test Menu

Use the ShuttlePoint knob to select the desired test. Choose the test, press **[ENT]**. To exit from any submenu press **[CLR]**. To exit from the System Test turn Off the GPS Chart Plotter.

19.0.0 RAM Menu (reset)

This test verifies the integrity of the memories and if desired during this test all the internal memory can be erased and the default settings restored.

RAM Clear

To clear internal memory. If the GPS Chart Plotter exhibits unusual operations, or appears to be malfunctioning, it may be possible to correct the problem by clearing RAM.

This operation will erase all Marks, Routes, stored Track plots and Destinations. It will also return all selections (Input Data Format, Autopilot selection, etc.) to original default values. To confirm clear RAM press **[ENT]** again (but if at this time you do not wish to clear RAM press **[CLR]**).

19.0.1 DIM Menu

To select the desired value for brightness and keypad light.

Contrast

Each time you move the ShuttlePoint knob to right, the screen will decrease brightness, move it to the left to increase brightness.

Backlight

The second option allows to set the backlight. Operates in similar mode as Contrast.

19.0.2 Cartridges

To check the C-CARD and its connector.

Internal Data Base Test

To test the Worldwide background.

C-CARD Test

To test the C-CARD. There are the possible situations:

1. if there is a C-CARD inserted in the slot and there is not a malfunction, the name of the C-CARD zone and the message "OK" are shown.
2. if there is a C-CARD inserted in the slot, but it is a defective C-CARD, the name of the C-CARD zone and the message "Faulty" are shown.
3. if there is not any C-CARD inserted in the slot, the message "not present" is shown.
4. if there is a User C-CARD inserted in the slot, the message **USER C-CARD** is shown.

C-CARD Connector

Indicates if there is a malfunction in the connector.

19.0.3 Serial Ports

If you are having problems receiving data from the position-finding instrument, this test should help determine the problem.

Change Parameters

To change the parameters of the serial interface. This menu allows to select the **Port** (Signal Source) between Port1, Port2, Port3, Port4 and Port5; the **Baud Rate** between 300, 1200, 2400, 4800, 9600, 38400, 115200; the **Data Bits** (Word Length) between 7 or 8, the **Parity** between even, odd or none, the **Stop Bits** between 1 or 2. Default settings are: Port = PORT2, Baud Rate = 4800, Data Bits = 8, Parity = none, Stop Bits = 1.

Input Data Display

To allow the GPS Chart Plotter to act as a computer terminal and display the incoming data exactly as it is received.

If the data displayed on the screen are unrecognizable, you may have selected the wrong input parameters for your particular receiver, for example, Baud Rate 9600 instead of Baud Rate 4800. Check your receiver manual to be sure that you have selected the proper parameter. If the screen is blank, you may have a broken connection, and no data is being received or you may have connected the device to the other input port.

Use **[ZOOM IN]** to stop (or continue after pause) data displaying, **[ENT]** to show data in hex or ASCII mode (normal or small) and **[CLR]** to exit.

Loop-Back Test

This is a special test done during the production phase to check the serial ports integrity. This function is only required by STANDARD HORIZON.

20. SPECIFICATIONS

20.0 CP390i/CPF390i SPECIFICATIONS

Power Consumption Max Backlight	: CP390i = 1A@12VDC : CPF390i = 1.75A@12VDC
Power supply	: 10-35 Volt DC
Interface	: Input/Output Interface NMEA-0183
Display	: TFT Color LCD (<i>active area 7"</i>) sunviewable technology
Display Resolution	: 800 x 480 pixels
Cartography	: C-MAP B BY JEPPESEN NT*/MAX C-CARD
Operating Temperature range	: 32°F/+131°F (0°C/+55°C)
Storage Temperature	: -4°F/+158°F (-20°C/+70°C)
Water Resistance	: splash-proof
Memory	: Permanent
Keyboard	: Silicon rubber, backlight
Weight (without bracket)	: 2,428 lb (1100 g)
User Points (Marks/Waypoints)	: 3000
Routes	: 50 (max 100 Waypoints each)
Track Points	: 10000 (recordable in 20 Tracks)
NMEA Output sentences	: GLL, VTG, BWC, RMC, APA, APB, HTG, BOD, XTE, RMA, RMB, RMC, GGA, HSC, DBT, DPT, MTW, VHW, WPL, RTE, GSA, GSV
NMEA Input sentences	: BWC, DSC, DSE, GGA, GLL, GSA, GSV, HDG, HDM, HDT, RMC, VHW, VTG, DPT, DBT, MTW, VWR, VWT, TLL, WPL, RTE

20.1 CPF390i FISH FINDER SPECIFICATIONS

Power Output	: 600W
Frequency	: 50 and 200kHz
Minimum Depth	: 5Ft at 50kHz, 2.5Ft at 200kHz
Maximum Depth	: 1500Ft at 50kHz, 700Ft at 200kHz
Airmar X-DUCER ID	: Must use STANDARD HORIZON transducers
Advanced Digital Signal Processing	
Speed & Temperature Sensor (if available on transducer)	
Alarms (Shallow Water, Depth, Fish, Temperature)	
Trip Log, Fish Symbols	
STC, Interference Rejection, Automatic noise reduction	
A-Scope, White Line, Zoom x2/x4	
Auto range/gain/frequency/shift/ping rate	
16/256 colors display user selectable	

20.2 CP390i/CPF390i DIMENSIONS

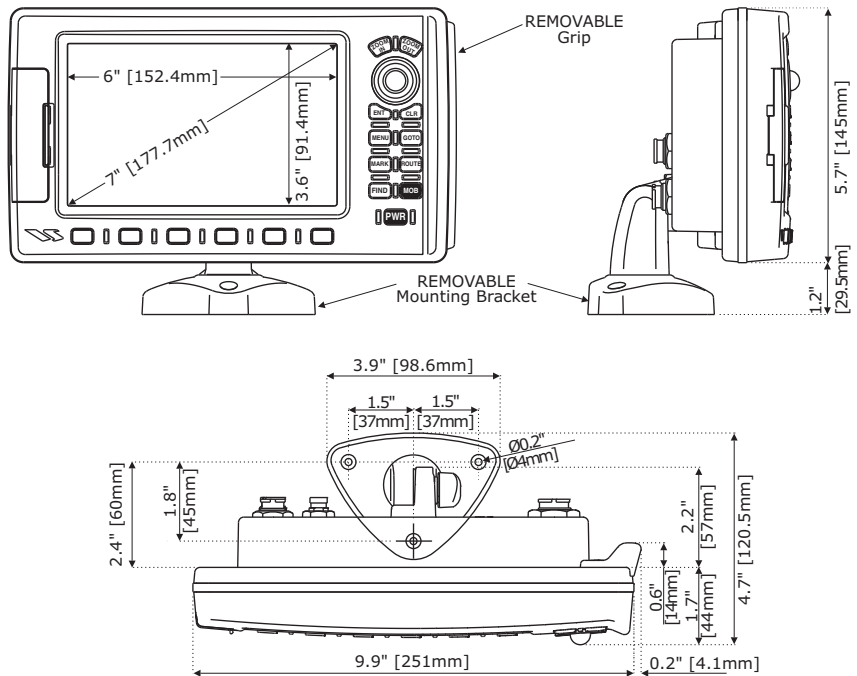


Figure 20.2 - CP390i/CPF390i Dimensions [inch/mm]

20.3 OPTIONAL FF525 FISH FINDER SPECIFICATIONS (USE WITH CP390i)

Power Output	: 600W or 1kW depending on connected transducer
Frequency	: 50 and 200kHz
Minimum Depth	: 5Ft at 50kHz, 2.5Ft at 200kHz
Maximum Depth	: 1500Ft at 50kHz, 700Ft at 200kHz
Airmar X-DUCER ID	: Must use STANDARD HORIZON transducers
Advanced Digital Signal Processing	
Speed & Temperature Sensor (if available on transducer)	
Alarms (Shallow Water, Depth, Fish, Temperature)	
Trip Log, Fish Symbols	
STC, Interference Rejection, Automatic noise reduction	
A-Scope, White Line, Zoom x2/x4	
Auto range/gain/frequency/shift/ping rate	
16/256 colors display user selectable	

20.4 OPTIONAL WAAS GPS RECEIVER SPECIFICATIONS

This optional WAAS GPS Receiver is based on a ultimate GPS engine that delivers accuracy better than three meters by decoding the GPS correction signals from the satellite-based WAAS (*Wide Area Augmentation System*). The GPS engine, interface electronics and the passive antenna are enclosed inside the water-proof plastic housing. This provides advanced state of the art GPS performance in an easy to use package.

Physical Characteristics

Color	Ivory white
Dimensions	97mm in diameter x 32mm in height (flush mounted) or 61,5mm on flag-pole mount
Weight (without cable)	0,35 lb (160 g)
Cable	white 15 meter 8x28AWG cable with 6 pins female connector

Electrical Characteristics

Input Voltage	10 Vdc to 35 Vdc unregulated	
Input Current	0.8 Wmax	
GPS Receiver Sensitivity	Tracking, Navigation	:-160 dBm
	Acquisition, Reacquisition	:-160 dBm
	Cold Starts	:-145 dBm

GPS Performance

GNSS Systems	GPS	: L1 C/A
	GALILEO	: L1
	SBAS	: WAAS (North America), EGNOS (Europe), MSAS (Asia), GAGAN (Indian)
Geodetic Datum	WGS84	
Channels	32 + 18	

Acquisition Time

Reacquisition	< 1 second
Hot Start	1 second
Warm Start	29 seconds
Cold Start	29 seconds

Accuracy

GPS	< 10Ft
with SBAS	< 2.0m

NMEA Output

Messages	GGA, RMC, GSA, GSV, TXT
----------	-------------------------

21. APPENDIX: TERMS

ALT (Altitude) – Shows the Altitude of the GPS antenna on the mean sea level. It is received from GPS, sentence GGA.

APP Wind DIR (Apparent Wind Direction) – Shows the Apparent Wind Direction when a external wind instrument with NMEA is connected.

APP Wind SPD (Apparent Wind Speed) – Shows the Apparent Wind Speed when a external wind instrument with NMEA is connected.

BRG (Bearing) – The direction from your current position to a Destination point.

COG (Course Over Ground) – The course your vessel is heading.

DATE – Shows the current date received by the GPS.

DEPTH – Shows the water depth when the optional FF525 50/200kHz Black Box Fish Finder or Digital Depth Sounder is connected.

DEPTH AREAS – Depth Areas are the sea areas included in the user selectable range of minimum and maximum depth limits. The sea area that is beyond the selected range is filled by an uniform white color, the sea area that is inside the selected range is filled by ordinary multicolor shading. The Spot Soundings and Depth Contours are displayed on the range only.

DRAUGHT – Depth of water the vessel draws. The definition of draught (or draft) of a ship's hull is the vertical distance between the waterline and the bottom of the hull (keel). Draught determines the minimum depth of water a ship or boat can safely navigate. On the Celestial page the "draught" window shows the height of the tidal water during a 24hr period of time. This height is dependant on the time of day selected using the ShuttlePoint knob.

DSC (Digital Selective Calling) – Digital Selective Calling is a semi-automated method of establishing a VHF Radio call. DSC had also been designated as part of the Global Maritime Distress and Safety System (GMDSS). It is planned that DSC will eventually replace aural watches on distress frequencies and will be used to announce routine and urgent maritime safety information broadcasts.

DST (Distance) – The distance from your current position to a Destination point.

ETA – Estimated Time of Arrival

GPS Constellation – The Global Positioning System (GPS) is a space-based radio-navigation system consisting of a constellation of satellites and a network of ground stations used for monitoring and control. A minimum of 24 GPS satellites orbit the Earth at an altitude of approximately 11,000 miles providing users with accurate information on position, velocity and time anywhere in the world and in all weather conditions.

GPS2D – The GPS is receiving at least 3 valid Satellites.

GPS3D – The GPS is receiving at least 4 valid Satellites.

HDG (Heading) – Shows heading from a external Flux Gate Compass when connected.

HDOP/VDOP – Horizontal/Vertical Dilution of Precision. It is a parameter indicating the precision of the positioning system (GPS). The smaller the HDOP/VDOP value, the more accurately the position fix is provided.

HEIGHT – The current Tide height referred to the vertical cursor.

HEIGHT WATER – The maximum level of the Tide height in 24 hours.

LOW WATER – The minimum level of the Tide height in 24 hours.

PINGO – It is a mound of earth-covered ice found in the Arctic and subarctic that can reach up to 70Mt (230Ft) in height and up to 600Mt (2.000 Ft) in diameter.

Position Request – Marine DSC VHF Function of transmitting a GPS position to another Marine DSC VHF. When GPS Chart Plotter is connected to STANDARD HORIZON GPS the position of another vessel is shown on the Chart page.

SPEED – Shows the Speed Thru the Water when a Digital Speed Log is connected.

SOG (Speed Over Ground) – The speed you vessel is travelling at.

STEER – Heading to steer to destination Waypoint.

TIME – Shows the current time received by the GPS.

TRIP LOG – Shows the distance the vessel has travelled since the trip log was reset.

TRU Wind DIR (True Wind Direction) – Shows the True Wind Direction when an external wind instrument with NMEA is connected.

TRU Wind SPD (True Wind Speed) – Shows the True Wind Speed when an external wind instrument with NMEA is connected.

TTG (Time To Go) – Shows Time To Go to reach a Destination point.

UNITS

Nm Nautical Mile (1Nm = 1.15Sm or 1.85Km)

Sm Statue Mile (1Sm = 0.87Nm or 1.61Km)

Km Kilometer (1Km = 0.062Sm or 0.54Nm)

Ft Feet (1Ft = 0.167FA or 0.305 Mt)

FA Fathom (1FA = 6Ft or 1.83 Mt)

Mt Meter (1Mt = 3.28Ft or 0.55FA)

Kts Knot (1Kts = 1.15MPH or 1.85KPH)

MPH Miles Per Hour (1MPH = 0.87Kts or 1.61KPH)

KPH Kilometer Per Hour (1KPH = 0.54Kts or 0.62MPH)

VMG – It is the destination closing Velocity. The VMG is calculated using the current speed of the vessel (SOG) and the difference between the current vessel course and the bearing to the Destination.

WAAS 2D/3D – The GPS is receiving a 2D or 3D position and the correction from the WAAS satellite. WAAS consists of approximately 25 ground reference stations positioned across the United States that monitor GPS satellite data. Two master stations, located on either coast, collect data from the reference stations and create a GPS correction message. This correction accounts for GPS satellite orbit and clock drift plus signal delays caused by the atmosphere and ionosphere. The corrected differential message is then broadcast through one of two geostationary satellites, or satellites with a fixed position over the equator. The information is compatible with the basic GPS signal structure, which means any WAAS enabled GPS receiver can read the signal.

WATER TEMP – Shows the sea water temperature when the FF525 50/200kHz Black Box Fish Finder or a Digital Speed Log/Temp instrument with NMEA is connected.

XTE (Cross Track Error) – The distance your vessel is off course (left or right) to a Destination point.

ANALYTICAL INDEX

12VDC Power	20	Attention Areas	86, 87
12VDC Power Cable	18	Audible Alarm	101, 111, 112
16 Colors	117	Auto Full page	119
16/256 colors display	136, 137	AUTO INFO	38, 85
200kHz	120	Auto Info	102
200kHz Full	119	Auto Info settings	85
256 Colors	117	Auto Mode	125
2D	84, 140	Auto Position	102
3D	84, 91, 140	Auto Switch	25
50 & 200 kHz page	119	auto-test	134
50 & 200kHz page	129	AUTOMATIC CHECK	74
50kHz	120	Automatic Identification System	103
50kHz Full	119	Automatic Route Check	74
A		AUTOMATIC TIME	32
A-Scope	117, 129, 136, 137	Autopilot	17, 19, 21
About page	39, 110, 111	AWD	84
About... ..	39	AWS	84
ACCESSORIES	13	B	
Accessories	12	Backlight	28, 32, 134
Accessory cable	12	Backlight and Contrast adjustment	32
ACCURACY	74	backlight intensity	31
ACQUIRING	92	backup	61, 64, 78, 132, 133
Activation Range	103, 104	Bahamas	11, 49, 81
Active Target	103	Bar	116, 117
ACTIVE TRACK	76	Bathymetric	51
ACVC10	24	Bathymetric Lines	87
Adjusting Time	33	BATTERY CONNECTIONS	21
Advanced Setup Menu	98	Baud Rate	135
Airmar	136, 137	Beacons	87
AIS	11, 98, 103, 104, 105	Bearing	30, 38, 65, 93, 100, 139
AIS 38400	20, 21, 98	Bearing to Destination	84
AIS LIST	105	beep	27, 37
AIS List page	11, 103, 105	Black Box	11, 17, 22, 95, 98, 139, 140
AIS Menu	104	BOD	18, 20, 99, 136
AIS Receiver	17, 19, 21, 103	Bottom Echo Profile	118
AIS SETUP	104	Bottom Lock	12, 125
AIS Setup	20, 21	bracket	14
AIS Symbols	104	Bracket installation	15
AIS Target	103, 104, 105, 106	BRACKET MOUNTING	14
Alarm	103, 116	BRG	30, 65, 84, 93, 139
alarm	73, 109, 131	brightness	134
Alarm Bar	116, 117	BUILT-IN CHARTS	39, 49
Alarm Status List	113	Built-In Charts	11, 29, 39, 49, 50, 81
Alarms	12, 101, 130, 136, 137	Buoys	85, 87
Alarms Menu	101, 130, 131	BWC	93, 98, 99, 136
Alaska	11, 49, 81	C	
ALT	84, 139	C-CARD	27, 28,
Alternate Solution	100	29, 40, 50, 57, 58, 60, 78, 81, 88, 101, 132, 135	
Altitude	37, 84, 139	C-CARD Test	135
Anchor Alarm	101, 131	C-COM	98, 107
antenna	11, 14, 16, 133, 139	C-MAP	50
APA	18, 20, 99, 136	C-Weather	98, 107
APB	18, 20, 99, 136	C-Weather Menu	107
Apparent Wind Direction	84, 139	Cable	138
Apparent Wind Speed	84, 139	Calibrate Water Speed	130
arches	129	Calibrate Water Temp	130
Arrival Alarm	101	Calibration	100
ASF1/2	100	camera icon	59

Canada	11, 12, 49, 81
Caribbean	11, 49, 81
CARTOGRAPHY	49
Cartography	136
Cartridges	135
CAUTION	5
Caution pages	29
Celestial page	26, 33, 91, 139
Central America	11, 49, 81
Chain	34, 100
Change Parameters	135
change the LCD	31
change the scale	27
change the User C-CARD	79
Changing the Ship Icons	31
Chart	121
Chart Boundaries	86, 88
Chart Datum	99
Chart Language	58
chart level	52
Chart Lock	86, 89
Chart Orientation Resolution	100
Chart page	27, 29, 81, 85, 120
Chart Scale	84
chart scale	27, 52
Chart Selection Menu	81
Chart Settings	88
Chart Update Card	49
Chart/Compass tape page	26
Chart/Fish Finder page	26
check the C-CARD	135
Chinese	35
Classic	34, 35, 37
Cleaning	5
Clear Info	51
clear internal memory	134
clear RAM	134
Clear View	51
Closest Point of Approach	103
CLR	27
COG	75, 81, 84, 91, 93, 102, 103, 104, 139
COG TIME LINE	39
COLOR	73
Color	117, 138
Color AIS Targets	106
Color Bar	117
Color Settings	129
colors	123
colors display	11, 136, 137
Combo page	122
Compass Menu	100
COMPASS ROSE	39
Compass Rose	11, 90
Compass Table	100
Compass Tape	90
CONNECTIONS	17
connections	11
connector	50, 135
Contrast	28, 31, 32, 134
conventions	14, 27
COORDINATE SYSTEM	34
Coordinate System	34, 99
Coordinate System Menu	34
Coordinates	28, 47
Course	102
Course Over Ground	75, 84, 93, 139
Course Up	32, 37
COURSE UP/NORTH UP	32, 37
Course Up/North Up Menu	32
Coverage areas	49
CP390i	11, 14, 98, 136, 137
CP390i Connection Table	18
CP390i Connections	18
CPA	103, 104
CPA Alarm	103, 104
CPA Limit	103, 104
CPF390i	11, 14, 99, 115, 136, 137
CPF390i Connection Table	20
CPF390i Connections	20
CREATING A NEW MARK	64
CREATING A ROUTE	68, 70
CREATING MARKS	61
Cross Track Error	84, 140
Cruising	123
Cuba	11, 49, 81
Current Date	84
Current Time	84
Currents Prediction	57
Cursor Control	102
Cursor Mode	27, 30, 65, 84
CURSOR POSITION	39
CURSOR SPEED	31, 38
Cursor Speed Menu	30
CURSOR WINDOW	38
Customers	11
Customizing the Data Windows	84
D	
dangerous object	73, 74, 101
Dangerous Target	103
Danish	35
Data Bits	135
data cards	58
Data Safety Indicator	55, 89
Data Source	133
Data window layout	83
Data Windows	84
DATE	84, 139
Date	102
date	108
DATE FORMAT	37
Datum	99, 138
DAYLIGHT SAVING	33
Daylight Savings Time	32, 37
DB9	23
DBT	18, 20, 93, 99, 136
DC Power Connection	18, 20
dealer	49
Deep Alarm Bar	117
DEEP WATER	116
Deep Water	131
default pages	36
default settings	134
default values	86, 132, 134
Defaults	130
DEL ALL	63
DELETE	63, 76, 114
delete a Route	72
Delete PTX	112
Deleting a file	79
Deleting a Mark	62

DELETING A MOB	67	Dual Frequency	12
Deleting a Track	76	Dust cover	12
Deleting a Waypoint	62	Dutch	35
DEMO MODE	26	DVD	24
Demo Mode	26, 102	Dynamic Currents	51
DEPTH	139	Dynamic Nav-Aids	51, 55
Depth	37, 84, 87, 95, 101, 125, 126, 129, 131, 136, 137	E	
Depth Alarm	101	Echo	129
DEPTH AREAS	139	Echosounder	116
Depth Areas	87	EDIT	63, 73
Depth Contours	49, 139	Edit Route	69, 73
DEPTH LIMIT	74	EDITING A MARK	61
Depth Range Max	86, 87	English	35, 36
Depth Range Min	86, 87	Enhanced Port Info	51, 60
Depth Settings	87	ENT	27
Depth Sounder	21, 23, 93, 94, 126, 139	Estimated Time of Arrival	84, 139
Depth Sounding	87	ETA	84, 139
DEPTH TREND	95	External bracket	12
Depths	51	external GPS	14
Detailed Port Plan	51	external WAAS GPS	16
Diagrams	51, 58	Extra Large Coverage	51
Differential Correction Source	93	F	
Diffusers	73, 74, 86, 89	FA	140
Digital Depth	116	Fathom	140
Digital Instruments	17	FCC	4
Digital Selective Calling	22, 96, 139	Feet	140
DIM Menu	134	FF520	22
Dimensions	137, 138	FF525 11, 17, 18, 19, 22, 95, 98, 137, 139, 140	
Display	104, 136	file	79
DISPLAY COLOR	35, 37	FIND	11, 28, 40, 63
Display Color Menu	34	Find	51
Display Mode	86	Find a Port	41
Display Mode settings	86	Find GPS Coordinates	47
Display Resolution	136	Find Information	48
Display Setup Menu	128	Find Lakes By Name	45
DISTANCE	77	Find Lakes Information	44
Distance	30, 37, 38, 65, 139	Find Obstructions	43
Distance to Destination	84	Find Points Of Interest	46
Distance Units	75	Find Port Services	41
Distress Call	22, 96	FIND SERVICES	40
Download	107	Find User Points	47
Download Area	108	Find Wrecks	43
download weather	107	Finnish	35
DPT	18, 20, 93, 99, 136	Fish	118, 131, 136, 137
DRAUGHT	139	Fish Alarm	131
draught	41, 91, 139	FISH FINDER	136, 137
Dredged Areas	73, 74	Fish Finder	11, 17, 18, 22, 95, 98, 115, 117, 118, 120, 121, 122, 123, 125, 126, 127, 128, 129, 131, 132, 139, 140
DSC	21, 22, 93, 102, 103, 136, 139	Fish Finder Color Menu	123
DSC Log	97	Fish Finder colors	123
DSC POLLING	102	Fish Finder display	117, 129
DSC VHF	140	Fish Finder full page	26
DSE	22, 93, 136	Fish Finder page	116
DSI	55, 89	Fish Finder page selection	119, 122
DST	30, 65, 84, 139	Fish Finder Setup Menu	122, 123
DST520	116	Fish Finder window	116
DST521	95, 116	Fish icon	129
DST523	116	FISH SPOT	116
DST525	116	Fish Symbols	129, 136, 137
DST526	95, 116	Fish/Chart page	120
DST527	116	Fish/Radar/Chart page	121
DST528A	116	Fishing	123
DTP	84	Fishing Facility	73
Dual chart	11	fix	133
Dual Chart page	82		

Fix Status	84
Flexi-Zoom	51, 52
Flush installation	15
Flush mount template	12
flush mount template	15, 17
flush mounted	16
FLUSH MOUNTING	15
Flush mounting	16
flush mounting	11, 14
Flush mounting screws	12
Flux Gate Compass	139
focus	82, 120, 121, 122
Focus popup window	120
Forecast	108
Formatting	78
French	35
Frequency	12, 117, 136, 137
Frequency Menu	124
Ft	140
Full Info On Lakes	45
Full Screen View	25
fuse	12
G	
Gain	125, 126
Gain Mode Menu	124
GENERAL SETUP	37
German	35
GETTING STARTED	28
GGA	18, 20, 93, 99, 136, 138, 139
GLL	18, 20, 93, 98, 99, 136
GMDSS	96, 139
GNSS	138
GOTO	28, 64, 66, 71, 81, 114
GOTO A ROUTE	71
GOTO CURSOR	64
GOTO MARK	66
GOTO Menu	65
Goto PTX	112, 113
GOTO ROUTE	66, 72
GPS .. 11, 14, 16, 22, 29, 84, 92, 133, 138, 139	
GPS Constellation	139
GPS Coordinates	28
GPS Receiver	14, 138
GPS SETUP	14
GPS Setup menu	14
GPS STATUS	14
GPS Status	84
GPS Status page	14, 16, 26, 29, 92
GPS2D	92, 139
GPS3D	92, 139
Great Lakes	11, 49, 81
Greek	35
Grounding Alarm	101
Grounding Alarm Range	101
Grounding Alarm Report	101
Grounding Alarm Report page	101
GSA	93, 99, 136, 138
GSV	93, 99, 136, 138
Guardian Alarm	51
GX2100	103
GX2150	103
H	
Hawaii	11, 49, 81
HDG	84, 93, 99, 136, 139
HDM	93, 136

HDOP	84, 92, 139
HDT	93, 136
Heading	84, 139
HEIGHT	139
height	41, 91
HEIGHT WATER	139
HIGH WATER TEMP	116
Highway page	26, 65, 91
highway scale	91
Higway	121
Home Mode	27, 30, 65, 84, 100
Horizontal Dilution of Precision	84, 92
HSC	99, 136
HTG	136
I	
ICON	63
Icon	129
IN/OUT CONNECTIONS	20, 21, 23
incoming data	135
Info Tree	47
Information	28, 47, 85
Input	98
Input Current	138
Input Data Display	135
Input Voltage	138
Inputs	11
Inserting C-CARD	50
Inserting Waypoint	71
INSTALLATION	14
Interface	136
Interference Rejection	136, 137
Interference Rejection Menu	126
internal Fish Finder	115
INTERNAL GPS	14
internal GPS	11, 14, 93
Intertidal Areas	73
IP56	11
ISO Certification	50
Italian	35
J	
Japanese	35
K	
Keel Offset	130
Keyboard	136
KEYPAD BEEP	37
keypad light	134
keys	27, 28
Kilometer	140
Kilometer Per Hour	140
Km	140
Knot	140
KPH	140
Kts	140
L	
Lakes By Name	28, 45
Lakes info	44
Lakes Information	28, 43
Land Areas	73
Land Elevation	51
Land Elevation Values	86, 88
Land Elevations	86, 88
Land Settings	87
LANGUAGE	35, 38
Language	58
Language Selection Menu	35

languages	35	MTW	18, 20, 93, 99, 136
Lat/Lon Grid	86, 88	Multilanguage Support	51
Latitude/Longitude	34, 47	N	
Layer selection	108	Name	103
LCD	31	Name Tags	86, 87
legend	14, 27	name the Route	69
Lights	85, 87	names	53
LINE COLOR	76	nautical charts	4
Load settings	132	Nautical Mile	140
Loading a file	79	Nav Aids & Light Sectors	86, 87
Local Offset	42	NAV AIDS PRESENTATION	37
local time	32	Nav-Aids	37, 49, 55
LOCATE	63	Navigate Menu	99
Loop-Back Test	135	Navigating a Route	102
Loran TD	34, 100	Navigation page	26, 90
Lost Target	103	Navigation Speed	93
LOW WATER	140	nearest Obstructions	43
LOW WATER TEMP	116	nearest Ports	41
M		nearest Tide Stations	41
Magnetic Variation	100	nearest Wrecks	42
Main Menu	27, 80, 118	NEW MARK	63
MAN OVER BOARD	67	New Mark	64
Manual Mode	125	Night	34, 35, 37
MAP FUNCTIONS	52	night vision	34
Marine Settings	87	Nm	140
MARK	11, 28	NMEA	21, 23, 63, 73, 110, 136, 139, 140
Mark	11, 23, 28, 30, 46, 61, 62, 63, 64, 66, 68, 70, 78, 136	NMEA ACC 2 Cable	18
Mark creation	61	NMEA CONNECTIONS	21
Mark editing	62	NMEA DATA	24
Mark Icon	62	NMEA Data page	23, 24, 94, 95
MARKS/WAYPOINTS LIST	63	NMEA devices	17, 18, 19, 20, 98
Marks/Waypoints List	63, 64, 66	NMEA DISPLAY	24
MARKS/WPTS	63, 64	NMEA Display Menu	94, 95
MAX	49, 78	NMEA Display page	26, 93
MAX C-CARD	81	NMEA Input	136
MAX Functions Menu	52	NMEA Output	136, 138
MAX Lake CARD	43	NMEA sentences	93, 94, 98
MAX SPD	84	NMEA Trend pages	95, 96
Max Speed	84	NMEA-0183 11, 18, 19, 20, 93, 96, 98, 103, 136	
MEASURE DISTANCE	38	NO DATA	116
Memory	136	NOAA	34, 35, 37, 51
memory	133, 134	Normal	34, 35, 37
Memory Card	132	North	32
MENU	27	North Up	32, 37
Meter	140	Norwegian	35
Miles Per Hour	140	NTSC	24
Mixing Levels	51, 86, 89	O	
MMSI	103	Object Info	51
MMSI number	103, 104	objects information	47
MOB	28, 67	Obstruction icons Table	43
MOBILARM	109, 110, 111, 112, 113	Obstructions	28, 43, 73, 74, 86, 89
Mobilarm	98	Off-line redraw	51
MOBilarm PTX List	113	Official data source	51
MODE	63	Olympic Route	69, 70
Mooring/Warping Facility	73	Open Array	12
MOUNTING	14, 16	Opout	98
mounting area	16	Outdoor Recreational Area	44
mounting bracket	11, 14	Outputs	11
Mounting knob	12	Over-Zoom	53
Mounting Screws	16	Owner's Manual	12
Moving a Mark	62	P	
Moving a Waypoint	62	PACKING LIST	12
MPH	140	PAGES	80
Mt	140	Pair	34, 100
		PAL	24

pan	81	Radio	94
Panning	108	Radio Call Sign	103, 104
Parity	135	Radome antenna	12
PART CODE	12	RAM	133, 134
PC	23, 73	RAM Clear	131, 133, 134
PC COM	23	RAM Menu	134
PC-Planner	107	Range Bar	117
Personal Computer	63	Range Menu	125
Personal Transponder	111	Range Mode	125
Perspective View	51, 54	Real Time View	108
Photos	51	RECEIVE	63, 73
picture-in-picture	11, 24	Refreshing	79
Pictures	58	replacements parts	12
Pin	107	RESET LANGUAGE	36
PINGO	140	reset the log	77
Pingos	73, 74	reset the RAM	133
PIP	25	Resolution	136
Place Names	86, 87	Restart GPS	93
PLACING A MOB	67	RESTORE DEFAULTS	25
Points Of Interest	28, 46, 86, 88	Restore settings	132
Port	41, 135	REVERSE	73
Port Areas	60	RMA	99, 136
Port Icons	85	RMB	18, 99, 136
Port Info	51, 60	RMC	18, 20, 93, 99, 136, 138
Port Marinas	60	Roads	51, 86, 88
Port Services	28, 40, 60	Rocks	73, 86, 89
Port Services Table	40	ROUTE	11, 28
Port1	18, 20, 23, 98, 99, 109, 110, 135	Route	11, 23, 28, 30, 64, 66, 68, 69, 70, 71, 72, 74, 78, 136
Port2	18, 19, 20, 98, 99, 109, 135	Route Check	65, 73, 74
PORT2 INPUT	21	Route Check parameters	74
Port3	18, 20, 98, 99, 109, 135	ROUTE CHECK REPORT	74
Port4	18, 19, 98, 135	Route Checking	11
PORT4 INPUT	20	ROUTE MENU	73
Port5	18, 19, 98, 135	Route Report	69, 73
Ports	28	ROUTE WIDTH	74
Ports & Services	86, 87	RS232	17, 18, 19, 20, 98
Portuguese	35	RTE	23, 63, 73, 93, 136
Position Request	97, 102, 140	RTV	17
Power	12	Russian	35
Power Cable	18	S	
Power Consumption	136	safe navigation	73, 91
Power On	28	Safety Route Check	51
Power Output	136, 137	Safety Status Bar	51, 55
Power supply	136	satellite	11, 14, 29, 56, 92, 100, 138, 140
Preset values table	127	Satellite Imagery	56
presets	123	Save settings	132
Presets Menu	123	saving a Track	76
Presets table	124	SCALE	84
Production Installation	73	scale	117
PTX	110, 111, 112, 114	Screen display pages	36
PTX icon	111, 112	screen display pages	80
PTX information	112	screw	15
PTX warning window	112	Scrolling Speed	129
Puerto Rico	11, 49, 81	Seabed Type	86, 87
PWR	28	Search	51
Q		second Waypoint	68, 69
Quick Info	51	SELECT	73
Quick Info on AIS	105	select the language	35
Quick Info On Lakes	44	select the pages	36
Quick Reference Guide	12	SELECTING LANGUAGE	35
quick zoom	27	selection speed	30
R		SEND	63, 73
Radar	11, 12, 16, 21, 22, 36, 98, 121	SEND/REC RTE & MARKS	23
Radar Combo page	121	Sensitivity Menu	126
Radar page	26, 121		

Sensitivity Time Control	12, 127
sentences	136
Serial DB9	23
serial interface	135
Serial Ports	135
Set Defaults	130
Setup Menu	27, 93
Shallow Alarm	116
Shallow Alarm Bar	116
SHALLOW WATER	116
Shallow Water	73, 74, 127, 131, 136, 137
Shift	125, 126
SHIP ICON	38
Ship Icons	11, 31
Shoreline Constructions	73
SHOW	114
ShuttlePoint knob	27
SI-TEX	12, 36, 98
Signals	87
SIM Pin	107
SIMULATION	26
Simulation Menu	26, 101
Simulation Mode	102, 116
Single Chart page	83
Sleeping Target	103
slot	50, 135
Sm	140
Smart GPS Cable	17
Soft Keys	28, 36, 81, 122
Software	39
software update	131
SOG	11, 81, 84, 102, 104, 140
SOG TREND	95
SORT	63
Spanish	35
SPD	84
SPECIFICATIONS	136, 137
SPEED	140
Speed	12, 37, 75, 84, 95, 102, 136, 137
Speed Filter	11, 93
Speed Log	21, 93
Speed Over Ground	84, 140
splash-proof	136
Spot Soundings	49, 51, 139
start navigating	28, 64, 66, 67
Start-Up page	26, 28, 29
starting a new Track	76
starting Waypoint	68, 69
Static Navigation	100
Statue Mile	140
Status Bar	55
STC	12, 127, 128, 136, 137
STC Length	127
STC Preset values table	127
STC Strength	127
STEER	140
Steering	84
STEP UNIT	76
Stop Bits	135
Stop Goto PTX	113
stop navigation	28, 65, 67
STR	84
Structures	118
Sunlight	34, 35, 38
sunlight	133
sunlight-readable	11
Surface Clutter	118, 127, 128
Surface Noise Filter	12, 128
Surface Noise Filter Depth table	128
Swedish	35
SWITCHING TIMEOUT	25
SYSTEM TEST	134
System Test Menu	134
T	
Target	103
Targets AIS	11
TCPA	103, 104
TCPA Alarm	103, 104
TCPA Limit	103, 104
TD	34, 99, 100
Tee Cable	116
Temp	84
TEMP TREND	95
Temperature 12, 37, 95, 116, 129, 131, 136, 137	
Temperature Lower	131
Temperature Rate	131
Temperature Upper	131
template	15, 16, 17
TERMS	139
terrestrial features	87
TEST	134
test the C-CARD	135
Thermoclines	118
THICKNESS	73
Tidal stream arrows	57
Tide	41, 139, 140
Tide Graph	41, 91
Tide Graph page	42
Tide information	91
Tide Stations	28, 41, 51, 85
Tides & Currents	86, 87
Tides Preview	51
TIME	77, 84, 140
Time	75, 102
time	108
Time Difference	99
Time Format	37
TIME SETUP	33, 37
Time Setup Menu	33, 42
Time to Closest Point of Approach	103
Time To Go	84, 140
Time Units	75
TIME ZONE	33
Time Zone offset	33, 37
TLL	93, 136
TLOG	77, 84
Towers	85
Track	76, 81
Track Menu	76
Track Points	11, 75, 136
TRACKING	76, 84
Tracking	75, 76, 84
Tracks	75, 78, 136
Tracks & Routes	86, 87
transducer . 12, 95, 115, 116, 129, 130, 136, 137	
Transducer Setup Menu	130
Transferring files	78
Transmit Frequency	117
transmit User Points	63
TRIP LOG	77, 140

Trip Log	84, 136, 137
Trip Log Reset	77
TROUBLESHOOTING	133
True Wind Direction	84, 140
True Wind Speed	84, 140
True-Type Font	51
TTG	84, 140
TWD	84
TWS	84
TXT	138
Type of Data	108
U	
Under-Zoom	53
Underwater Ob. Limit	86
Underwater Object Limit	89
Underwater Objects Settings	89
UNICODE	35
UNITS	140
UNITS OF MEASURE	37
Universal Time Coordinates	32
update the charts	49
Updating Built-In Charts	49
USA	11, 12, 21, 22, 36, 49, 50, 78, 81, 133
User C-CARD	61, 64, 78, 79, 107, 108, 131, 132, 135
User C-CARD Menu	78
User Point	61
USER POINTS	64, 69, 70, 72, 75, 76, 78
User Points	23, 28, 46, 136
UTC	32
UTM	34, 99
V	
VAD	88
Value Added Data	86, 88
Variable Depth Marker	117
Variable Range Marker	119, 121
Variation	100
VCR	24
VCR/DVD Input	25
VDM	103, 117
VDOP	84, 92, 139
Velocity Made Good	84
Vertical Dilution of Precision	84, 92, 139
Vessel Name	104
VHF	17, 19, 21, 96, 103, 139
VHF Radio	21, 22, 94
VHW	18, 20, 93, 99, 136
Video Camera	17, 19, 21, 24
Video Camera Input	24
Video Connector	24
VIDEO INPUT	24, 25
Video Input	11, 24, 25
VISIBLE	76
VMD	20, 21
VMG	84, 140
voltage	133

VRM	119
VTG	93, 98, 99, 136
VWR	93, 136
VWT	93, 136
W	
WAAS	11, 16, 84, 133, 138, 140
WAAS 2D/3D	92, 140
WAAS/EGNOS	92
WARNING	4
warning	101
Warning Icon	55
Warning Message	116
warning pages	29
Warning window	65
Warranty	11
water depth	74
Water Resistance	136
water resistant	11
Water Speed	130
WATER TEMP	140
WATER TEMP RATE	116
Water Temperature	75, 84, 116, 129
Waterproof	11
Waypoint	28, 46, 61, 62, 63, 66, 68, 70, 71, 72, 73, 74, 136, 140
WCV	98, 99, 136
Weather	107
Weather data package	107
Weather Forecast	108
weather server	107
Weight	136, 138
WGS84	99, 138
White Line	12, 118, 127, 129, 136, 137
Wind Instrument	21
WIND SPEED TREND	95
Window Selections	83
WINDOWS SETUP	38
World Background	51
Worldwide	135
Worldwide background	27
worldwide background	51
WPL	23, 63, 93, 136
Wreck icons Table	42
Wrecks	28, 42, 73, 74, 85, 86, 89
X	
XTE	18, 20, 84, 99, 101, 136, 140
XTE Alarm	101
Z	
Zoom	12, 51, 52, 136, 137
zoom	11, 27, 81, 89
zoom factor	53
Zoom Full page	120
ZOOM IN	27, 52, 108
ZOOM OUT	27, 52, 108
Zoom Type	52

PLEASE NOTE

The following "Limited Warranty" is for customers that have purchased products in the United States. For Limited Warranty details outside the United States, contact the dealer in your country.

STANDARD HORIZON LIMITED WARRANTY

STANDARD HORIZON (the Marine Division of YAESU USA) warrants, to the original purchaser only, each new Marine Product ("Product") manufactured and/or supplied by STANDARD HORIZON against defects in materials and workmanship under normal use and service for a period of 3 years from the date of purchase.

In the event of a defect, malfunction or failure of the Product during the warranty period, STANDARD HORIZON's liability for any breach of contract or any breach of express or implied warranties in connection with the sale of Products shall be limited solely to repair or replacement, at its option, of the Product or part(s) therein which, upon examination by STANDARD HORIZON, appear to be defective or not up to factory specifications. STANDARD HORIZON may, at its option, repair or replace parts or subassemblies with new or reconditioned parts and subassemblies.

To receive warranty service, the purchaser must deliver the Product, transportation and Insurance prepaid, to STANDARD HORIZON (Marine Division of YAESU USA) - Attention Factory Service - 6125 Phyllis Drive- Cypress, CA 90630, include proof of purchase indicating model, serial number and date of purchase.

STANDARD HORIZON will not warrant installation, maintenance or service of the Products. In all instances, STANDARD HORIZON's liability for damages shall not exceed the purchase price of the defective Product. This warranty only extends to Products sold within the 50 States of the United States of America and the District of Columbia.

STANDARD HORIZON will pay all labor and replacement parts charges incurred in providing the warranty repair service except where purchaser abuse or other qualifying exceptions exist. The purchaser must pay any transportation expenses incurred in returning the Product to STANDARD HORIZON for service.

This limited warranty does not extend to any Product which has been subjected to misuse, neglect, accident, incorrect wiring by anyone other than STANDARD HORIZON, improper installation, or subjected to use in violation of instructions furnished by STANDARD HORIZON, nor does this warranty extend to Products on which the serial number has been removed, defaced, or changed. STANDARD HORIZON cannot be responsible in any way for ancillary equipment not furnished by STANDARD HORIZON which is attached to or used in connection with Products, or for the operation of the Product with any ancillary equipment, and all such equipment is expressly excluded from this warranty. STANDARD HORIZON disclaims liability for range, coverage, or operation of the Product and ancillary equipment as a whole under this warranty.

STANDARD HORIZON reserves the right to make changes or improvements in Products, during subsequent production, without incurring the obligation to install such changes or improvements on previously manufactured Products. The implied warranties which the law imposes on the sale of this Product are expressly LIMITED, in duration, to the time period specified above. STANDARD HORIZON shall not be liable under any circumstances for consequential damages resulting from the use and operation of this Product, or from the breach of this LIMITED WARRANTY, any implied warranties, or any contract with STANDARD HORIZON. IN CONNECTION WITH THE SALE OF ITS PRODUCTS, STANDARD HORIZON MAKES NO WARRANTIES, EXPRESS OR IMPLIED AS TO THE MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE, EXCEPT AS EXPRESSLY SET FORTH HEREIN.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how an implied warranty lasts, so the above limitation or exclusions may not apply. This warranty gives specific legal right, and there may be other right which may vary from state to state.

STANDARD HORIZON

Nothing takes to water like Standard Horizon

YAESU MUSEN CO., LTD.

Tennozu Parkside Building
2-5-8 Higashi-Shinagawa, Shinagawa-ku, Tokyo 140-0002 Japan

YAESU USA

6125 Phyllis Drive, Cypress, CA 90630, U.S.A.

YAESU UK LTD.

Unit 12, Sun Valley Business Park, Winnall Close
Winchester, Hampshire, SO23 0LB, U.K.

YAESU HK LTD.

Unit 1306-1308, 13F., Millennium City 2, 378 Kwun Tong Road,
Kwun Tong, Kowloon, Hong Kong

Copyright 2012
Yaesu Musen Co., LTD.
All right reserved.
No portion of this manual
may be reproduced
without the permission of
Yaesu Musen Co., LTD.

Printed in Italy
EM051U101

