



QUICK REFERENCE

QUANTUM

1) DSC DISTRESS (MMSI must be programmed)

- a. **LIFT DISTRESS COVER**
- b. **PRESS ROUND DISTRESS KEY**
- c. **PRESS AND HOLD DISTRESS KEY UNTIL ALARM SOUNDS.**

2) VOLUME/POWER

- a. Press and hold to turn power on or off.
- b. Turn to adjust speaker volume when SQL off.

3) SQUELCH

Adjust to the point where random noise stops from the speaker.
Further adjustment will cause a loss in reception of wanted signals.

4) ROTARY CHANNEL KNOB

- a. Used to select channels.
- b. When in PA mode adjusts PA volume.

5) Channel 16/9

Press once to select CH16. For CH9 press and hold.

6) WX “NOAA WEATHER”

Press [WX] key to select NOAA weather channels.
For weather alert, select channel into scan memory.

7) A/B

- a. To program press and hold [A/B] key and turn rotary knob to desired channel, release [A/B] key. Repeat this procedure for other channel.
- b. After step a. is performed, the [A/B] key will select the two programmed channels and the last selected channel.

8) DW(IC)

- a. Select a channel to be dual watched to CH16 and press the [DW] key.
- b. When connected to optional RAM mic, press and hold to select the intercom function between Radio and the RAM mic.

9) H/L (NAV)

- a. Switches transmitter power from 1 to 25 watt output.
- b. When connected to GPS, press and hold to show the NAV GPS Data, Time, vessel's SOG (Speed Over Ground), and COG (Course Over Ground).

10) SCAN

- a. Starts and stops scanning on the programmed channels.
- b. To show channels in scan memory hold [SCAN] key and turn rotary knob.

11) MEM

- a. Add/remove channels into/from memory for scanning, select channel with rotary knob, then press the [MEM] key. “MEM” will appear on LCD. Press the [MEM] key again to remove the channel from memory. “MEM” will disappear from LCD.
- b. Press and hold to lock out the front panel keys and rotary knob.
Press and hold again to unlock the front panel keys and rotary knob.

12) PA/FOG

- a. First press selects PA. Volume is adjusted with rotary knob.
Listen back volume is adjusted with VOL control.
- b. Second press selects menu for FOG1 thru FOG4, HORN, SIREN, AGROUND, and ANCHOR.

13) CALL/SET(MENU)

- a. Press to select DSC call functions. Individual Directory and All Ships Call.
- b. Press and hold to select Radio Setup Menu or DSC Setup Menu.

14) CLEAR VOICE NOISE CANCELING MIC

Speak 1 inch away from the hole in the top front of mic.